





Tel-Link Radio Modems

RS422 & RS485 Serial Connections

4-Wire RS422 Serial Connections

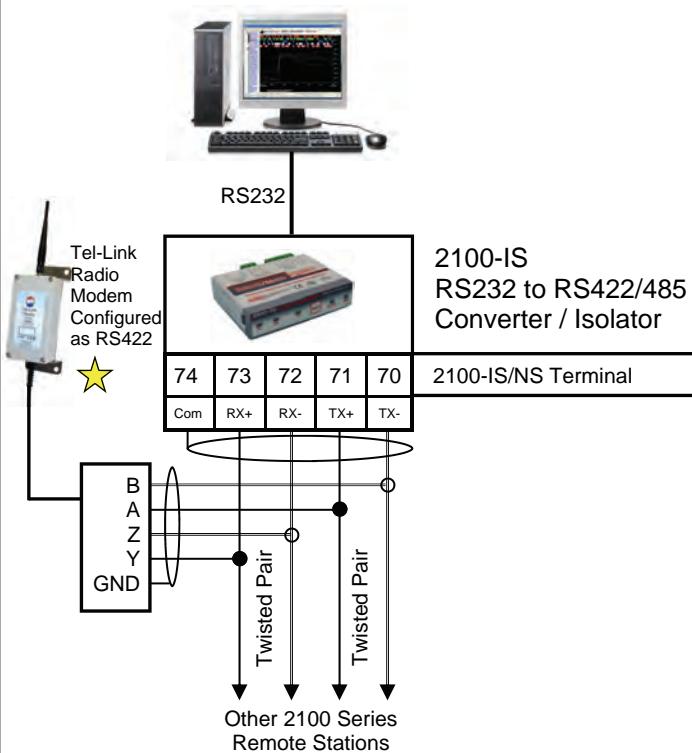

2-Wire RS485 Serial Connections

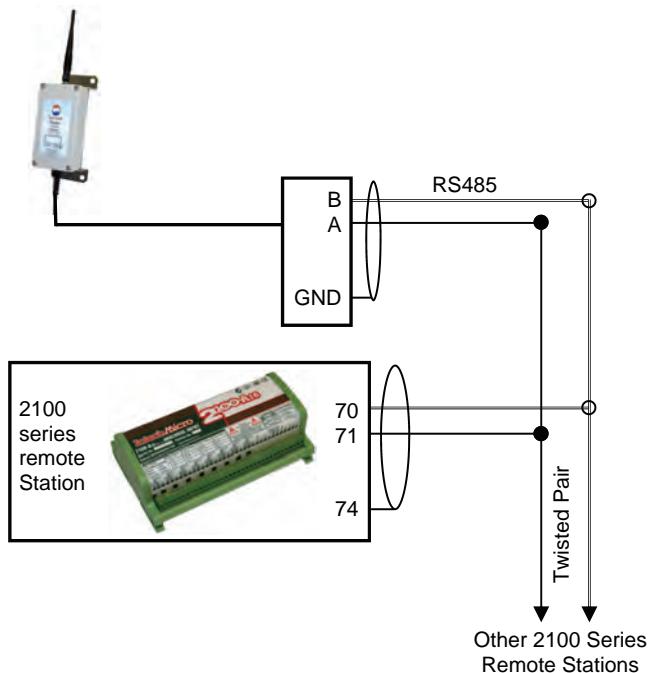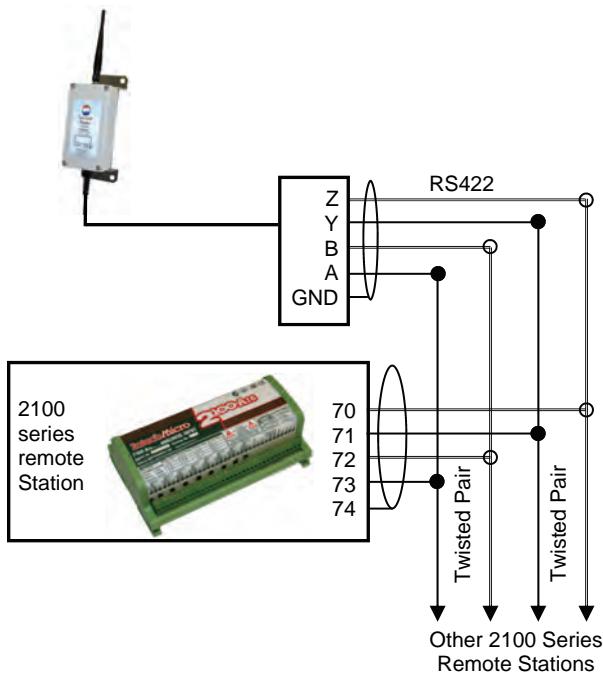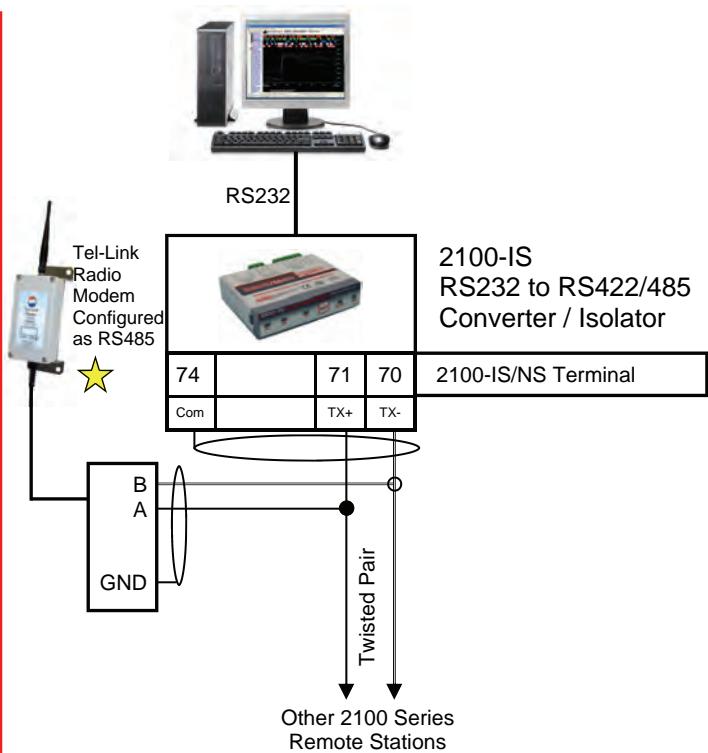

Refer to the Intech comms hook-up guide for all other comms connections.

★ These Radios are able to communicate with remote radios configured in either RS422 or RS485, via the on Board, labeled slide switch, under the front cover.