## **Example Connection Diagram for WS-CL Wind Speed** 4~20mA Output - Loop Powered Red Wire from WS-CL Indicator 24Vdc Power Supply

Always wire RED from WS-CL to + Positive. Test with Blue or Green wire to determine which is - Negative.