

TruTrack Data Logger

Thermocouple Temperature Logger Model Pt-LCD

Two Channel High Resolution (16 bit) Temperature Data Logger with LCD Display.

The Pt-LCD is a high resolution (16 bit), handheld temperature data logger with a liquid crystal display. The logger connects to an external RTD probe and also has an internal temperature sensor for convenient logging of ambient temperature if desired.

The logger accepts Pt-100, Pt-500 and Pt-1000 probes. The display shows the RTD temperature, logger internal temperature, battery voltage, logger and alarm status. This logger is designed for indoor use (IP 40) but can be supplied with a TruTrack Seahorse Logger Enclosure for outdoor use.

Features:

- 6 pin Connector Socket can be used to connect to 2 wire, 3 wire and 4 wire Pt100, Pt500 and Pt1000 temperature probes.
- Massive storage capacity of over 500,000 samples!
- LCD display shows logger status and alarm status continuously.
- Easy to use LCD menu options.
- LCD display can be set to show; internal temperature, RTD temperature, battery voltage, number of logged samples and alarm status.
- Temperature can be set to any combination of Point, Average, Maximum & Minimum readings.
- The battery voltage of the logger can be logged if required.
- The logger can be run in either "Stop when memory is Full", "Loop Around" mode or set to stop at a future time.
- The logger can be started "Now" or started at a given time in the future.




Ordering Information: Pt-LCD RTD (Pt100, Pt500 & Pt1000) LCD data logger

Please Note: The Pt-LCD data logger is not supplied with an RTD probe. These can be ordered separately from Intech Instruments Ltd if required.

Note: The Pt-LCD is only compatible with OmniLog version 1.57 or greater.

Pt-LCD Dimensions:

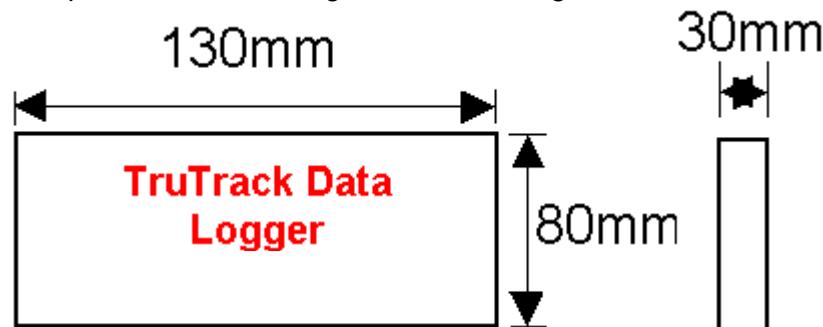

Putting into service:

1. From the SWDL-DLC OmniLog software and Download cable kit, **first install the OmniLog software**, then plug the Download cable into a spare USB or serial port on your PC (depending on which type you have). The OmniLog has an excellent "Help". This will need to be read to enable successful operation of the OmniLog Data Management Program and gain familiarisation of the many advanced features available.
2. Connect the TruTrack Logger. Under healthy circumstances, a "Logger Control" screen will load. If the "Logger Control" screen does not load, click on the button labelled "Connect to a Logger for the first time". The OmniLog will run a test on the serial ports and advise if the port the logger is connected to is not available, in which case, plug the logger into an available port. (Refer to "Help" for further assistance.)
3. On the "Logger Control" screen, click on "Channel and Probe Setup" button, and check the Battery Condition, plus other configurations if connecting to the pH-HR or mV-HR loggers.

Now click on the "Start Logger" tab for the final configurations, before putting the logger into service.

Specifications:

RTD Input: RTD Sensor Connector Hirose Electronics 6 pin HR30-6P-6P Connector Socket (shown on left below)


2 wire RTD connection A to Pin4, B to Pin2, Pin2 to Pin3, Pin4 to Pin5

3 wire RTD connection A to Pin4, B to Pin2, B to Pin3, Pin4 to Pin5

4 wire RTD connection A to Pin4, A to Pin5, B to Pin2, B to Pin3



HR30-6P-6P

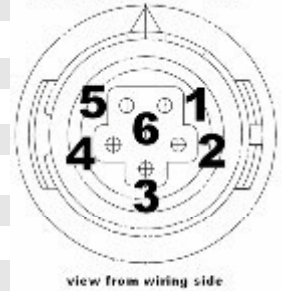

Logger Accuracy	Type	at Min Temp	at 0°C	at Max Temp
	Pt100	±1.0°C	±0.5°C	±1.0°C
	Pt500	±1.0°C	±0.5°C	±1.0°C
	Pt1000	±2.0°C	±1.0°C	±1.0°C

RTD probe accuracy depends on the type used

Temperature Coefficient ±0.1% per °C of logger temperature

Temperature Range	Type	Min Temp	Max Temp
	Pt100	-200°C	600°C
	Pt500	-200°C	600°C
	Pt1000	-200°C	600°C

Resolution 0.1°C

Internal Temperature: Sensor Type Thermister

Linear accuracy over range ±0.3°C (0°C to 70°C)

Repeatability ±0.1°C

Long term stability ±0.1°C

Logger: Working Temperature -20°C to +70°C

Storage Temperature -30°C to +70°C

Sampling Rate 1 second minimum, 10 hours maximum; in 1 second intervals

Storage capacity 522,240 samples logging RTD only

362 days with 1 min logging interval

4.9 years with 5 min logging interval

Alarms Two independent Alarms

Triggered on any combination of six user configurable Alarm Conditions

Both alarms can be configured to send SMS messages if connected to a cell modem

Two Open Collector Alarm Outputs

Alarms can be visually checked on the LCD Display or by using the OmniLog Software

Start modes Start immediately; Start on date/time; Start on Condition (eg temperature >20°C); Start on trigger (push button on logger)

Stop modes Stop when memory is full; Stop on date/time; Loop around (continues logging)

Logging modes Each channel can be set to log any combination of:

- Point readings - Average reading

- Maximum reading - Minimum reading

Battery One to Five year life depending on usage

User Replaceable; Two 3.6 volts Lithium AA cells

The data is retained in the case of battery failure

Battery Status Monitor on LCD display and in OmniLog software

Download time 9 minutes, 30 seconds for Full Logger

Case material ABS Plastic

IP Rating 40

Weight 185g

Size 130mm x 80mm x 30mm

Communication Connector The Pt-LCD has a 8 pin Mini-DIN female socket

Pinout Pin 1 Common

Pin 2 RS232 RX (out of logger)

Pin 3 RS232 TX (into logger)


Pin 4 RS232 CTS (out of logger)

Pin 5 RS232 RTS (into logger)

Pin 6 Alarm 1 Open Collector Output

Pin 6 Alarm 2 Open Collector Output

Pin 8 Power 9 to 16V dc

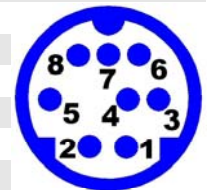

A DLC8USB [USB] or DLC8 [RS232] download cable is required to connect the Pt-LCD to a computer.

Product Liability. This information describes our products. It does not constitute guaranteed properties and is not intended to affirm the suitability of a product for a particular application. Due to ongoing research and development, designs, specifications, and documentation are subject to change without notification. Regrettably, omissions and exceptions cannot be completely ruled out. No liability will be accepted for errors, omissions or amendments to this specification. Technical data are always specified by their average values and are based on Standard Calibration Units, unless otherwise specified. Each product is subject to the 'Conditions of Sale'.

Warning: These products are not designed for use in, and should not be used for patient connected applications. In any critical installation an independent fail-safe back-up system must always be implemented.

Liquid Crystal Display Operation:

The Pt-LCD displays logger status and alarm status continuously and can be set to show the RTD temperature, the internal logger temperature, the battery voltage and the number of logged samples.

Logger status is shown as:

- **Running**
- **Stopped**
- **Waiting** (Waiting for “Start on Condition”)
- **Waiting Trigger** (Waiting for “Start on Trigger”)

If the logger is waiting for “Start on Trigger” it can be started in the field from the Menu provided on the display.

If an Alarm has been triggered the display will show

- **Alarm 1**
- **Alarm 2**

If both Alarms are triggered “**Alarm**” will be displayed continuously and “**1**” and “**2**” will flash consecutively.

Low Batt will be displayed if the internal batteries require replacement.

Pt-LCD Menu Options:

Pressing the **Enter** button on the front panel of the Pt-LCD activates the Menu Display. The **Down Arrow** can then be used to scroll down through the various Menu Options. When the required menu option is displayed, press **Enter** to select this option.

Menu Options on the Pt-LCD are:

- Channel 1 (Display RTD Temperature)
- Channel 2 (Display Internal Temperature)
- Channel 5 (Display Battery Voltage)
- Samples (Display number of samples logged)
- Trigger (If logger is waiting for Start on Trigger)
- Alarm 1 (Reset/Trigger) Trigger is used to test
- Alarm 2 (Reset/Trigger) the Alarms
- °C / °F toggle

The display will update at 1 second intervals for 1 minute after any button is pushed. It will then slow down to 10 second display updates (this is a power saving feature).



