

INTECH Micro 2300-AO8I



8 Channel mA Output Station

Overview.

The Intech Micro 2300 Series is a system of modular I/O Remote Stations, that add an even lower cost option to Intech's already extensive intelligent I/O Remote Station family, which connect automatically to the Intech MicroScan V5 logging plus SCADA software package.

The 2300 Series I/O stations are made up of stand-alone Digital and Analogue—Input/Output stations. Communications between the computer running the MicroScan V5 SCADA software and the 2300 Series stations is RS485 (1 pair cable) multi drop as standard, with an option for Ethernet TCP/IP.

A 32bit ARM CPU is used in the 2300 Series stations to provide high speed data processing and fast communications turn around times. All 2300 Series stations have been equipped with status LED's which are used to indicate the status of the Inputs or Outputs. This visual indication assists with fault finding and diagnostics.

All the I/O stations clip directly onto an industry standard DIN rail. All stations have a minimum isolation of 1000Vac rms between the field and logic.

Installation Guide.

When connecting to MicroScan V5 SCADA software.

2300-AO8I Installation Guide Index.

Commissioning.

Description, Ordering and Specifications. Features. Page 3 Description and Ordering Information. Page 3 Factory Configurations. Page 3 I/O Expansion. Page 3 Specifications. Page 4 Page 5 Dimensions. Status Indicators. Page 5 Station ID Tables. Page 6/7 Dip Switch Settings. Page 7 **Connections and Comms Wiring.** Page 8 Connection Example Diagram. Power and RS485 Comms Wiring. Page 8 Page 8 Station Number Programming. MODBUS Applications. Page 8 Computer to 2300 Series Comms Connections - 2400-IS: Page 9 Computer to 2300 Series Comms Connections - 2100-IS: Page 10 Computer to 2300 Series Comms Connections - 2300-NET: Page 11 Wiring & Installation. Mounting. Page 12 Power Supply Wiring. Page 12 RS485 Comms Signal Cabling. Page 12

Page 12

INTECH Micro 2300-AO8I

8 Current Outputs.

Features.

- 8 Current Outputs (4~20mA or 0~20mA).
- Modbus RTU, RS485.
- Easy Programming Via MicroScan Maps.
- Plug-in Connectors Makes Replacement Easy.
- Station ID Number set via Dip switches.
- Programming Information Retained on Power Down.
- Compact DIN Rail Mount Enclosure.
- 24Vdc Power Supply.
- Easy to Install.



Intech Micro 2300 Series I/O stations:

2300-A8II - 8 Isolated Current Inputs.
2300-A8VI - 8 Isolated Voltage Inputs.
2300-Tc8 - 8 Isolated Thermocouple Inputs.
2300-RTD6 - 6 RTD Inputs.
2300-MULTI - 2 RTD, 2 AI, 1 AO, 4 DI, 2 DO.
2300-D16 - 16 Digital Inputs.
2300-RO4 - 4 Relay Outputs.

2300-AO8I - 8 Current Outputs.
2300-NET - Isolated Ethernet TCP/IP to RS485.

Description.

The 2300-AO8I remote station has 8 current Outputs. The standard setting for the station is 4~20mA output current (0~20mA, 12 bits).

Ordering Information.

2300-AO8I 8 Current Outputs. RS485 COMMS, Modbus RTU. 24Vdc Power Supply.

PSW-10-F Instrument Quality 24Vdc, 1A Power Supply. Input Power Supply: 100~264Vac.

Factory Configurations.

The Intech Micro 2300 Series I/O Remote Stations are factory configured to connect directly to MicroScan V5 SCADA software. Only the Station ID number needs to be set via the easily accessible dip switches. No other station settings are required, making the 2300 Series one of the most friendly available. Simply setup the Station ID number on each 2300 station, install and the MicroScan V5 SCADA software will scan the data hi-way and automatically locate each station. All stations will be displayed on a visual map.

I/O Expansion.

fault operating conditions.

Expansion is made easy by simply installing another station with a unique station ID number and instructing MicroScan to find a new station. MicroScan will support up to 127 stations. Although RS485 data hi-way is rated for 1200 metres, it is recommended to use an RS485 booster every 500 metres or between each set of 16 stations. Due to the large variation in site conditions, this advice is based on typical site conditions and does not guarantee no



CAUTION: Dangerous voltages may be present. The 2300-AO8I has no user serviceable parts.

Protective enclosure only to be opened by qualified personnel.

Remove ALL power sources before removing protective cover.



Quality Assurance Programme.

The modern technology and strict procedures of the ISO9001 Quality Assurance Programme applied during design, development, production and final inspection grant long term reliability of the instrument. This instrument has been designed and built to comply with EMC and Safety Standards requirements.

2300-AO8I Specifications.

Current Outputs:	-Output Points	8			
	-Output Current	0(4) ~ 20mA			
	-Output Resistance	1000 ohms max. @ 24Vdc			
	-Resolution	12 bits			
	-Drift	50ppm/°C			
	-Accuracy	0.05% of span			
	-Isolation	1500Vrms between field and logic			
Connectors:	-Logic Power and Comms	4 Pin plug-in connector on side of station			
	-Outputs	18 Way screw plug-in connector on top of station			
Comms:	-Protocols	RS485, Modbus RTU			
	-Baud Rate	9600			
	-Format	8 bit, No Parity, 1 Stop			
Power Supply:	-Logic Supply Voltage	12~24Vdc			
	-Logic Supply Current	32mA @ 12V / 18mA @ 24V			
	-Field Supply Voltage	24Vdc			
	-Field Supply Current	175mA			
Safety and EMC Cor	npliances:				
EMC Compliance	89/336/EEC and Low Voltage	Equipment Directive 73/23/EEC			
Safety Compliance	IEC 950				
General Specificatio	ns: (Unless otherwise stated i	n other input specifications).			
Operating Temperatu	re	-10~50°C			
Storage Temperature		-40~85°C			
Operating Humidity		Up to 95% non condensing			
Housing	-Dimensions	L=97.5, W=22.6, H=109mm			
	-Mounting	35mm Symmetrical Mounting Rail.			
Note 1. Contact INTECH INSTRUMENTS for more detailed programming information.					

Product Liability. This information describes our products. It does not constitute guaranteed properties and is not intended to affirm the suitability of a product for a particular application. Due to ongoing research and development, designs, specifications, and documentation are subject to change without notification. Regrettably, omissions and exceptions cannot be completely ruled out. No liability will be accepted for errors, omissions or amendments to this specification. Technical data are always specified by their average values and are based on Standard Calibration Units at 25C, unless otherwise specified. Each product is subject to the 'Conditions of Sale'.


Warning: These products are not designed for use in, and should not be used for patient connected applications. In any critical installation an independent fail-safe back-up system must always be implemented.




2300-AO8I Dimensions.

The 2300-AO8I enclosure is shown below. The station clips directly onto an industry standard DIN rail. Field wiring is on the top of the station via a separate plug in connector. The station power and RS485 communications wiring are on a separate plug in connector on the side of the housing.

Allow at least 25mm on front and below the station to accommodate the wiring. Ensure that enough space is available above and below the station for good ventilation.

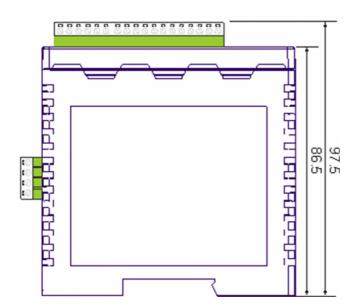

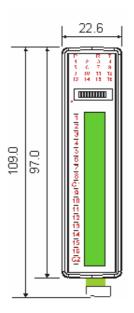

Status Indicators.

Power: Flashes to indicate the CPU is running.


RS485 Rx: Flashes to indicate the unit has received a valid Modbus message.

RS485 Tx: Flashes to indicate the unit has sent a Modbus message.

Output Status: "ON" when the output is zero.

"OFF" when the output is between zero and full scale.

"Flashing" when the output is at full scale.

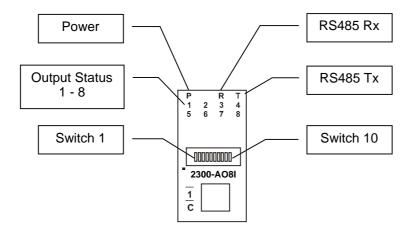

Station ID Table.

The following table assists with the setting up of DIP switches for the required Station ID number:

STATION ID			OIP SWI	TCH SE	TTINGS	5	
	SW1	SW2	SW3	SW4	SW5	SW6	SW7
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF
3	ON	ON	OFF	OFF	OFF	OFF	OFF
4	OFF	OFF	ON	OFF	OFF	OFF	OFF
5	ON	OFF	ON	OFF	OFF	OFF	OFF
6	OFF	ON	ON	OFF	OFF	OFF	OFF
7	ON	ON	ON	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	ON	OFF	OFF	OFF
9	ON	OFF	OFF	ON	OFF	OFF	OFF
10	OFF	ON	OFF	ON	OFF	OFF	OFF
11	ON	ON	OFF	ON	OFF	OFF	OFF
12	OFF	OFF	ON	ON	OFF	OFF	OFF
13	ON	OFF	ON	ON	OFF	OFF	OFF
14	OFF	ON	ON	ON	OFF	OFF	OFF
15	ON	ON	ON	ON	OFF	OFF	OFF
16	OFF	OFF	OFF	OFF	ON	OFF	OFF
17	ON	OFF	OFF	OFF	ON	OFF	OFF
18	OFF	ON	OFF	OFF	ON	OFF	OFF
19	ON	ON	OFF	OFF	ON	OFF	OFF
20	OFF	OFF	ON	OFF	ON	OFF	OFF
21	ON	OFF	ON	OFF	ON	OFF	OFF
22	OFF	ON	ON	OFF	ON	OFF	OFF
23	ON	ON	ON	OFF	ON	OFF	OFF
24	OFF	OFF	OFF	ON	ON	OFF	OFF
25	ON	OFF	OFF	ON	ON	OFF	OFF
26	OFF	ON	OFF	ON	ON	OFF	OFF
27	ON	ON	OFF	ON	ON	OFF	OFF
28	OFF	OFF	ON	ON	ON	OFF	OFF
29	ON	OFF	ON	ON	ON	OFF	OFF
30	OFF	ON	ON	ON	ON	OFF	OFF
31	ON	ON	ON	ON	ON	OFF	OFF
32	OFF	OFF	OFF	OFF	OFF	ON	OFF
33	ON	OFF	OFF	OFF	OFF	ON	OFF
34	OFF	ON	OFF	OFF	OFF	ON	OFF
35	ON	ON	OFF	OFF	OFF	ON	OFF
36	OFF	OFF	ON	OFF	OFF	ON	OFF
37	ON	OFF	ON	OFF	OFF	ON	OFF
38	OFF	ON	ON	OFF	OFF	ON	OFF
39	ON	ON	ON	OFF	OFF	ON	OFF
40	OFF	OFF	OFF	ON	OFF	ON	OFF
41	ON	OFF	OFF	ON	OFF	ON	OFF
42	OFF	ON	OFF	ON	OFF	ON	OFF
43	ON	ON	OFF	ON	OFF	ON	OFF
44	OFF	OFF	ON	ON	OFF	ON	OFF
45	ON	OFF	ON	ON	OFF	ON	OFF
46	OFF	ON	ON	ON	OFF	ON	OFF
47	ON	ON	ON	ON	OFF	ON	OFF
48	OFF	OFF	OFF	OFF	ON	ON	OFF
49	ON	OFF	OFF	OFF	ON	ON	OFF
50	OFF	ON	OFF	OFF	ON	ON	OFF

51 ON ON OFF OFF ON OPF ON OPF ON OPF ON OPF ON OPF OPF ON OPF OPF ON OPF ON ON OPF OPF OPF ON ON OPF OPF ON ON OPF OPF OPF ON ON OPF OPF	STATION ID		Г	OIP SWI	TCH SE	TTINGS	5	
51 ON ON OFF OFF ON OPF ON OPF ON OPF ON OPF ON OPF OPF ON OPF OPF ON OPF ON ON OPF OPF OPF ON ON OPF OPF ON ON OPF OPF OPF ON ON OPF OPF								
52 OFF OFF ON OFF ON ON OFF 53 ON OFF ON OFF ON ON OFF 54 OFF ON ON OFF ON ON OFF 54 OFF ON ON ON ON ON ON OFF 55 ON OPF OPF		SW1	SW2	SW3	SW4	SW5	SW6	SW7
53 ON OFF ON OFF ON ON OPF ON ON OPF ON ON OPF ON ON ON OPF ON	51	ON	ON	OFF	OFF	ON	ON	OFF
54 OFF ON ON OFF ON ON OFF 55 ON ON ON OFF ON ON OFF 56 OFF OFF OFF ON ON ON OFF 57 ON OFF OFF ON ON ON ON OFF 57 ON OFF OFF ON	52	OFF	OFF	ON	OFF	ON	ON	OFF
55 ON ON ON OFF ON ON OFF OFF ON ON OPF OFF ON ON OPF ON ON OPF ON ON OPF ON ON ON OPF ON ON ON OPF ON ON ON ON OPF ON	53	ON	OFF	ON	OFF	ON	ON	OFF
56 OFF OFF OFF ON ON ON OFF OFF ON ON ON OFF ON ON ON OFF ON ON ON OPF ON	54	OFF	ON	ON	OFF	ON	ON	OFF
57 ON OFF OFF ON ON ON OFF ON ON OPF ON ON ON OPF ON ON ON OPF ON ON ON ON OPF ON ON ON ON ON ON OPF OPF	55	ON	ON	ON	OFF	ON	ON	OFF
58 OFF ON OFF ON ON OPF ON ON OPF ON ON OPF ON ON ON OPF ON ON ON OPF ON ON ON OPF OPP	56	OFF	OFF	OFF	ON	ON	ON	OFF
59 ON ON OFF ON ON ON OFF ON ON ON ON OFF ON	57	ON	OFF	OFF	ON	ON	ON	OFF
60	58	OFF	ON	OFF	ON	ON	ON	OFF
61 ON OFF ON ON ON ON OFF OFF ON OFF OFF O	59	ON	ON	OFF	ON	ON	ON	OFF
62 OFF ON ON ON ON ON OR	60	OFF	OFF	ON	ON	ON	ON	OFF
63 ON ON ON ON ON OFF OFF OFF OFF OFF ON OFF OFF ON OFF ON OFF ON ON ON OFF ON ON OFF ON OFF ON	61	ON	OFF	ON	ON	ON	ON	OFF
64 OFF OFF OFF OFF OFF ON OFF ON OFF OFF ON	62	OFF	ON	ON	ON	ON	ON	OFF
65 ON OFF OFF OFF OFF ON OFF ON OFF OFF OFF ON ON OFF ON OFF ON OFF ON	63	ON	ON	ON	ON	ON	ON	OFF
66 OFF ON OFF OFF OFF OFF ON 67 ON ON OFF OFF OFF OFF ON 68 OFF OFF ON OFF OFF OFF ON 69 ON OFF ON OFF OFF OFF ON 70 OFF ON ON OFF OFF OFF ON 71 ON ON ON OFF OFF OFF ON 72 OFF OFF OFF ON OFF OFF ON 73 ON OFF OFF ON OFF OFF ON 74 OFF ON OFF ON OFF OFF ON 75 ON ON OFF OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON	64	OFF	OFF	OFF	OFF	OFF	OFF	ON
67 ON ON OFF OFF OFF ON 68 OFF OFF ON OFF OFF OFF ON 69 ON OFF ON OFF OFF OFF ON 70 OFF ON ON OFF OFF OFF ON 71 ON ON ON OFF OFF OFF ON 72 OFF OFF OFF ON OFF OFF ON 73 ON OFF OFF ON OFF OFF ON 74 OFF ON OFF ON OFF OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF ON 80 OFF OFF OFF OFF ON 81 ON OFF OFF OFF ON 82 OFF ON OFF OFF ON 83 ON ON OFF OFF ON 84 OFF OFF ON OFF OFF ON 85 ON ON OFF OFF ON 86 OFF OFF ON OFF ON 87 ON ON ON OFF ON 88 OFF OFF ON OFF ON 88 OFF OFF ON OFF ON 89 ON ON ON OFF ON 89 ON OFF OFF ON 89 ON OFF OFF ON 80 OFF OFF ON 80 OFF OFF ON OFF ON 80 OFF OFF ON OFF ON 81 ON OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF OFF ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 88 OFF OFF OFF ON ON OFF ON	65	ON	OFF	OFF	OFF	OFF	OFF	ON
68 OFF OFF ON OFF OFF OFF ON 69 ON OFF ON OFF OFF OFF ON 70 OFF ON ON OFF OFF OFF ON 71 ON ON ON OFF OFF OFF ON 72 OFF OFF OFF ON OFF OFF ON 73 ON OFF OFF ON OFF OFF ON 74 OFF ON OFF OFF ON OFF OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON	66	OFF	ON	OFF	OFF	OFF	OFF	ON
69 ON OFF ON OFF OFF OFF ON 70 OFF ON ON OFF OFF OFF ON 71 ON ON ON OFF OFF ON OFF ON 72 OFF OFF OFF ON OFF OFF ON 73 ON OFF OFF ON OFF OFF ON 74 OFF ON OFF ON OFF OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON OFF OFF ON OFF ON <	67	ON	ON	OFF	OFF	OFF	OFF	ON
70 OFF ON ON OFF OFF OFF ON 71 ON ON ON OFF OFF OFF ON 72 OFF OFF OFF ON OFF ON OFF ON 73 ON OFF OFF ON OFF OFF ON 74 OFF ON OFF ON OFF OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON OFF OFF ON OFF ON 80 OFF OFF OFF ON OFF ON OFF	68	OFF	OFF	ON	OFF	OFF	OFF	ON
71 ON ON ON OFF OFF ON	69	ON	OFF	ON	OFF	OFF	OFF	ON
72 OFF OFF OFF ON OFF OFF ON 73 ON OFF OFF ON OFF OFF ON 74 OFF ON OFF ON OFF OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF ON 80 OFF OFF OFF ON OFF ON 81 ON OFF OFF ON OFF ON 82 OFF ON OFF OFF ON OFF ON 83 ON ON	70	OFF	ON	ON	OFF	OFF	OFF	ON
73 ON OFF OFF ON OFF ON 74 OFF ON OFF ON OFF OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF ON 80 OFF OFF OFF ON OFF ON 81 ON OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF	71	ON	ON	ON	OFF	OFF	OFF	ON
74 OFF ON OFF ON OFF ON 75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF ON 80 OFF OFF OFF ON OFF ON 81 ON OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF <	72	OFF	OFF	OFF	ON	OFF	OFF	ON
75 ON ON OFF ON OFF OFF ON 76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF ON 80 OFF OFF OFF ON OFF ON 81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 <	73	ON	OFF	OFF	ON	OFF	OFF	ON
76 OFF OFF ON ON OFF OFF ON 77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF ON 80 OFF OFF OFF ON OFF ON 81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 <	74	OFF	ON	OFF	ON	OFF	OFF	ON
77 ON OFF ON ON OFF OFF ON 78 OFF ON ON ON ON OFF OFF ON 79 ON ON ON ON OFF OFF OFF ON 80 OFF OFF OFF ON OFF ON 81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF OF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON <td< td=""><td>75</td><td>ON</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td></td<>	75	ON	ON	OFF	ON	OFF	OFF	ON
78 OFF ON ON ON OFF OFF ON 79 ON ON ON OFF OFF ON OFF ON 80 OFF OFF OFF OFF ON OFF ON 81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON 83 ON ON OFF OF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 <t< td=""><td>76</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td></t<>	76	OFF	OFF	ON	ON	OFF	OFF	ON
79 ON ON ON OFF OFF ON 80 OFF OFF OFF OFF ON OFF ON 81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	77	ON	OFF	ON	ON	OFF	OFF	ON
80 OFF OFF OFF OFF ON OFF ON 81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	78	OFF	ON	ON	ON	OFF	OFF	ON
81 ON OFF OFF OFF ON OFF ON 82 OFF ON OFF ON OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	79	ON	ON	ON	ON	OFF	OFF	ON
82 OFF ON OFF ON OFF ON 83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	80	OFF	OFF	OFF	OFF	ON	OFF	ON
83 ON ON OFF OFF ON OFF ON 84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	81	ON	OFF	OFF	OFF	ON	OFF	ON
84 OFF OFF ON OFF ON OFF ON 85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	82	OFF	ON	OFF	OFF	ON	OFF	ON
85 ON OFF ON OFF ON OFF ON 86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	83	ON	ON	OFF	OFF	ON	OFF	ON
86 OFF ON ON OFF ON OFF ON 87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	84	OFF	OFF	ON	OFF	ON	OFF	ON
87 ON ON ON OFF ON OFF ON 88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	85	ON	OFF	ON	OFF	ON	OFF	ON
88 OFF OFF OFF ON ON OFF ON 89 ON OFF OFF ON ON OFF ON	86	OFF	ON	ON	OFF	ON	OFF	ON
89 ON OFF OFF ON ON OFF ON	87	ON	ON	ON	OFF	ON	OFF	
	88	OFF	OFF	OFF	ON	ON	OFF	ON
ON OFF ON OFF ON ON OFF ON	89	ON	OFF	OFF	ON	ON	OFF	ON
OFF ON OFF ON ON OFF ON	90	OFF	ON	OFF	ON	ON	OFF	ON
91 ON ON OFF ON ON OFF ON	91	ON	ON	OFF	ON	ON	OFF	ON
92 OFF OFF ON ON ON OFF ON	92	OFF	OFF	ON	ON	ON	OFF	ON
93 ON OFF ON ON ON OFF ON	93	ON	OFF	ON	ON	ON	OFF	ON
94 OFF ON ON ON OFF ON	94	OFF	ON	ON	ON	ON	OFF	ON
95 ON ON ON ON OFF ON	95	ON	ON	ON	ON	ON	OFF	ON
96 OFF OFF OFF OFF ON ON	96	OFF	OFF	OFF	OFF	OFF	ON	ON
97 ON OFF OFF OFF ON ON	97	ON	OFF	OFF	OFF	OFF	ON	ON
98 OFF ON OFF OFF ON ON	98	OFF	ON	OFF	OFF	OFF	ON	ON
99 ON ON OFF OFF OF ON ON	99	ON	ON		OFF	OFF	ON	ON
100 OFF OFF ON OFF OFF ON ON	100	OFF	OFF	ON	OFF	OFF	ON	ON

Table continued next page >>


STATION ID	DIP SWITCH SETTINGS						
	SW1	SW2	SW3	SW4	SW5	SW6	SW7
101	ON	OFF	ON	OFF	OFF	ON	ON
102	OFF	ON	ON	OFF	OFF	ON	ON
103	ON	ON	ON	OFF	OFF	ON	ON
104	OFF	OFF	OFF	ON	OFF	ON	ON
105	ON	OFF	OFF	ON	OFF	ON	ON
106	OFF	ON	OFF	ON	OFF	ON	ON
107	ON	ON	OFF	ON	OFF	ON	ON
108	OFF	OFF	ON	ON	OFF	ON	ON
109	ON	OFF	ON	ON	OFF	ON	ON
110	OFF	ON	ON	ON	OFF	ON	ON
111	ON	ON	ON	ON	OFF	ON	ON
112	OFF	OFF	OFF	OFF	ON	ON	ON
113	ON	OFF	OFF	OFF	ON	ON	ON
114	OFF	ON	OFF	OFF	ON	ON	ON
115	ON	ON	OFF	OFF	ON	ON	ON
116	OFF	OFF	ON	OFF	ON	ON	ON
117	ON	OFF	ON	OFF	ON	ON	ON
118	OFF	ON	ON	OFF	ON	ON	ON
119	ON	ON	ON	OFF	ON	ON	ON
120	OFF	OFF	OFF	ON	ON	ON	ON
121	ON	OFF	OFF	ON	ON	ON	ON
122	OFF	ON	OFF	ON	ON	ON	ON
123	ON	ON	OFF	ON	ON	ON	ON
124	OFF	OFF	ON	ON	ON	ON	ON
125	ON	OFF	ON	ON	ON	ON	ON
126	OFF	ON	ON	ON	ON	ON	ON
127	ON	ON	ON	ON	ON	ON	ON

Dip Switch Settings.

DIP SWITCH	FUNCTION	DESCRIPTION		
1	STATION ID	+1 Station ID's from 0 to 127 are set up using switches 1 to 7		
2	STATION ID	+2 "		
3	STATION ID	+4 "		
4	STATION ID	+8 "		
5	STATION ID	+16 "		
6	STATION ID	+32 "		
7	STATION ID	+64 "		
8	OFF SET	When switched ON the outputs are scaled to accept a 4mA offset		
9	MODE	Slave (Off)		
10	BAUD RATE	Selects 9600 in OFF position (IOStudio Mode) or		
		Programmed Baud Rate in ON position (MicroScan SCADA Factory Default)		
		For more information see Page 3 of the '2300-A08I MODBUS supplementary		
		manual'.		


Connection Example Diagram.

The following diagram shows how the analogue inputs are connected to 0(4)~20mA source. All of the common terminals are internally connected together.

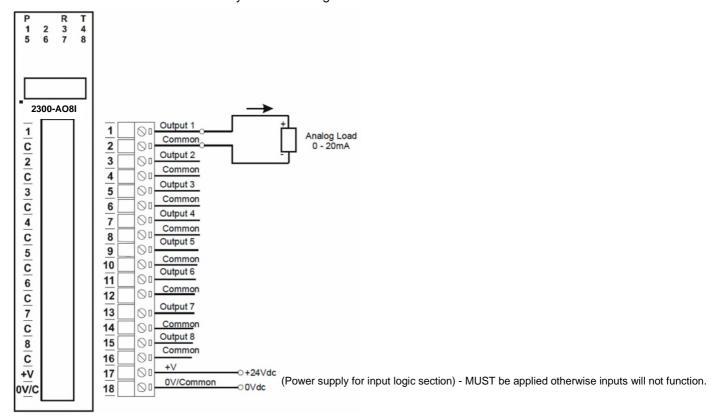

Note: Logic power input (terminals 17 & 18) range 12~24Vdc. The logic power supply input must be isolated and completely separate to the power supply that powers the 2300-AO8I on terminals 81 & 82. Failure to do so will cause the comms to stop.

Power and RS485 Comms Wiring.

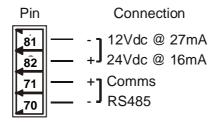

Warning: If the power/communication connections are reversed, the remote station may become faulty.

2300-AO8I Station Number Programming and Serial Number.

Important: When commissioning remote stations, you must set a unique station ID number before using the programme setup button in the MicroScan V5 SCADA Software.

- 1) Close the MicroScan V5 SCADA software down and turn the power off to the 2300 RS485 converter. Connect the new Remote Station, referring to 'Wiring and Installation' and 'Commissioning'.
- 2) Turn power back on to the 2300 RS485 converter, and start MicroScan, under Setup Tools select Add New Station.
- 3) Select 'Page and Line Settings', or 'Tag Setup' and configure as per the MicroScan help file.


Important Note:

If using the 2400-IS converter, do not connect to the computer until after the MicroScan V5 SCADA software has been installed.

MODBUS Applications:


If using the 2300-AO8I station in other applications where **MODBUS** is required, please refer to the **2300-AO8I MODBUS** supplementary manual which is available for download from the Intech website: **www.intech.co.nz**

Computer to 2300 Series Comms Connections - 2400-IS:

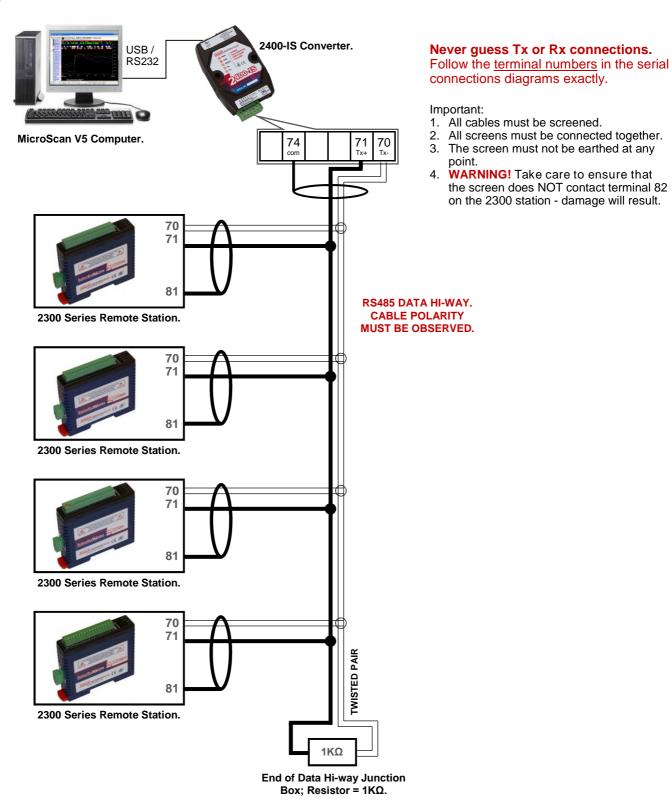

Important: The 2300-XX stations **cannot** share a data hi-way with the 2400-XX / 2100-XX stations and/or Shimaden Controllers.


Computer to 2300 Series Comms Connections - 2100-IS:

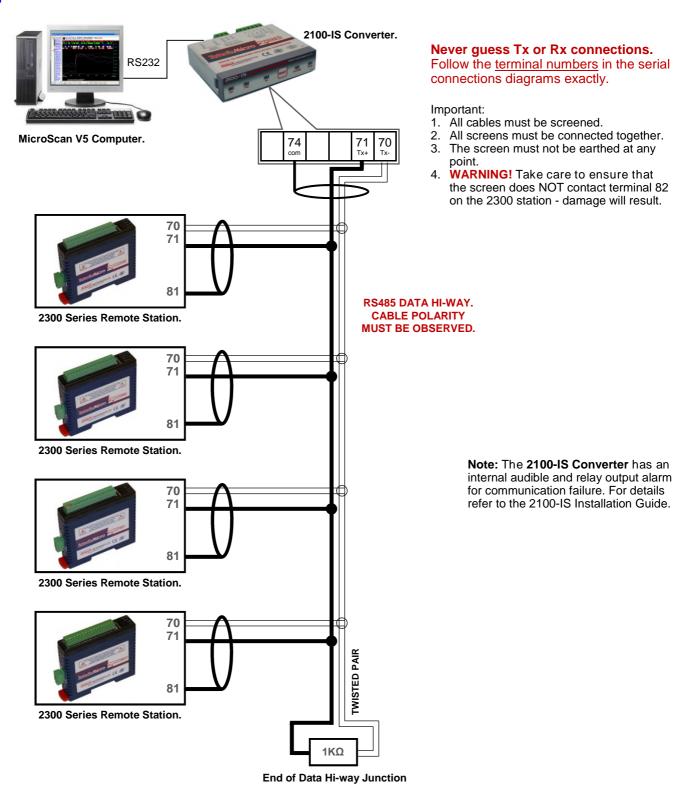

Important: The 2300-XX stations <u>cannot</u> share a data hi-way with the 2400-XX / 2100-XX stations and/or Shimaden Controllers.

Box; Resistor = $1K\Omega$.

Computer to 2300 Series Comms Connections - 2300-NET:

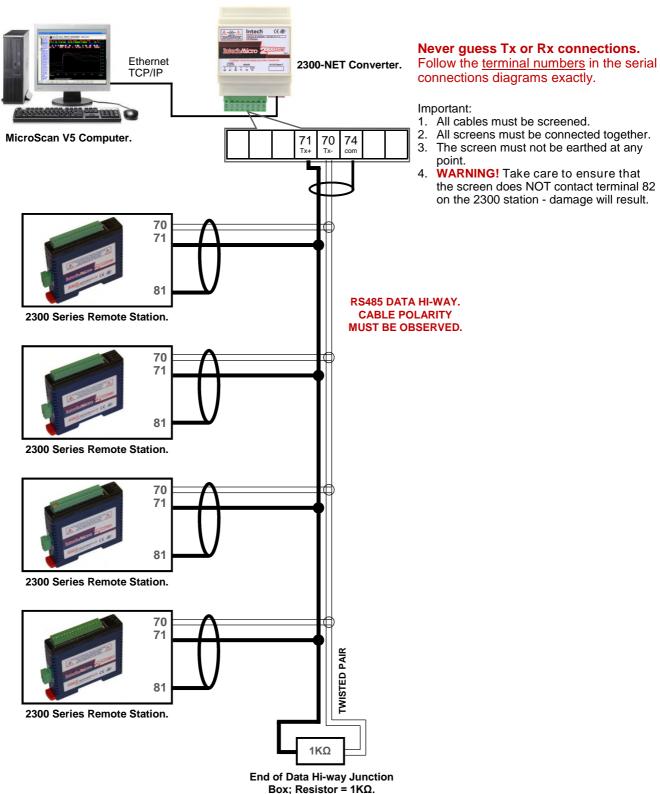

Important: The 2300-XX stations **cannot** share a data hi-way with the 2400-XX / 2100-XX stations and/or Shimaden Controllers.

2300-AO8I Wiring & Installation.

The 2300-AO8I is to be Installed and Serviced by Service Personnel Only. No Operator / User Serviceable Parts.

All power and signals must be de-energised before connecting any wiring, or altering any Jumpers or Dip Switches. Do not start the MicroScan V5 SCADA software before setting a unique station ID number. See pages 14.21-6/7. See 'Station Number Programming and Serial Number' on page 14.21-8.

Mounting.

- * Also refer to Connection Diagrams and Notes.
- 1) Mount in a clean environment in an electrical cabinet on 35mm Symmetrical mounting rail.
- 2) Draft holes must have minimum free air space of 20mm. Foreign matter must not enter or block draft holes.
- 3) Do not subject to vibration or excess temperature or humidity variations.
- 4) Do not mount in cabinets with power control equipment.
- 5) To maintain compliance with the EMC Directives the 2300-AO8I is to be mounted in a fully enclosed steel fire cabinet. The cabinet must be properly earthed, with appropriate input / output entry points and cabling.

Power Supply Wiring.

- * Also refer to Connection Diagrams and Notes "Power and RS485 Comms Wiring" on page 14.21-8.
- 1) For power supply, connect Neutral (or -Ve) to terminal 81, Phase (or +Ve) to terminal 82.

RS485 Comms Signal Cabling.

1) Use only low capacitance, twisted pair, overall screened data cable. The cable must equal or better the following specifications:

Cable Specifications.						
Conductor Size.		7/0.20mm, 24AWG				
Conductor Resistance @ 20C.		8.9Ω/100m				
Max. Working Voltage.	300Vrms					
Capacitance between wires of a pair.		50ρF/m				
Capacitance between each wire to all others bunched together.		95ρF/m				
Cross-talk between pairs:	@ 1kHz @ 100kHz	>-90dB/100m >-50dB/100m				
Characteristic Impedance.	@ 100kHz	135Ω				
Attenuation of a pair:	@ 1kHz @ 10kHz @ 100kHz @ 50kHz @ 1MHz @ 1.5MHz	0.15dB/100m 0.42dB/100m 0.8dB/100m 0.9dB/100m 1.9dB/100m 2.4dB/100m				

NOTE: All cables are to be subject during manufacture to in-process spark testing @ 4kVrms. All cables are to be tested between conductors and conductors to screen for 1min @ 1500Vrms.

- 2) Minimum cable pairs: RS485 = 1. (Plus overall screen.)
- 3) Take care not to stress or damage cables during installation.
- 4) Total length of trunk line, including spurs, is not to exceed 1200m without isolating boosters.
- 5) Terminating resistors = $1k\Omega$.
- 6) Cabling paths should avoid sources of radio frequency interferences such as fluorescent lights, variable speed motor drives, welding equipment, radio transmitters, etc.
- 7) There should be a minimum of 200mm physical separation between power cables and data cables.
- 8) Data cables should not be exposed to excessive heat or moisture, and should not be buried directly in the ground without protection.
- 9) Avoid powering a remote station or controller from the same power supply as a variable speed drive.
- 10) All unused twisted pairs should be terminated at both ends with $1k\Omega$ resistors. DO NOT ground unused pairs.
- 11) Important: The 2300-XX stations <u>cannot</u> share a data hi-way with the 2400-XX / 2100-XX stations and/or Shimaden Controllers.

Commissioning.

1) Check that all the above conditions have been met, and the wiring checked, before applying power to the 2300-AO8I.

