

■ Preface

Thank you for purchasing our product. Before you start to operate the product, please read the following precautions at first, and use the product safely and carefully.

This Quick Reference aims to summarize the Instruction Manual. For further information like supported parameters, initial/default values, and so on, please refer to the Instruction Manual (PDF format file) in "SR23/FP23 Support CD".

■ Contents

■ Safety Precautions	1
■ Precautions for Installation Site	1
■ Precautions for Wiring	1
■ External Dimensions	2
■ Panel Cutout Dimensions	2
■ Mounting.....	2
■ Rear Terminal Arrangement Diagram	2
■ Wiring Example of Open Collector Output.....	2
■ Names and Functions of Parts on Front Panel.....	3
■ Error Messages	3
■ LCD Flow Chart.....	4
■ Frequently-used Keys for LCD	4

■ Safety Precautions



Warning

The SR23 Series Digital Controller is designed for controlling temperature, humidity and other physical quantities in general industrial facilities. It must not be used in any way that may adversely affect the safety, health or working conditions of those who come into contact with the effects of its use. When used, adequate and effective safety countermeasures must be provided at all times by the user. No warranty, express or implied, is valid when this device is used without the proper safety countermeasures.



Warning

- Before you start to use this device, install it in a control panel or the like and avoid touching the terminals.
- Do not open this device's case, and touch the boards or inside of the case with your hands or a conductor. The user should never repair or modify this device. Doing so might cause an accident that may result in death or serious bodily injury from electric shock.



Caution

To avoid damage to connected peripheral devices, facilities or the product itself due to malfunction of this device, safety countermeasures such as proper installation of the fuse or installation of overheating protection must be taken before use. No warranty, express or implied, is valid in the case of use resulting in an accident without having taken the proper safety countermeasures.

- The warning mark on the plate affixed on the casing of this device warns you not to touch charged parts while this device is powered ON. Doing so might cause an electric shock.
- A means for turning the power OFF such as switch or a breaker must be installed on the external power circuit connected to the power terminal on this device. Fasten the switch or breaker at a position where it can be easily operated by the operator, and indicate that it is a means for powering this device OFF.
- This device does not have a built-in fuse. Install a fuse that conforms to the following rating in the power circuit connected to the power terminal.
Fuse rating/characteristics: 250 VAC 1.0A/medium lagged or lagged type
- When wiring this device, tighten the terminal connections firmly.
- Use the device with the power voltage and frequency within their rated ranges.
- Do not apply a voltage or current outside of the input rating to the input terminal. Doing so might shorten the service life of this device or cause it to malfunction.
- The voltage and current of the load connected to the output terminal should be within the rated range. Exceeding this range may cause the temperature to rise which might shorten the service life of this device or cause it to malfunction.
- This device is provided with ventilation holes for heat to escape. Prevent metal objects or other foreign matter from entering these ventilation holes as this may cause this device to malfunction. Do not block these ventilation holes or allow dirt and dust to stick to these holes. Temperature buildup or insulation failure might shorten the service life of this device or cause it to malfunction.
- Repeated tolerance tests on voltage, noise, surge, etc. may cause this device to deteriorate.
- Never remodel this device or use it a prohibited manner.
- To ensure safe and proper use of this device, and to maintain its reliability, observe the precautions described in this manual.
- Do not operate the keys on the front panel of this device with a hard or sharp-tipped object. Be sure to operate the keys with your fingertips.
- When cleaning this device, do not use paint thinner or other solvents. Wipe gently with a soft, dry cloth.

■ Precautions for Installation Site



Caution

Do not use this device in the following sites. Doing so might result in malfunction or damage to this device and in some cases cause fire and/or dangerous situations.

- Locations that are filled with or generate inflammable gas, corrosive gas, dirt and dust, smoke, etc.
- Locations that are subject to water droplets, direct sunlight or strong radiated heat from other equipment
- Locations where the ambient temperature falls below -10°C or rises above 50°C
- Locations where dew condensation forms and the humidity reaches 90% or more
- Near equipment that generates high-frequency noise
- Near heavy current circuits or locations likely to be subject to inductive interference
- Locations subject to strong vibration and impact
- Locations exceeding an elevation of 2000 m

■ Precautions for Wiring

Caution

- To prevent electric shock, always turn off and disconnect this device from the power supply before starting wiring.
- Do not touch wired terminals or charged parts with your hands while the power is supplied.

Pay attention to the following points when performing wiring:


- Check that the wiring is free from mistakes according to "■ Rear Terminal Arrangement Diagram."
- Use crimped terminals that accommodate an M3 screw and that have a width of 6.2 mm or less.
- For thermocouple input, use a compensation wire compatible with the type of thermocouple.
- For RTD input, the resistance of a single lead wire must be 10Ω or less and the three wires must have the same resistance.
- The input signal lead must not be passed along the same conduit or duct as that for high-voltage power lines.
- Shield wiring (single point grounding) is effective against static induction noise.
- Short interval twisted pair wiring is effective against electromagnetic induction noise.
- When wiring, use wire or cable (minimum 1 mm² cross-sectional area) of 600 V grade PVC insulated wire or equivalent wire having the same rating.
- For wiring the ground, ground the ground terminal with the earth resistance at less than 100Ω and with wire 2 mm² or thicker.
- Two earth terminals are provided, each connected internally. One is for the ground connection, and the other is for connecting the shield of the signal lead. Do not use the earth terminals for crossover wiring of the power system ground lead.
- If this device is considered as being susceptible to noise caused by the power supply, attach a noise filter to prevent abnormal functioning. Install a noise filter onto a grounded panel, and make the wire connecting the noise filter output and the power supply terminal on this controller as short as possible.

Distributed in New Zealand by:

Intech INSTRUMENTS LTD


Christchurch Auckland www.intech.co.nz
Ph: +6433430646 098271930
Fx: +6433430649 098271931 sales@intech.co.nz

External Dimensions

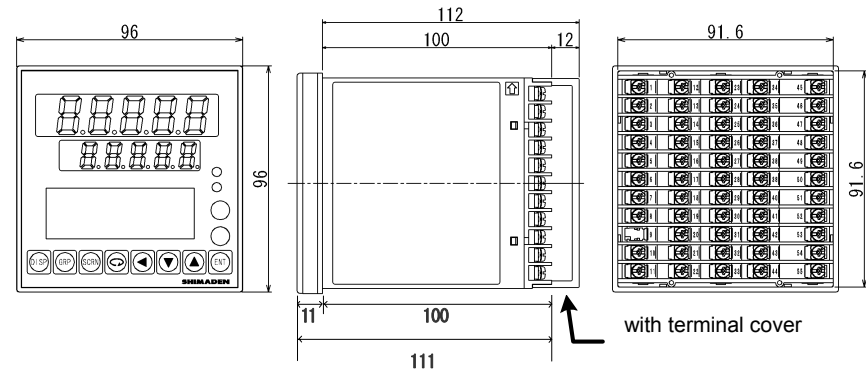

with terminal cover
 Unit: mm

Panel Cutout Dimensions

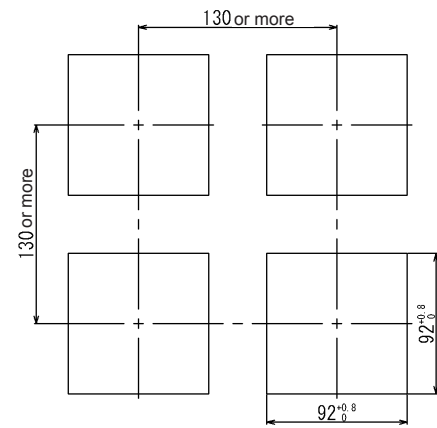

Unit: mm

Mounting




Caution

To ensure safety and maintain the functions of this device, do not disassemble this device.
 If this device must be disassembled for replacement or repair, contact your dealer.


Follow the procedure below to mount this device on a panel.

1. Drill mounting holes referring to the panel cutout dimensions described in the previous section.
 The applicable thickness of the mounting panel is 1.0 to 8.0 mm.
2. Press this device into the panel from the front of the panel.
3. Insert the mounting fixtures at the top and bottom of this device, and tighten the screws from behind to fasten the device in place.
4. Over-tightening the screws may deform or damage the device housing.
 Take care not to tighten the screws too tight.

5. After completing wiring after installation, attach the terminal cover.

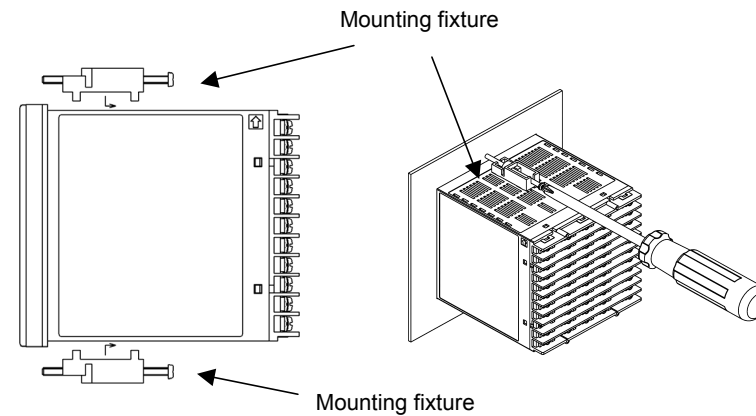


Rear Terminal Arrangement Diagram

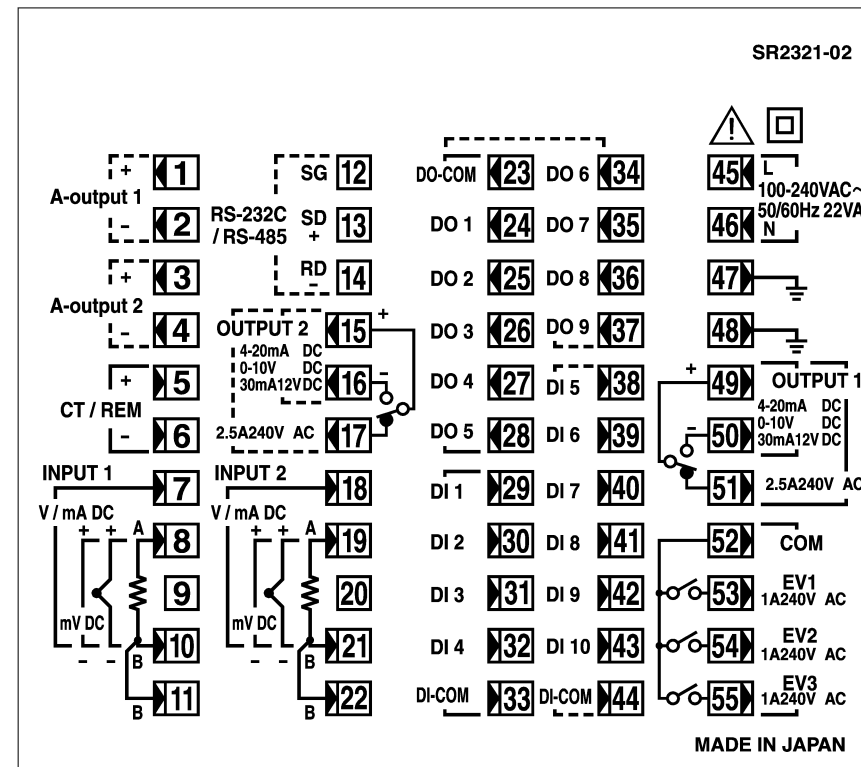

Wiring Example of Open Collector Output

The following is an example of wiring open collector output for external control output terminals (DO).

Open collector output (for connecting to relays)

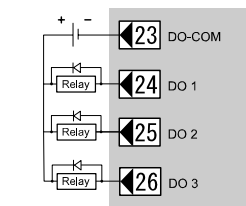

DO1 to DO3: Darlington output
 Output rating: 24V DC 50mA max.

DO terminals other than DO1 to DO3

All the terminals other than DO1 to DO3 are open collector output terminals (24V DC 8mA max.).
 Note that the output ratings differ from that of DO1 to DO3.

Terminal No	Symbol	Description	
1	+	Analog output 1 (optional)	
2	-		
3	+	Analog output 2 or Sensor Power Supply (optional)	
4	-		
5	+	Remote input or Heater Break alarm * CT input (optional)	
6	-		
8	+	mV, thermocouple input	
10	-		
8	A	RTD input	
10	B		
11	B		
7	+	V, mA input	
10	-		
45	L	Power supply	
46	N		
47		Grounding (internal shorting across terminals)	
48			
49	COM +	Control output 1	
50	NO -		
51	NC		
53	EV1	Event output	
54	EV2		
55	EV3		
23	COM	External control output DO (standard)	
24	DO1		Darlington output
25	DO2		
26	DO3		Open collector output
27	DO4		
28	DO5		
29	DI1	External control output DI (standard)	
30	DI2		
31	DI3		
32	DI4		
33	COM		

Terminal No	Symbol	Description
34	DO6	External control output DO Open collector output (optional)
35	DO7	
36	DO8	
37	DO9	
38	DI5	External input DI5 to DI10 (optional)
39	DI6	
40	DI7	
41	DI8	
42	DI9	
43	DI10	
44	COM	
12	SG	Communication function (optional)
13	SD +	
14	RD -	
15	COM +	Control output 2 (optional)
16	NO -	
17	NC	

Terminal No	Symbol	Description
19	+	mV, thermocouple input
21	-	
19	A	RTD input
21	B	
22	B	
18	+	V, mA input
21	-	

A receiving resistor of 1/2W 250Ω 0.1% is attached across input terminals (7-10) for use for the 0 to 20mA, and 4 to 20mA inputs.


* Selectable from remote inputs (including optional) or Heater break alarm (optional).

Names and Functions of Parts on Front Panel

If the instrument is 2-loop specification, it has three kinds of display mode. The display mode can be switched to another by pressing [DISP] key on the front panel.

Note

- The internal cascading controller (DC type) operates as if it is two instruments which are in the form of cascade connection. For SR23 DC type products, CH1 will be "the master", and CH2 will be "the slave".

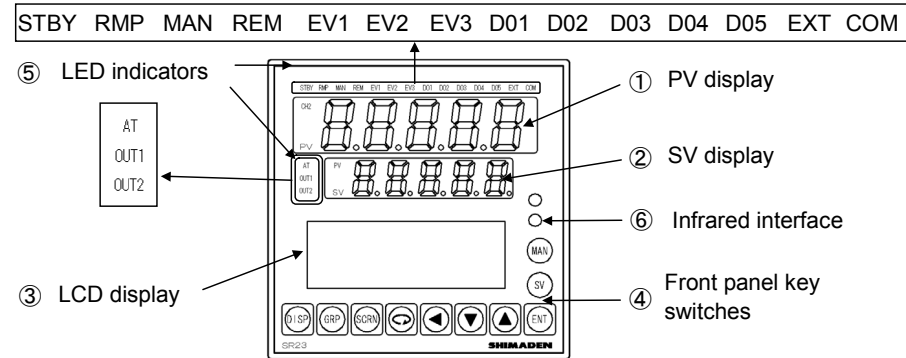

Setup parameter display Displays the parameters can be selected and displayed by front key operation.

Front panel key switches

[DISP]	Displays the basic screen. Switches the Display modes.
[GRP]	Changes the screen group. Or, returns to the screen group top screen.
[SCRN]	Switches the parameter display screen in a screen group.
[↶]	Selects the parameter to set up or change. The parameter to be changed is indicated by the cursor (▶).
[◀]	Moves the digit in set numerical values.
[▼]	Decrements parameters and numerical values during setup.
[▲]	Increments parameters and numerical values during setup.
[ENT]	Registers data or parameter numerical values.
[SV]	Switches the execution SV No. in the basic screen. In screens other than the basic screen, the execution SV No. can be switched when the display is switched to the basic screen.
[MAN]	Used for manual output (MAN). Switches to the output monitor screen whichever screen is displayed. With the output monitor displayed, you can use the [▲] or [▼] keys to switch to manual output.

LED indicators

Note that for Independent 2-channel controllers and Internal cascading controllers (2-loop), each STBY, RMP, MAN, REM, EXT, AT lamp shows different channel information depending on the Display mode.

For Independent 2-channel controllers and Internal cascading controllers (2-loop)

Display mode 1: Displays the action status of CH1.

Display mode 2: Displays the action status of CH2.

Display mode 3: Displays the action status of CH1.

For other than the above controllers

Displays the action status.

Status lamps

STBY	green	Blinks when output is set to standby (STBY=ON) by control execution/standby.
RMP	green	Blinks during execution of ramp control, and lights while ramp control is paused.
MAN	green	Blinks when control output is set to manual operation (MAN).
REM	green	Lights when remote setting (REM) is set in SV No. selection.
EV1	orange	Lights during EV1 action.
EV2	orange	Lights during EV2 action.
EV3	orange	Lights during EV3 action.
DO1	orange	Lights during DO1 action.
DO2	orange	Lights during DO2 action.
DO3	orange	Lights during DO3 action.
DO4	orange	Lights during DO4 action.
DO5	orange	Lights during DO5 action.
EXT	green	Lights when external switch setting (EXT) is set when multi-SV No. selection (SV select) is switched to.
COM	green	Lights during communication (COM) mode.

AT	green	Blinks during execution of auto tuning, and lights during standby.
OUT1	green	When control output is current or voltage output, the brightness of this lamp changes according to fluctuation of Control Output 1, and during contact or SSR drive voltage output, this lamp lights when Control Output 1 is ON and goes Out when Control Output 1 is OFF.
OUT2	green	When control output is current or voltage output, the brightness of this lamp changes according to fluctuation of Control Output 2, and during contact or SSR drive voltage output, this lamp lights when Control Output 2 is ON and goes Out when Control Output 2 is OFF.

Monitor lamps

CH2	green	Lights when it is under the Display mode 2. CH2 PV/SV values are displayed on PV/SV display respectively.
PV	green	Lights when it is under the Display mode 3. CH2 PV values are displayed on SV display.

1 PV display

For Independent 2-channel controllers and Internal cascading controllers (2-loop)

Display mode 1: Displays the current measured value (PV) or error messages of CH1.

Display mode 2: Displays the current measured value (PV) or error messages of CH2.

Display mode 3: Displays the current measured value (PV) or error messages of CH1.

For other than the above controllers

Displays the current measured value (PV) or error messages.

2 SV display

For Independent 2-channel controllers and Internal cascading controllers (2-loop)

Display mode 1: Displays the target set value (SV) of CH1.

Display mode 2: Displays the target set value (SV) of CH2.

Display mode 3: Displays the current measured value (PV) of CH2.

For other than the above controllers

Displays the target set value (SV).

Note

- When it is under Display mode 1, CH1 PV value is shown on the PV display, and CH1 SV value is shown on the SV display. For 1-loop specification, the display information is the same as the Display mode 1.
- Display mode 2 or 3 is used only for 2-loop products (independent t-channel controllers and internal cascading controllers).
- When it is under Display mode 2 (when CH2 lamp lights), CH2 PV value is shown on the PV display, and CH2 SV value is shown on the SV display. When it is under Display mode 3 (when PV lamp lights), CH1 PV value is shown on the PV display, and CH2 PV value is shown on the SV display.

3 LCD display (21 characters x 4 lines, max.)


For Independent 2-channel controllers and Internal cascading controllers (2-loop), the following "CH1" information is displayed under Display mode 1 or 3, and the following "CH2" information is displayed under Display mode 2.

SVNo. display	Displays the current target setting value (SV) No..
Output (OUT) display	Displays the control output value by a numerical value and a bar graph as a percentage (%).
Channel (CH1/CH2) display	Displays the current channel for the data as one of the parameter values (2-loop specification only).
Screen title display	Displays the screen group title in the respective screen group top screen.

Error Messages

Code	Cause	
E-roñ	ROM error	The error codes on the left are displayed on the PV display. These indicate that all outputs turn OFF or become 0%. If any of the messages are displayed, repair or replacement is required. Immediately turn the power OFF, and contact your dealer.
E-rAñ	RAM error	
E-EEP	EEPROM error	
E-Ad1	Input 1 A/D error	
E-Ad2	Input 2 A/D error	
E-SPc	Hardware error	
Sc_LL	The PV value exceeded the measuring range lower limit (-10%FS).	When a PV input-related abnormality is detected during execution of control on this device, the error codes on the left are displayed on the PV display.
Sc_HH	The PV value exceeded the measuring range higher limit (+110%FS), RTD-A burnout, or thermocouple burnout.	
b----	One or two RTD-B burnout, or all leads of the RTDs burnout. Action of this device in this case is PV moving excessively towards the higher limit.	
CJ_LL	Reference junction compensation (-20°C) is at the lower limit. (thermocouple input)	
CJ_HH	Reference junction compensation (+80°C) is at the higher limit. (thermocouple input)	
rE_LL	REM input exceeds the input range lower limit.	When an abnormality is detected in the REM input during execution of REM SV on this device, the error codes on the left are displayed on the PV display. If any of the messages are displayed, repair or replacement is required. Immediately turn the power OFF, and contact your dealer.
rE_HH	REM input exceeds the input range higher limit.	
HB_HH	The heater current exceeds 55.0A.	When a heater current abnormality is detected during execution of control on this device this error code is displayed on the LCD.

LCD Flow Chart

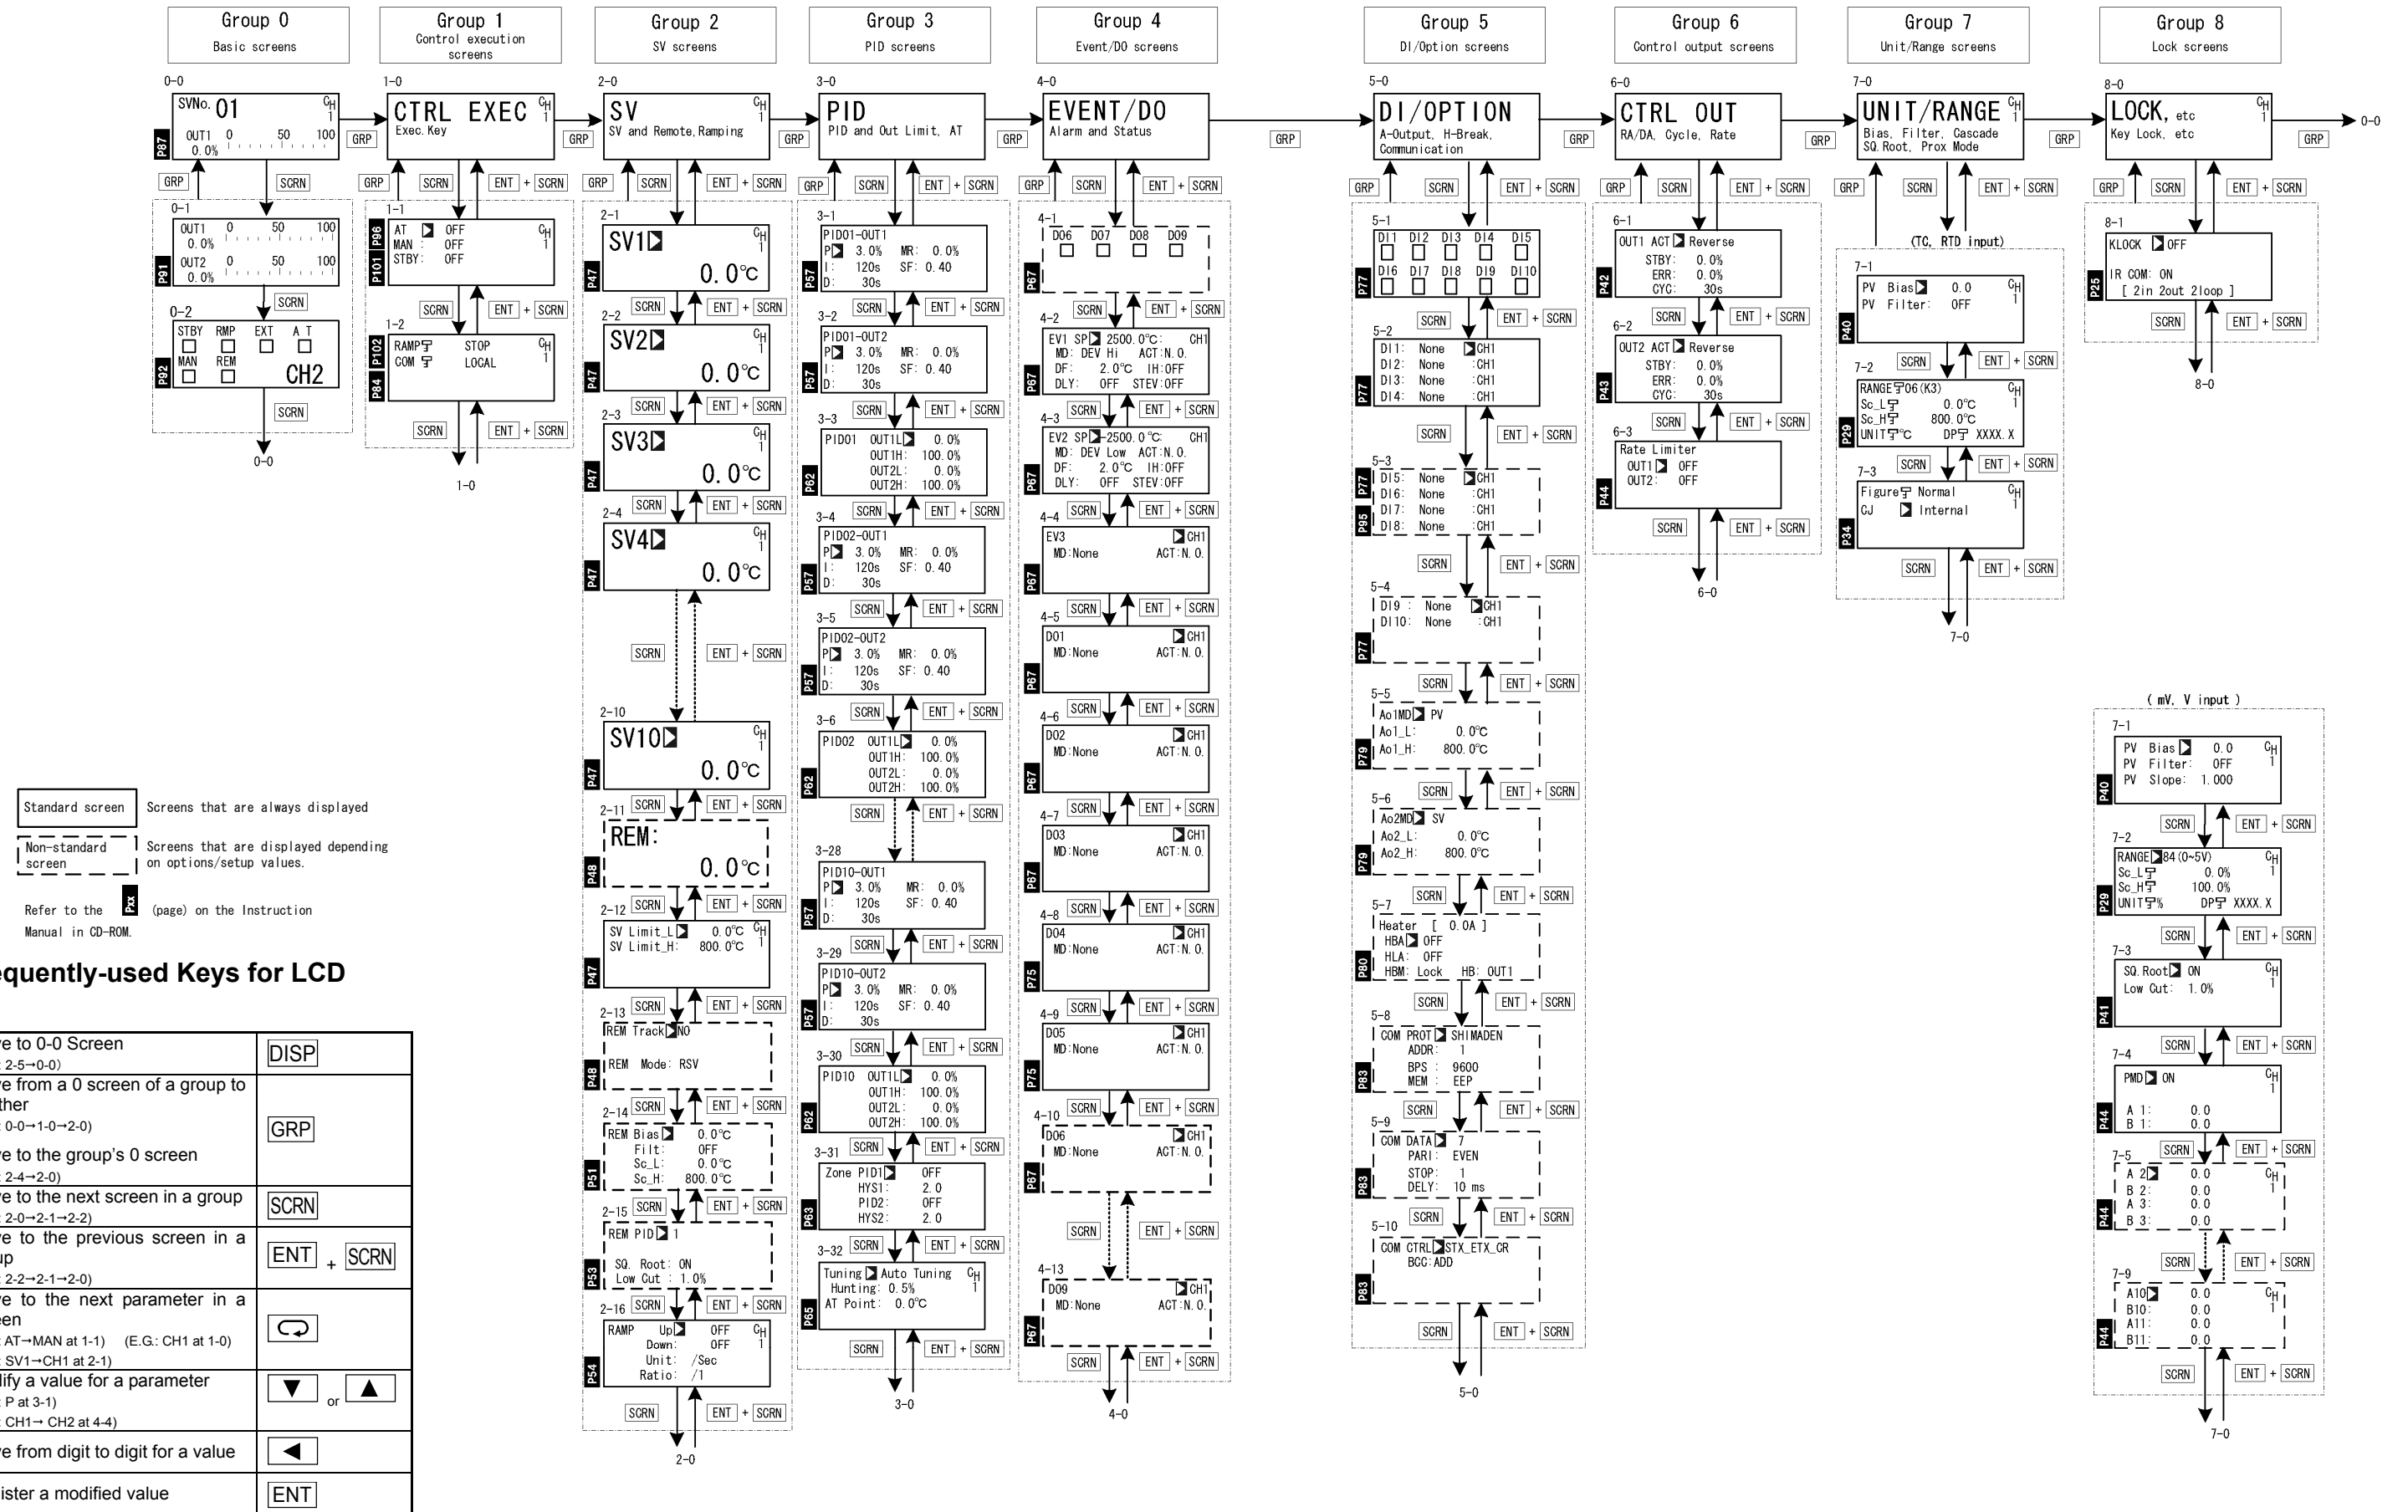

Standard screen Screens that are always displayed

Non-standard screen Screens that are displayed depending on options/setup values.

Refer to the Pxx (page) on the Instruction Manual in CD-ROM.

Frequently-used Keys for LCD

Move to 0-0 Screen (E.G: 2-5→0-0)	DISP
Move from a 0 screen of a group to another (E.G: 0-0→1-0→2-0)	GRP
Move to the group's 0 screen (E.G: 2-4→2-0)	GRP
Move to the next screen in a group (E.G: 2-0→2-1→2-2)	SCRN
Move to the previous screen in a group (E.G: 2-2→2-1→2-0)	ENT + SCRN
Move to the next parameter in a screen (E.G: AT→MAN at 1-1) (E.G: CH1 at 1-0) (E.G: SV1→CH1 at 2-1)	CH
Modify a value for a parameter (E.G: P at 3-1) (E.G: CH1→CH2 at 4-4)	▼ or ▲
Move from digit to digit for a value	◀
Register a modified value	ENT