


---

# INTECH Micro 2100-4S

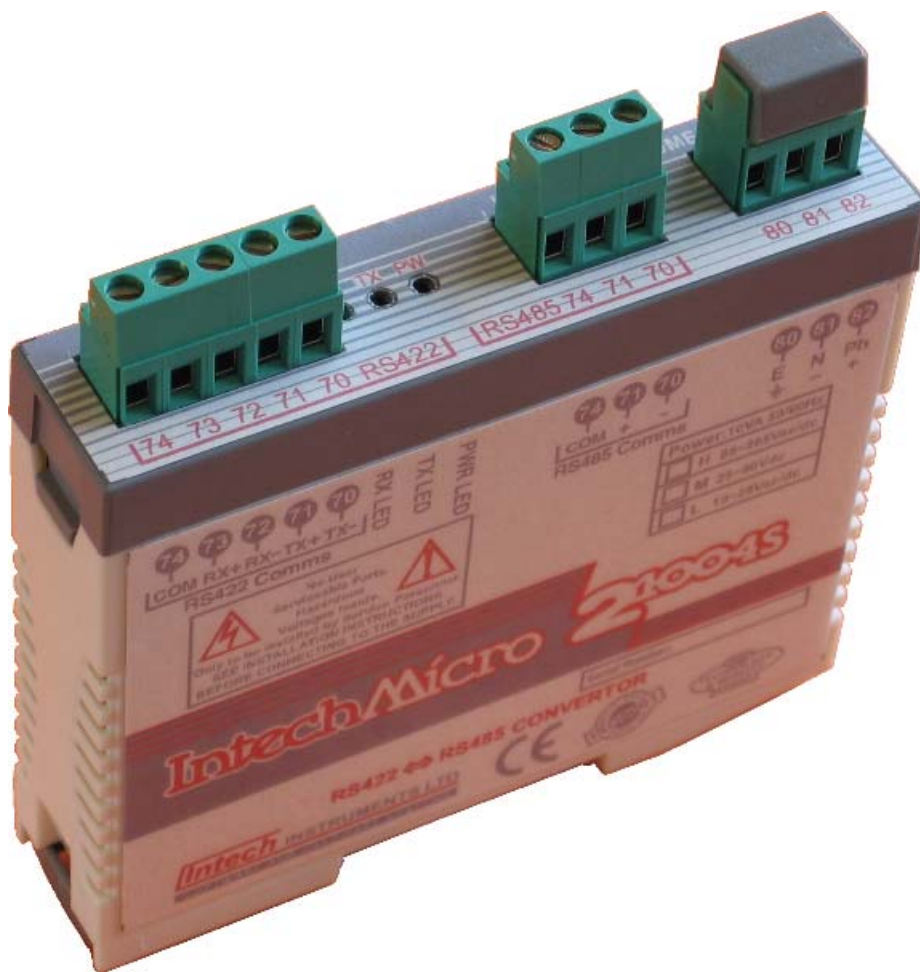

## Installation Guide.

---

**Section A. Description, Ordering and Specifications.**  
**2100-4S Installation Guide Index.**

**Section A. Description, Ordering and Specifications.**

Index.	Page 2
Features and Ordering Information.	Page 3
Description	Page 3
Specifications.	Page 4
Circuit Board Layout.	Page 4

**Section B. LED and Switch Functions Tables.**

Description of LED Functions.	Page 5
H1 Power Supply Settings.	Page 5
Terminations for 2100-4S.	Page 5

**Section C. Connection to a Microscan Scada System.**

RS485 Serial Connection.	Page 6
RS422 Serial Connection.	Page 6
RS422/485 Data Cabling Installation Examples.	Page 7
Connection Example of Multiple 2100-4Ss.	Page 7

**Section D. Wiring and Installation.**

Mounting.	Page 8
Cover Removal and Fitting.	Page 8
Power Supply Wiring.	Page 8
Analogue Signal Wiring.	Page 8
RS422/485 Comms Signal Cabling.	Page 8
Commissioning.	Page 8

# 2100-4S Rev 1.1 RS422 to RS485 Converter.

Converts RS422 to RS485 for communication to a field Datalogging, PLC, etc, system.

## Features.

- Easy to Install.
- LED Status Indications.
- Compact DIN Rail Mount Enclosure.
- Low Cost.
- Universal AC/DC Power Supply.



Z985

## 2100 models include:

- 2100-4S : RS422 to RS485 Converter.
- 2100-A16 :16AI, 4DI, 2 Relay Out, 2 AO.
- 2100-A4 :4AI, 4DI, 4 Relay Out, 2 AO.
- 2100-A4e :4AI, 4DI, 8 Relay Out, 2 AO.
- 2100-AO :8 AO, 8 AI, 12 DI, 2 Relay Out.
- 2100-D :12DI, 12 Relay Out.
- 2100-IS :Isolated RS232 to RS422/485.
- 2100-M :16AI Multiplexer.
- 2100-ME :Memory Expansion for 2100-A.
- 2100-NET :Isolated Ethernet to RS232/422/485.
- 2100-NS :Non-Isolated RS232 to RS422/485.
- 2100-R :16 Relay Expansion for 2100-A.
- 2100-RL2 :2 Relay Expansion for 2100-A.

## Ordering Information.

Standard Unit:

2100-4S

RS422 to RS485 Converter.

## Description.

The 2100-4S allows a cost effective solution for connecting equipment with RS485 COMMS to an existing RS422 Data highway without the expense of running a separate RS485 Data Hi-Way around the plant. The 2100-4S is a compact, DIN rail mount module that converts RS422 to RS485 for communication to a field data logging or PLC system. Its drivers and receivers meet EIA standards RS-422-A and CCITT recommendations V.11 and X.27, and are designed for multipoint transmission on long bus lines in noisy environments. It includes thermal shutdown and over current limiting.



2100-4S Front View

## Quality Assurance Programme.

The modern technology and strict procedures of the ISO9001 Quality Assurance Programme applied during design, development, production and final inspection grant long term reliability of the instrument. This instrument has been designed and built to comply with EMC and Safety Standards requirements.

## Specifications.

Comms Baud Rate:	-Standard	9600baud.
	-Optional	4800 or 19200baud.
Power:	-H	85~264Vac/dc; 50/60Hz; 10VA.
	-M	23~90Vdc; 10VA.
	-L	10~28Vac/dc; 50/60Hz; 10VA.

Refer '2100-4S H1 Power Supply Settings' for voltage selection instructions.

### Safety and EMC Compliances:

EMC Emissions Compliance	EN 55022-A.	
EMC Immunity Compliance	EN 50082-1.	
Safety Compliance	EN 60950.	
Mains Isolation	250Vac.	
Mains Isolation Test Voltage	-To all Inputs and Outputs:	3000Vac 50Hz for 1min.
	-To Earth:	1500Vac 50Hz for 1min.


### General Specifications: (Unless otherwise stated in other input specifications.)

RF Immunity	<±1% Effect FSO Typical.	
Operating Temperature	0~60C.	
Storage Temperature	-20~80C.	
Operating Humidity	5~85%RH Max. Non-Condensing.	
Housing	-Dimensions	L=100, W=22.5, H=100mm.
	-Mounting	35mm Symmetrical Mounting Rail.
	-Weight	200g. Includes Packaging.


**Product Liability.** This information describes our products. It does not constitute guaranteed properties and is not intended to affirm the suitability of a product for a particular application. Due to ongoing research and development, designs, specifications, and documentation are subject to change without notification. Regrettably, omissions and exceptions cannot be completely ruled out. No liability will be accepted for errors, omissions or amendments to this specification. Technical data are always specified by their average values and are based on Standard Calibration Units at 25C, unless otherwise specified. Each product is subject to the 'Conditions of Sale'.

**Warning:** These products are not designed for use in, and should not be used for patient connected applications. In any critical installation an independant fail-safe back-up system must always be implemented.

### 2100-4S Circuit Board Layout.

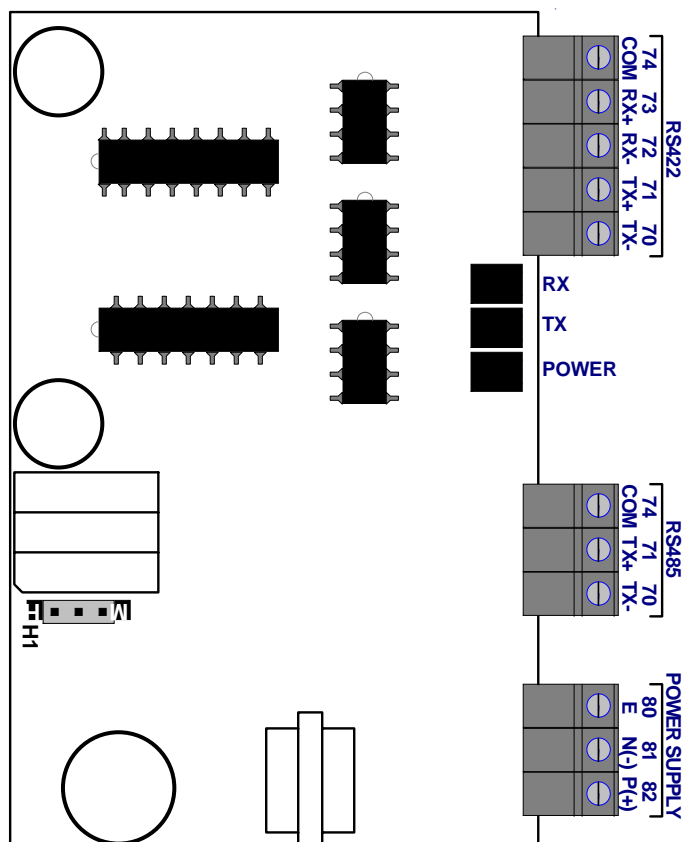

### 2100-4s Enclosure Dimensions.

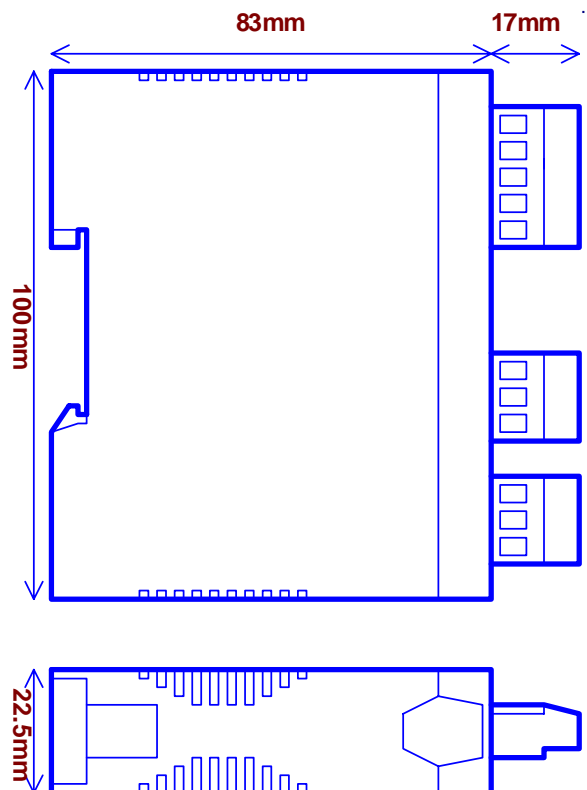

**Section B. LED and Switch Functions Tables.**

**Description of LED Functions.**

R.X.	LED	ON	Unit Receiving Data From the Field.
T.X.	LED	ON	Unit Transmitting Data to the Field.
PWR	LED	ON	Unit has Power Connected.

**H1 Power Supply Settings.**

Power Supply Jumper Settings	
H1	Power Supply Voltage Range
H	Jumper for 85~264Vac/dc
M	Jumper for 23~90Vdc

- Note 1. Power must be OFF before changing H1's position.
- Note 2. Exceeding these parameters may damage the unit.
- Note 3. Ensure the enclosure label is correctly labelled for the jumper position.
- Note 4. Low Voltage Power Supply version is fixed, and has no jumper. This must be ordered separately.


**Terminations for 2100-4S.**

Terminations		
Model	2100-4S	
	Term No	Connection
Mains Supply	82	Phase (+)
	81	Neutral (-)
	80	Earth $\perp$
RS422	74	COM
	73	RX+
	72	RX-
	71	TX+
	70	TX-
RS485	74	COM
	71	TX+
	70	TX-

DO NOT GUESS TX OR RX CONNECTIONS. FOLLOW THE TERMINAL NUMBERS IN THE SERIAL CONNECTION DIAGRAMS EXACTLY.

## OUTSTATION LAYOUT. 2-Wire RS485 Serial Connections.

## OUTSTATION LAYOUT. 4-Wire RS422 Serial Connections.

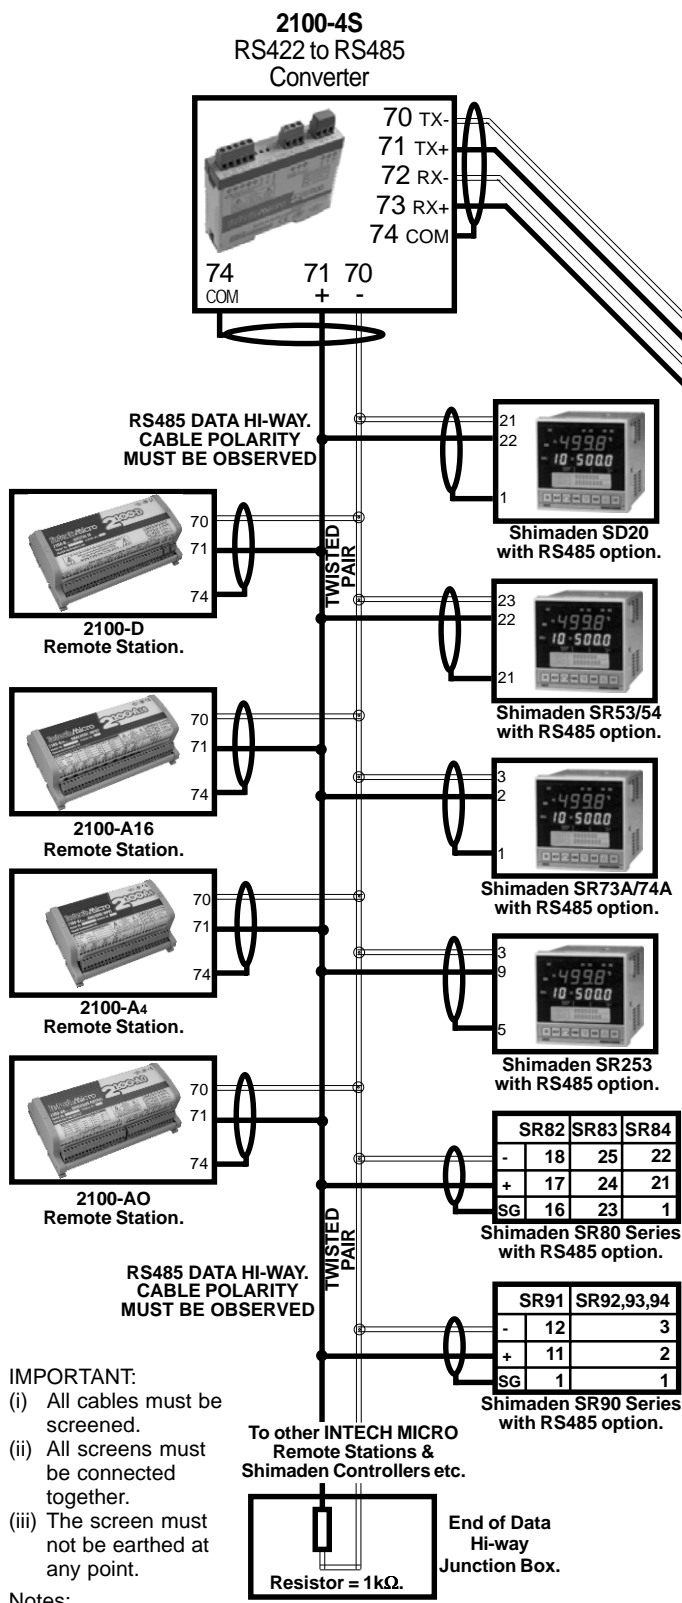

**IMPORTANT:**


- All cables must be screened.
- All screens must be connected together.
- The screen must not be earthed at any point.

**Notes:**

- RS485 can only be used with software release Ver. 4.02 onwards.
- RS485 Data Hi-way is not compatible with RS422 Data Hi-way devices such as IN-2000-AI, IN-2000-AO, IN-2000-DI, IN-2000-DO, FP21, SR25, etc. Use a 2100-4S to interface an RS485 Data Hi-way to an existing RS422 Data Hi-way

**RS232:** 2100-IS convertor is not required to connect the 2100-232 directly to a PC. Use the RS232 kit to connect the 2100-232 directly to a PC. The PC requires one RS232 port per 2100.

**RS485:** If the outstation is using RS485, it cannot be connected to the same data hi-way as an outstations using RS422. In the 'programming' box, set the 'TX delay' box to 20. Set the Dip switches on the 2100-IS and the jumpers on the 2100 for RS485 operation.

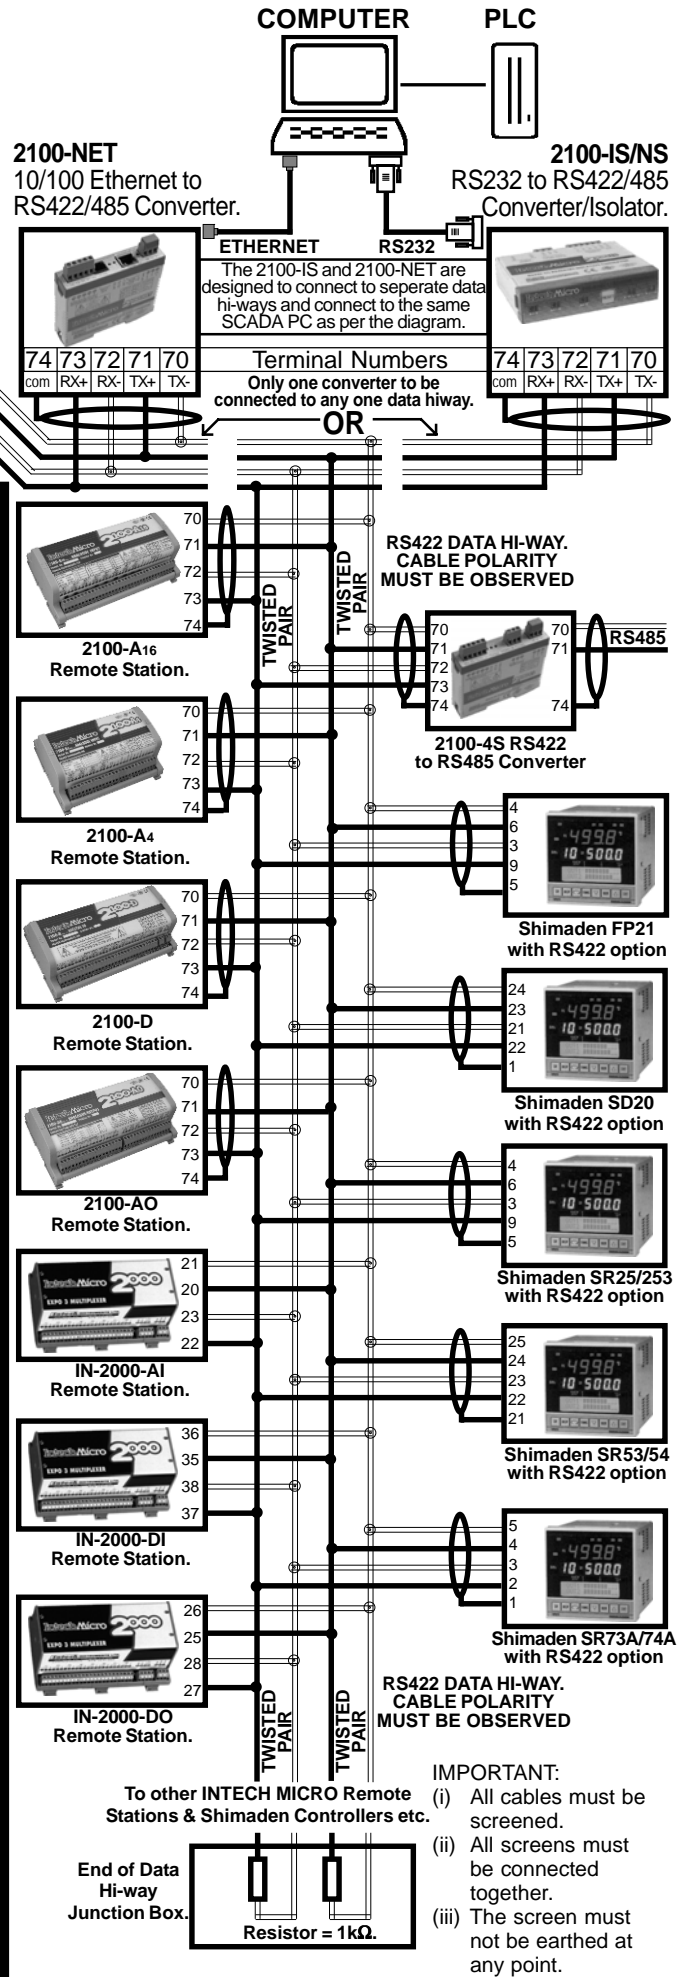


**IMPORTANT:**

- All cables must be screened.
- All screens must be connected together.
- The screen must not be earthed at any point.

**Section C. Connection to a Microscan Scada System.  
2100 SCADA.**

**RS422/485 Data Cabling Installation eg 1.**

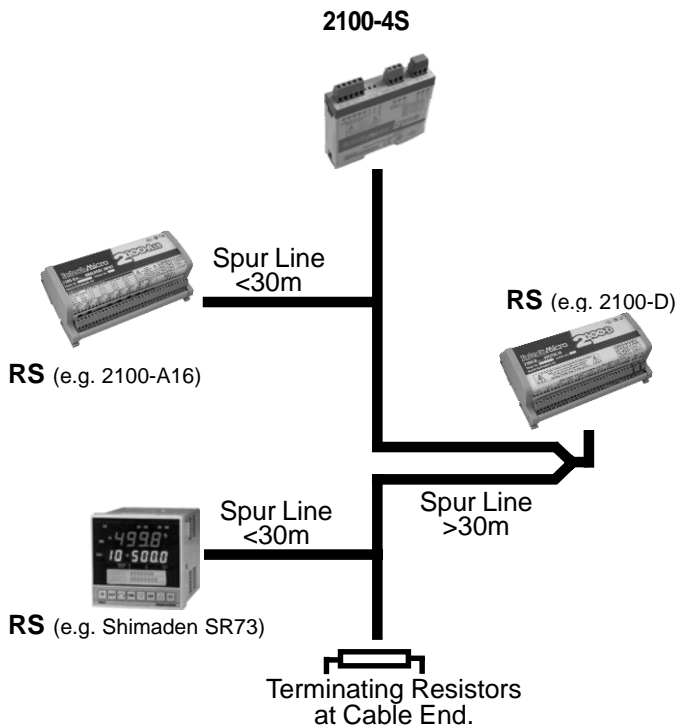


Note 1: RS = MICRO 2000 or 2100 Remote Stations, or SHIMADEN CONTROLLERS.

Note 2: Shimaden Controllers must have a unique serial number preprogrammed before connecting to the COMMS data hi-way. All signals and power must be de-energised before connecting to any wiring.

IMPORTANT: The accompanying Installation Instructions must be strictly adhered to.


**RS422/485 Data Cabling Installation eg 2.**

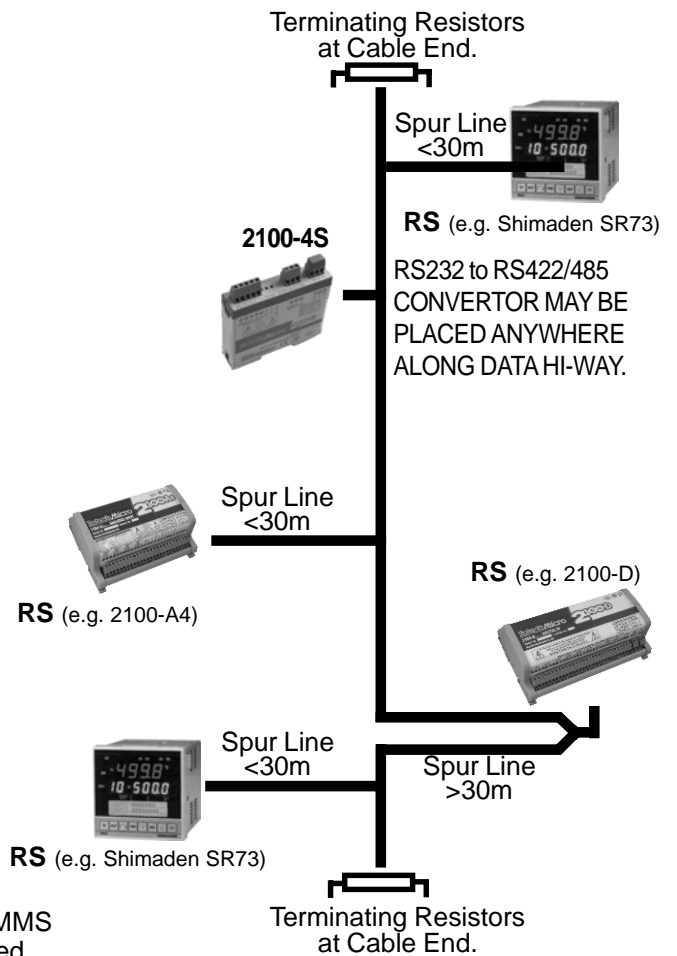

**Connection Example of Multiple 2100-4Ss.**

Used in situations where the RS422/485 Data Hi-way is going in different directions in a plant.

Note: The Data Hi-way must not exceed 1200m.

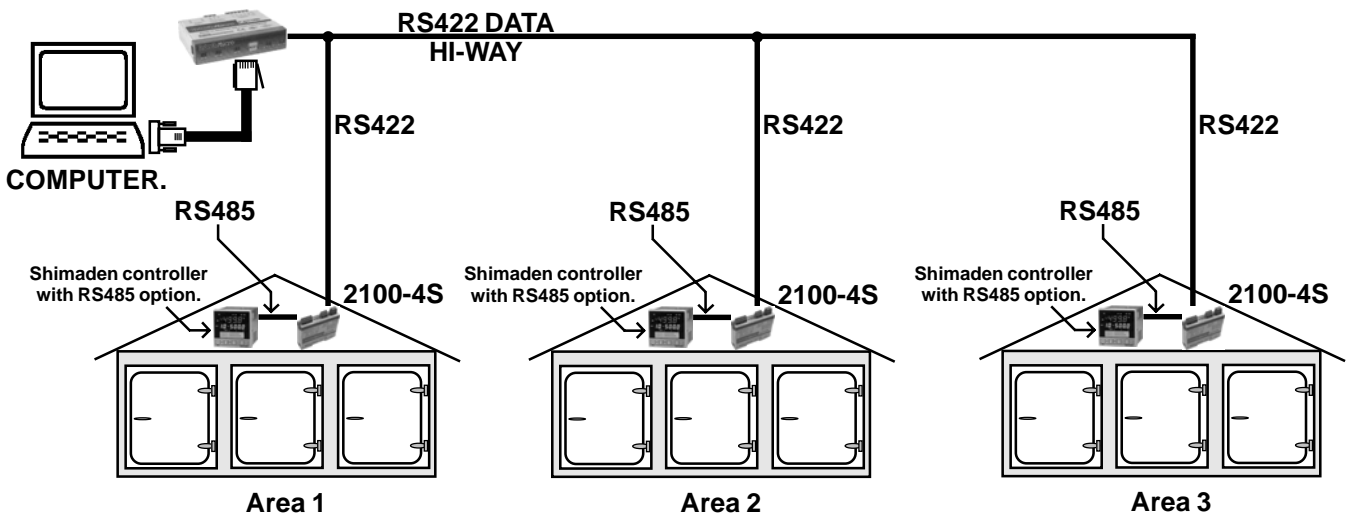

**Section D. Wiring and Installation.**  
**The Proper Installation & Wiring of the 2100-4S.**

All power and signals must be de-energised before connecting any wiring, or altering any Jumpers or Dip Switches.

**Mounting.**

- (1) Mount in a clean environment.
- (2) Draft holes must have minimum free air space of 20mm. Foreign matter must not enter or block draft holes.
- (3) Do not subject to vibration, excess temperature or humidity variations.
- (4) Avoid mounting near power control equipment.
- (5) Allow 10mm minimum clearance between the 2100-4S terminals and ANY conductive material.
- (6) To maintain compliance with the EMC Directives the 2100-4S is to be mounted in a fully enclosed steel fire cabinet. The cabinet must be properly earthed, with appropriate input / output entry points and cabling.

**Cover Removal and Fitting.**

To remove the PCB to access jumpers and dip switches, push in the GREY BUTTONS at both ends of the enclosure TOP, and slide the PCB from the BASE of the enclosure. To reassemble slide the PCB back into the BASE until both GREY BUTTONS 'snap' into place. Ensure the TOP of the enclosure is flush with the BASE on all sides.

**Power Supply Wiring.**

- (1) A readily accessible disconnect device and a 1A, 250Vac overcurrent device, must be in the power supply wiring.
- (2) For power supply, connect Phase (or +Ve) to terminal 82, Neutral (or -Ve) to 81, and Earth to 80. To ensure compliance to CE Safety requirements, the grey terminal insulator must be fitted to ALL mains terminals after wiring is completed. (i.e. terminals 82, 81 and 80.) For Non Hazardous Voltage power supplies (not exceeding 42.4Vpeak or 60Vdc) terminals 81 and 80 may be linked together, instead of connecting an earth.

**Analogue Signal Cabling.**

- (1) All analogue cables should be good quality, overall screened, INSTRUMENTATION CABLE, with the screen earthed at one end only. (e.g. Austral Standard Cables B5102ES.)
- (2) Analogue signal cables should be laid a minimum distance of 300mm from power and data cables.
- (3) It is recommended that you do not ground current loops or use power supplies with ungrounded outputs.
- (4) Lightning arresters should be used on inputs and outputs when there is a danger from this source.
- (5) Refer to diagrams for connection details.

**RS422/485 Comms Signal Cabling.**

- (1) Use only low capacitance, twisted pair, overall screened data cable. The cable must equal or better the following specifications.

Cable Specifications.		
Conductor Size.		7/0.20mm, 24AWG
Conductor Resistance @ 20C.		8.9Ω/100m
Max. Working Voltage.		300Vrms
Capacitance between wires of a pair.		50pF/m
Capacitance between each wire to all others bunched together.		95pF/m
Cross-talk between pairs:	@ 1kHz	>-90dB/100m
	@ 100kHz	>-50dB/100m
Characteristic Impedance .	@ 100kHz	135Ω
Attenuation of a pair:	@ 1kHz	0.15dB/100m
	@ 10kHz	0.42dB/100m
	@ 100kHz	0.8dB/100m
	@ 50kHz	0.9dB/100m
	@ 1MHz	1.9dB/100m
	@ 1.5MHz	2.4dB/100m

**NOTE:** All cables are to be subject during manufacture to in-process spark testing @ 4kVrms.  
 All cables are to be tested between conductors and conductors to screen for 1min @ 1500Vrms.

- (2) Minimum cable pairs: RS422 = 2. (Plus overall screen.) RS485 = 1. (Plus overall screen.)
- (3) Take care not to stress or damage cables during installation.
- (4) Total length of trunk line, including spurs, is not to exceed 1200m without isolating boosters.
- (5) Terminating resistors -1kΩ.
- (6) Cabling paths should avoid sources of radio frequency interferences such as fluorescent lights, variable speed motor drives, welding equipment, radio transmitters, etc.
- (7) There should be a minimum of 200mm physical separation between power cables and data cables.
- (8) Data cables should not be exposed to excessive heat or moisture, and should not be buried directly in the ground without protection.
- (9) Avoid powering a remote station or controller from the same power supply as a variable speed drive.
- (10) All unused twisted pairs should be terminated at both ends with 1kΩ resistors. DO NOT ground unused pairs.

**Commissioning.**

- (1) Check that all the above conditions have been met, and the wiring checked, before applying power to the 2100-IS.
- (2) Check each relay output functions correctly, and the relay specifications are not being exceeded.

***Intech* INSTRUMENTS LTD**  
[www.intech.co.nz](http://www.intech.co.nz)  
 Christchurch Ph: +64 3 343 0646  
 Auckland Ph: 09 827 1930  
 Email: [sales@intech.co.nz](mailto:sales@intech.co.nz)