

# JUMO AQUIS 500 pH

Transmitter/Controller for pH, ORP and  
NH<sub>3</sub>- (ammonia) concentration  
Type 202560



**B 202560.0**  
Operating Manual



**WARNING:**

A sudden malfunction of the device, or one of the sensors connected to it, could potentially result in dangerous, imprecise dosing! Suitable preventive measures must be in place to prevent this from happening.

---

**Note:**


Please read these Operating Instructions before placing the device in operation. Keep the manual in a place which is accessible to all users at all times.

---

**Resetting the brightness of the LC display:**


If the brightness/contrast setting has been adjusted so that the display text is no longer legible, the basic setting can be restored as follows:

Switch off the supply voltage.


Switch on the supply voltage and immediately press and hold the  and  keys simultaneously.

**Reset the language to "English":**


If the language has been adjusted so that the display text is no longer comprehensible, use the Administrator password, 7485, to reset the language to "English":

Press the  key for longer than 3 seconds.

Press the  key once.

Briefly press the  key.

Enter 7485.

Briefly press the  key.

The required language can then be set in  
ADMINISTR. LEVEL / PASSWORD / PARAMETER LEVEL / DISPLAY /  
LANGUAGE.

---

# Contents

---

<b>1</b>	<b>Typographical conventions .....</b>	<b>5</b>
1.1	Warning signs .....	5
1.2	Note signs .....	5
<b>2</b>	<b>Description .....</b>	<b>6</b>
<b>3</b>	<b>Identifying the device version .....</b>	<b>7</b>
3.1	Nameplate .....	7
3.2	Type designation .....	8
3.3	Scope of delivery .....	8
3.4	Accessories (in delivery package) .....	9
3.5	Accessories (optional) .....	10
<b>4</b>	<b>Mounting .....</b>	<b>11</b>
4.1	General .....	11
4.2	Surface mounting .....	11
4.3	Pipe installation set / weather protection roof .....	12
4.4	DIN rail installation set .....	12
4.5	Mounting in a panel .....	13
<b>5</b>	<b>Electrical connection .....</b>	<b>15</b>
5.1	Installation notes .....	15
5.2	Electrical isolation .....	16
5.3	Preparatory work .....	17
5.4	Connection of pH / ORP combination electrodes .....	18
5.5	Terminal assignments .....	22
5.6	ISFET-pH combination electrode according to data sheet 20.1050 .....	24
<b>6</b>	<b>Operation .....</b>	<b>25</b>
6.1	Controls .....	25
6.2	LC display .....	26
6.3	Principle of operation .....	27
6.4	Measurement mode .....	30
6.5	Input/output information .....	30
6.6	MANUAL mode / simulation mode .....	32
6.7	HOLD mode .....	36
6.8	Operator level .....	37
6.9	Administrator level .....	37
6.10	Device info .....	43
6.11	Controller function .....	43

---

# Contents

---

<b>7</b>	<b>Commissioning</b> .....	<b>45</b>
7.1	Fast start .....	45
7.2	Setup examples .....	46
<b>8</b>	<b>Calibration</b> .....	<b>67</b>
8.1	pH electrode .....	67
8.2	pH antimony electrode .....	75
8.3	ORP electrode .....	75
8.4	Ammonia (NH <sub>3</sub> )- cell .....	80
<b>9</b>	<b>Setup program</b> .....	<b>82</b>
9.1	Function .....	82
<b>10</b>	<b>Eliminating faults and malfunctions</b> .....	<b>83</b>
<b>11</b>	<b>Appendix</b> .....	<b>84</b>
11.1	Operator level parameters .....	84
11.2	Parameter explanations .....	91
11.3	Glossary .....	95
<b>12</b>	<b>device description</b> .....	<b>99</b>
12.1	<b>Technical data</b> .....	99
12.2	Panel cut-out .....	103
<b>13</b>	<b>China RoHS</b> .....	<b>105</b>
<b>14</b>	<b>Index</b> .....	<b>106</b>

---

# 1 Typographical conventions

---

## 1.1 Warning signs



---

### Danger

This symbol is used when there may be **danger to personnel** if the instructions are disregarded or not followed accurately!



---

### Caution

This symbol is used when there may be **damage to equipment or data** if the instructions are ignored or not followed accurately!



---

### Caution

This symbol is used where special care is required when handling components liable to damage through electrostatic discharge.

---

## 1.2 Note signs



---

### Note

This symbol is used when your **special attention** is drawn to a remark.

abc<sup>1</sup>

---

### Footnote

Footnotes are remarks that **refer to specific points** in the text. Footnotes consist of two parts:

A marker in the text, and the footnote text.

The markers in the text are arranged as continuous superscript numbers.

---

\*

---

### Action instruction

This symbol indicates that an **action to be performed** is described.

The individual steps are marked by this asterisk.

Example:

\* Remove crosspoint screws.

---

## 2 Description

### General

The device is used for measuring/controlling the pH, ORP or NH<sub>3</sub>- (ammonia) concentration. The function is switchable on the device itself. Depending on the measured variable, combination electrodes (e. g. pH/ORP combination electrodes, gas-sensitive sensors) or split versions (glass/metal electrodes with a separate reference electrode) can be readily connected. Temperature serves as the second input variable, measured by a Pt100/1000 probe, for example. It is therefore possible to implement automatic temperature compensation for the pH and NH<sub>3</sub> variables.


The devices are operated using unambiguous keys and a large LC graphics display on which the measurements are clearly legible. The plain-text presentation of the parameters makes it easier for the user to configure the device, and also helps in programming it correctly.

Thanks to its modular design, the device can be perfectly matched to the specific application requirements. Up to four outputs are available (see the block diagram for the functions).

### Typical areas of application

Universal application in water and wastewater engineering, service/process water and wastewater, drinking water and well/surface water, leakage monitoring in refrigeration plant.

### Block diagram

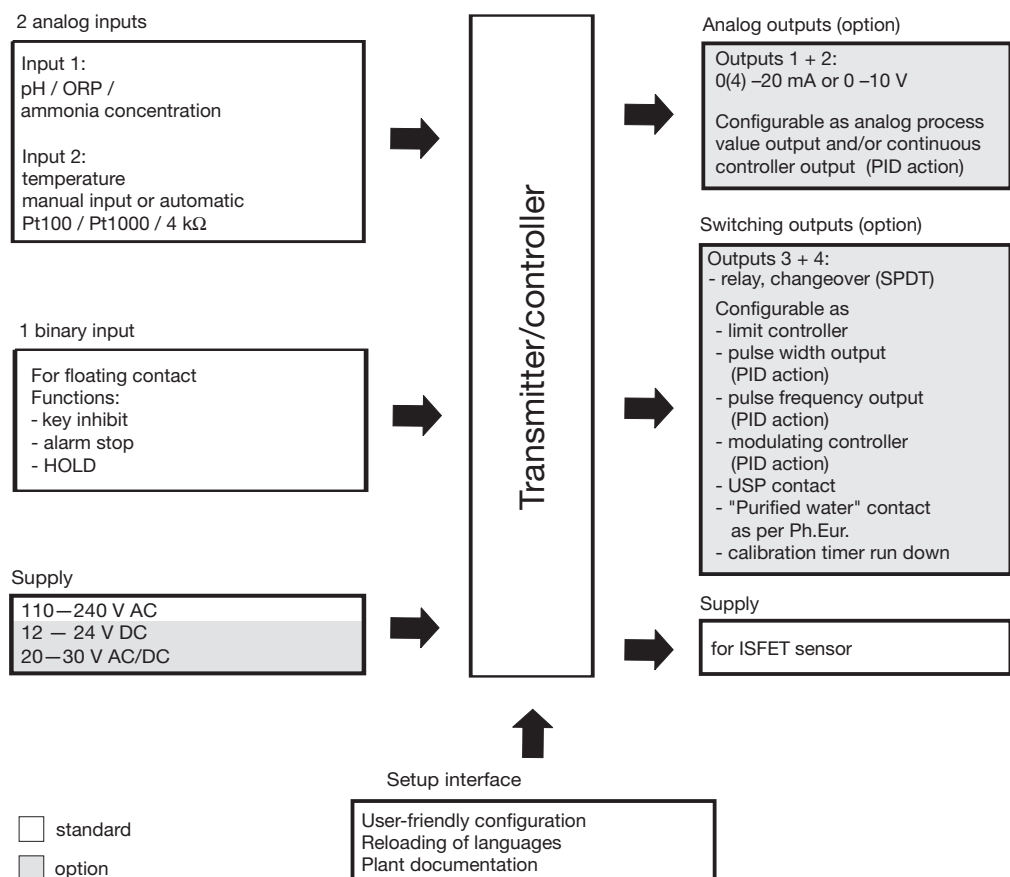

## 3 Identifying the device version

---

### 3.1 Nameplate

on the  
transmitter

**JUMO AQUIS 500 pH**      VARTN: 20/00511046

Typ: 202560/20-000-000-310-000-23/000

**F-Nr.: 0204124401215070002**

~AC 110..240V -15/+10% 48..63Hz ≤14VA

Fulda, Germany  
www.jumo.net



The date of manufacture is coded in the “F-Nr.” (serial number):

1507 means manufactured in year 2015 / week 07

---

## 3 Identifying the device version

---

### 3.2 Type designation

- (1) Basic type**  
202560 JUMO AQUIS 500 pH  
Transmitter/controller for pH, ORP,  
NH<sub>3</sub>- (ammonia) concentration and temperature
- (2) Basic type extensions**  
10 for panel mounting  
20 in surface-mountable housing
- (3) Output 1 (for principle measurement variable or continuous controller)**  
000 no output  
888 analog output 0(4) – 20 mA or 0 – 10 V
- (4) Output 2 (for temperature measurement variable or continuous controller)**  
000 no output  
888 analog output 0(4) – 20 mA or 0 – 10 V
- (5) Output 3**  
000 no output  
310 relay with changeover (SPDT) contact
- (6) Output 4**  
000 no output  
310 relay with changeover (SPDT) contact
- (7) Supply voltage**  
23 110 – 240 V AC +10%/-15%, 48 – 63 Hz  
25 20 – 30 V AC/DC, 48 – 63 Hz  
30 12 – 24 V DC ±15%
- (8) Extra codes**  
000 none

	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)							
Order code	<input type="text"/>	/ <input type="text"/>	- <input type="text"/>	- <input type="text"/>	- <input type="text"/>	- <input type="text"/>	- <input type="text"/>	/ <input type="text"/>							
Order example	202560	/	20	-	888	-	000	-	310	-	000	-	23	/	000

---

### 3.3 Scope of delivery

- Transmitter/controller
  - 1 bag with accessories
  - Operating Instructions
-



# 3 Identifying the device version


## 3.1 Accessories (in delivery package)

Contents

Designation



3 x plug-in screw terminals



1 x large plug-in link



1 x small plug-in link



1 x cable clip for cable diameter > 5 mm



2 x cable clips for cable diameter < 5 mm



1 x cable clip for cable diameter < 3 mm



2 x pan head screws 3.5x6.5




4 x round spacers for panel mounting



4 x hexagonal nuts for panel mounting



4 x countersunk screws M6x10

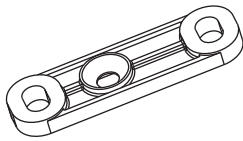

4 x fixings




1 x cable gland M12x1.5



1 x sealing ring for cable gland M12x1.5



1 x reducing sealing ring for cable gland M12x1.5




2 x cable glands M16x1.5



2 x sealing rings for cable gland M16x1.5



1 x multiple seal for cable gland M16x1.5

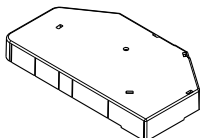

1 x cable cover

## 3 Identifying the device version

---

### 3.4 Accessories (optional)

Type	Part no.
Protection canopy for JUMO AQUIS 500 <sup>1</sup>	00398161
Pole-mounting kit for JUMO AQUIS 500 <sup>2</sup>	00483664
Support pillar with pedestal base, arm and chain	00398163
PC setup software	00483602
PC interface, including USB/TTL converter and adapter (USB connecting cable)	00456352
Fixing for suspended fitting	00453191

---

---

<sup>1</sup> The pole-mounting kit is needed for mounting the protection canopy.

<sup>2</sup> Using the pole-mounting kit, the JUMO AQUIS 500 can be fitted to a pole (e.g. support pillar or railing).

---

## 4.1 General

### Mounting location

Find a location that ensures easy accessibility for the later calibration.

The fastening must be secure and must ensure low vibration for the device.

Avoid direct sunlight!

Permissible ambient temperature at the installation location: -10 to 55°C with max. 95% rel. humidity, no condensation.


### Installation position

The device can be mounted in any position.

## 4.2 Surface mounting



Fixing brackets (1) are included with delivery.

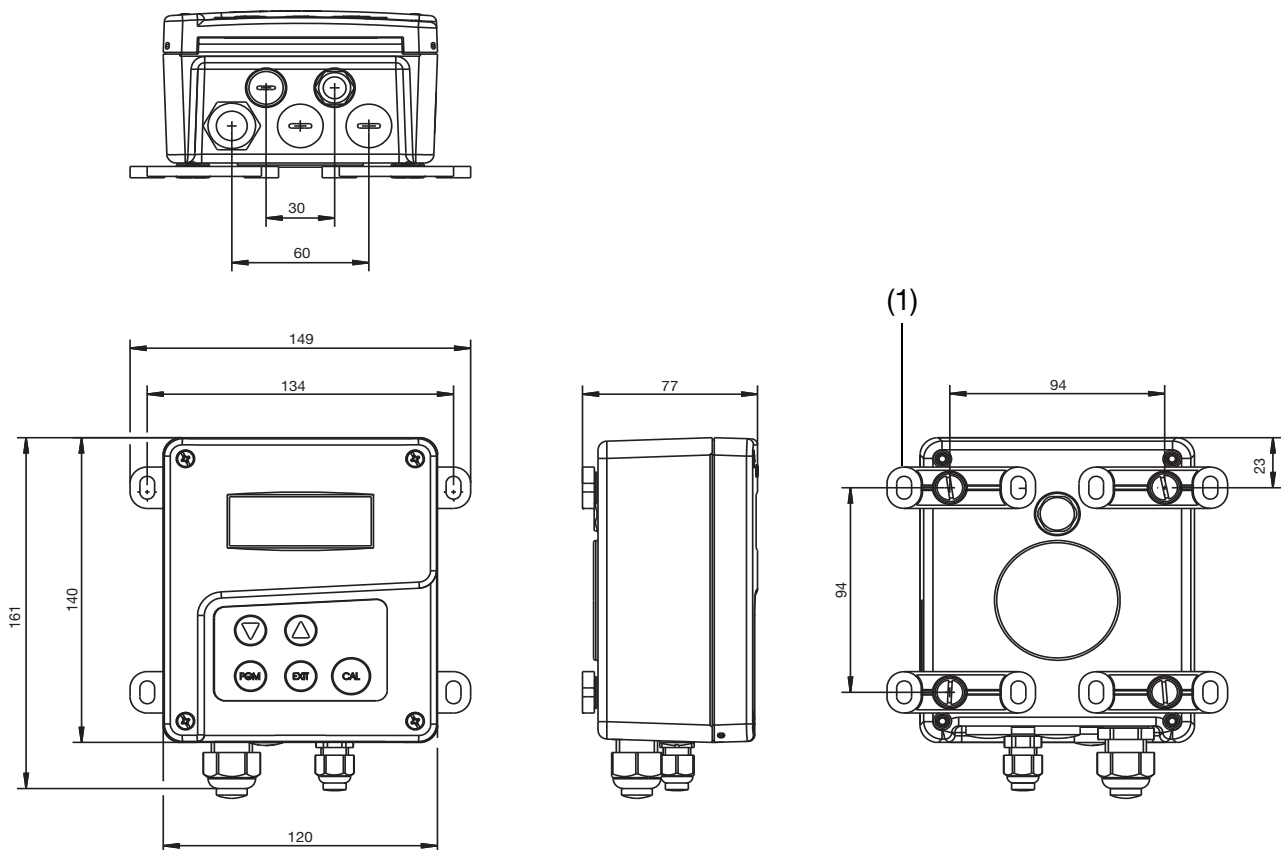


- \* Screw four fixing brackets (1) onto the enclosure.  
The fixing brackets can be turned in increments of 90°.
- \* Fasten the enclosure onto the fixing brackets (with screws, plugs, etc.) on a surface or plate.

## 4 Mounting

---

### 4.3 Pipe installation set / weather protection roof

The pipe installation set for JUMO AQUIS 500 (part no.: 00483664) can be used to fasten the device (and optionally the protective roof for JUMO AQUIS 500, part no.: 00398161) onto pipes or railings with a diameter from 30 to 50 mm.

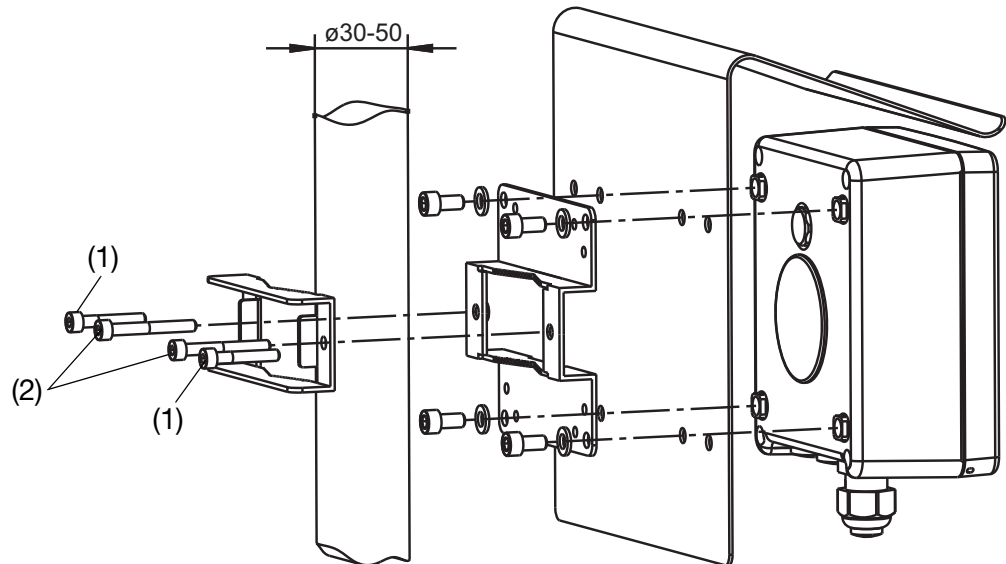

Screws (1) M5 x 30 for pipe diameters from 30 to 40 mm.


Screws (2) M5 x 40 for pipe diameters from 40 to 50 mm.

The pipe installation set is also suitable for horizontal pipes.

---

### 4.4 DIN rail installation set

The DIN rail installation set for JUMO AQUIS 500 (part no.: 00477842) can be used to attach the device to a 35 mm x 7.5 mm DIN rail as defined in DIN EN 60715 A.1.

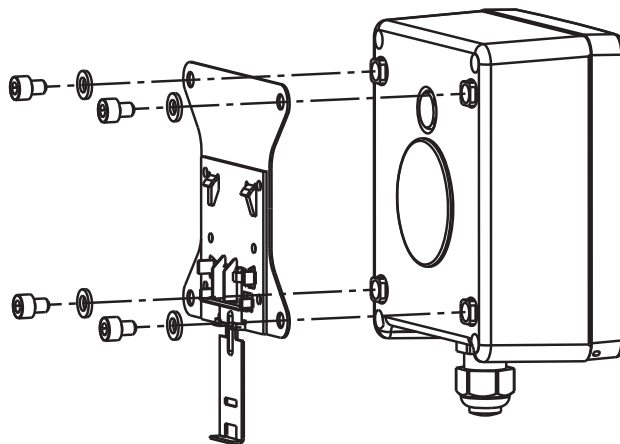


### 4.5 Mounting in a panel



Drilling template See section 12.2 "Panel cut-out", page 103.

The panel must be sufficiently thick to achieve the specified IP65 enclosure protection!

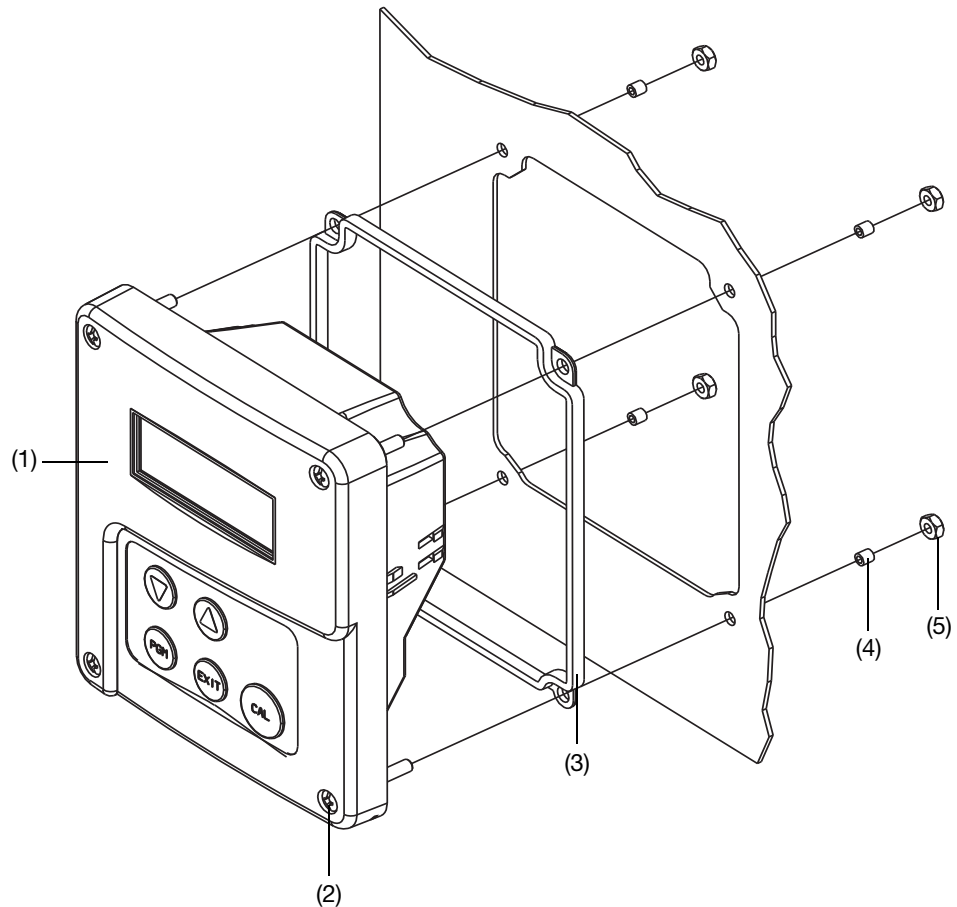


- \* Prepare the panel cut-out and holes based on the drill template.
- \* Place the control panel (1) with gasket (2) in the panel cut-out and fasten it with screws (2) spacing rollers (4) and nuts (5).



To ensure electrical safety, the cable cover must be mounted, see next page!

## 4 Mounting


---

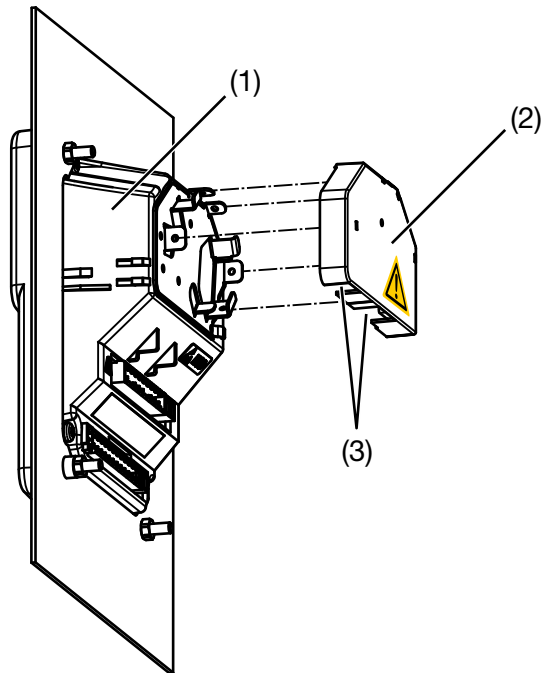

- \* Make the electrical connection.
- \* Break off the required flap(s) (3) from the cable cover (2) so that the cable can be laid in the cable path.
- \* Attach the cable cover (2) onto the control panel (1).

---

### Depth behind panel

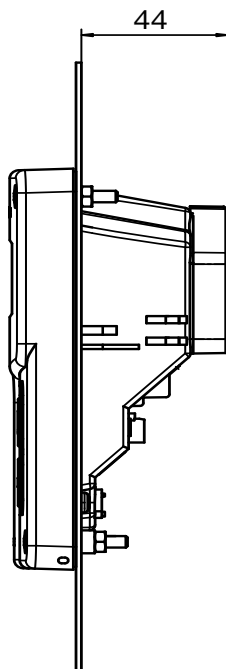

## 5.1 Installation notes



**The electrical connection must only be carried out by qualified professional persons !**

---

The choice of cable, the installation and the electrical connection must conform to the requirements of VDE 0100 "Regulations on the Installation of Power Circuits with Nominal Voltages below 1000 V" or the appropriate local regulations. **Only flexible cables and wires shall be used!**

---

If contact with live parts is possible while working on the device, it must be completely disconnected from the electrical supply.

---

Load circuits must be fused for the maximum relay current in each case, in order to prevent welding of the relay contacts in the event of a short circuit.

---

The electromagnetic compatibility conforms to EN 61326.

---

Run input, output and supply cables separately and not parallel to one another.

---

Use shielded sensor cables with twisted conductors. Do not run these cables close to current-carrying components or cables. Ground shielding at one end.

---

Sensor leads should be implemented as uninterrupted cables (not routed via terminal blocks etc.).

---

Do not connect any additional loads to the supply terminals of the device.

---

The device is not suitable for use in areas with an explosion hazard (Ex areas).

---

Apart from faulty installation, incorrect settings on the device may also affect the proper functioning of the subsequent process or lead to damage. Safety devices independent of the device should therefore always be provided and should only be capable of adjustment by specialist personnel.

---

### Conductor cross-sections and core-end ferrules

#### Fitting sizes


	Minimum cross-section	Maximum cross-section	Min. length of core-end ferrule
<b>Without core-end ferrule</b>	0.34mm <sup>2</sup>	2.5mm <sup>2</sup>	10mm (stripped)
<b>Core-end ferrule, no lip</b>	0.25mm <sup>2</sup>	2.5mm <sup>2</sup>	10mm
<b>Core-end ferrule, lip up to 1.5mm<sup>2</sup></b>	0.25mm <sup>2</sup>	1.5mm <sup>2</sup>	10mm
<b>Core-end ferrule, lip above 1.5mm<sup>2</sup></b>	1.5mm <sup>2</sup>	2.5mm <sup>2</sup>	12mm
<b>Twin ferrule with lip</b>	0.25mm <sup>2</sup>	1.5mm <sup>2</sup>	12mm



The IP67 enclosure protection for the device will only be achieved if not more than one cable per cable fitting is led into the device.

# 5 Electrical connection

## 5.2 Electrical isolation

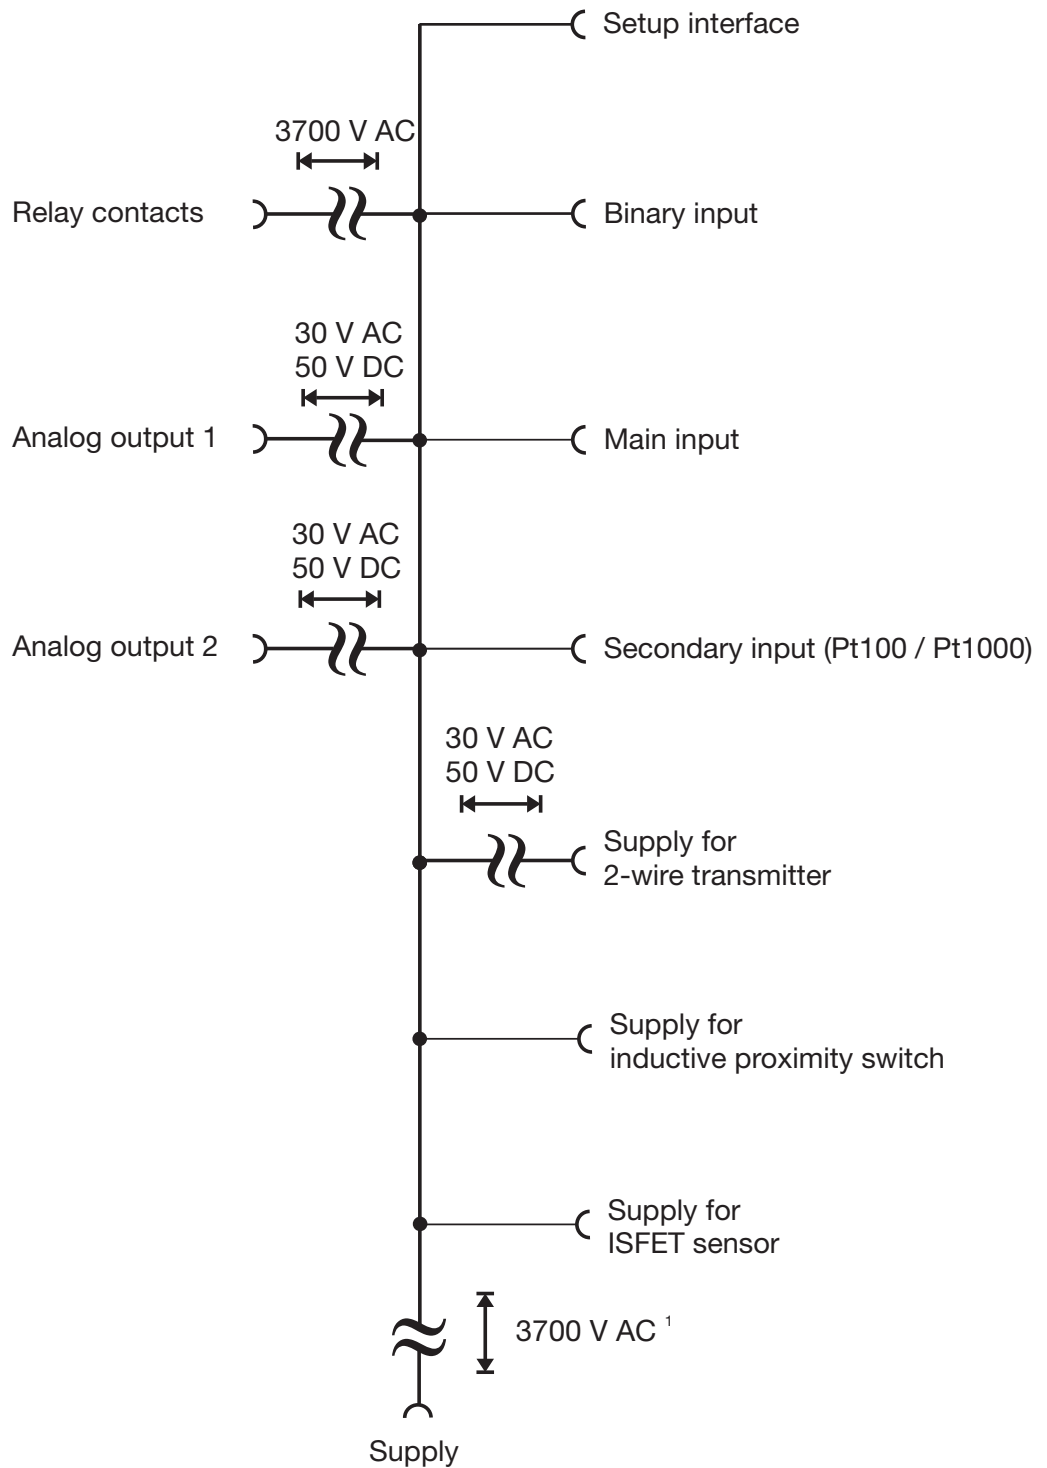

<sup>1</sup> Not with 12 – 24 VDC supply voltage



### 5.3 Preparatory work



#### Opening the device

- \* Prior to opening, loosen all cable fittings (2) so that the cables are moveable.
- \* Push connection cable a little into the case so that enough cable reserve is available for opening.
- \* Loosen the 4 front-panel screws (1) of the case lid and pull them out as much as possible.
- \* Pull the lid to the front and then fold to the front. The user needs to be able to easily open the lid. Do not use force while opening!


#### Closing the device

- \* When closing the device, pull the connecting cables to the outside while the cable fittings are in a released state and make sure that the lines in the inside of the device run properly. Pay attention to the corresponding sheathing measurement to ensure strain relief and protection type (IP67) of the cable fitting.
- \* The user must be able to close the lid with the 4 screws without a high degree of pressure.
- \* Tighten cable fittings.

## 5 Electrical connection

### 5.4 Connection of pH / ORP combination electrodes


#### Fabricating the connecting cable

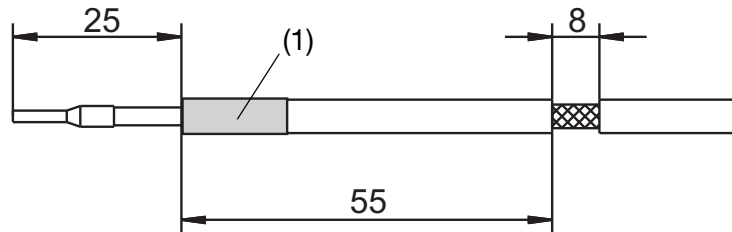

- \* Strip the cable as shown in the diagram.
- \* Insulate the exposed shielding with a shrink-sleeve (1), to prevent short-circuits.
- \* Apply core ferrules to the ends of the conductors.  
Core ferrule dimensions see Chapter 5.1 "Installation notes", page 15.

#### Connecting the cables

The electrical connection for the surface-mountable housing is easily accessible when the device is folded out.

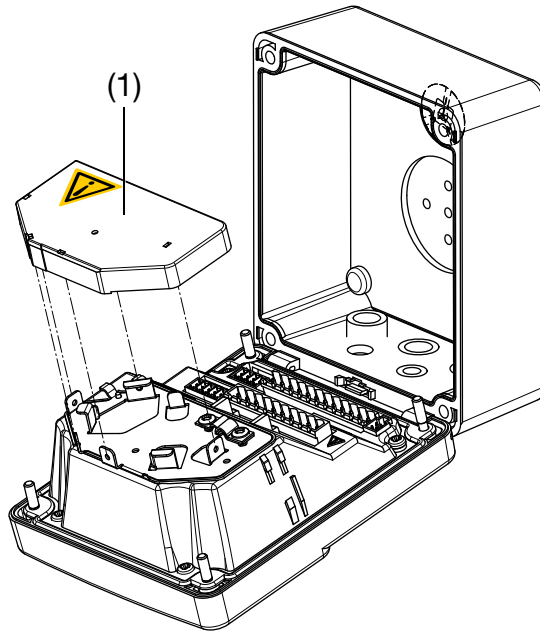

The connection cable between sensor and transmitter must be a shielded cable with a diameter of 8 mm max.

The device contains a guide plate that ensures an optimum cable path. **After laying the cables, the cable cover (1) must be attached until it clicks, like shown above. This is important to ensure the electrical safety!**


The sensor cables are run to the plug-in screw terminals and must have a strain relief.



The cable clip (3) must **only** be screwed down (see next page) by a 3.5x6.5 pan head screw! A longer screw may cause a hazardous voltage to be contacted to the shielding!


## 5 Electrical connection

### Asymmetrical connection of a combination electrode (standard)

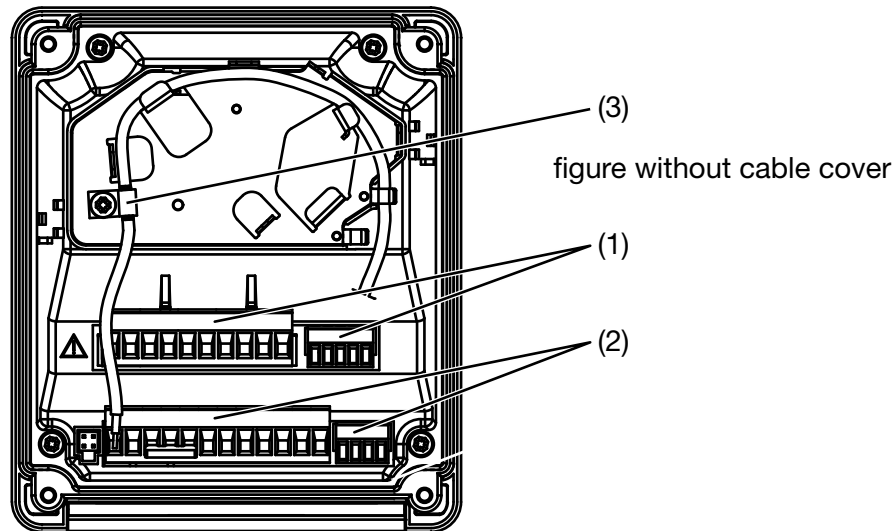

- \* Lead the connecting cables in through the cable fittings.
- \* Lay the signal cable as shown in the diagram. Use the cable clip (3) to clamp the signal cable to the shielding.
- \* Break off the required flap(s) from the cable cover so that the cable can be laid in the cable path. Attach the cable cover.
- \* Connect the cores as assigned below, and see Chapter 5.5 "Terminal assignments", page 22.
- \* Push the plug-in terminals for row 1 (1) and row 2 (2) into the sockets in the device.


### Sensor connection

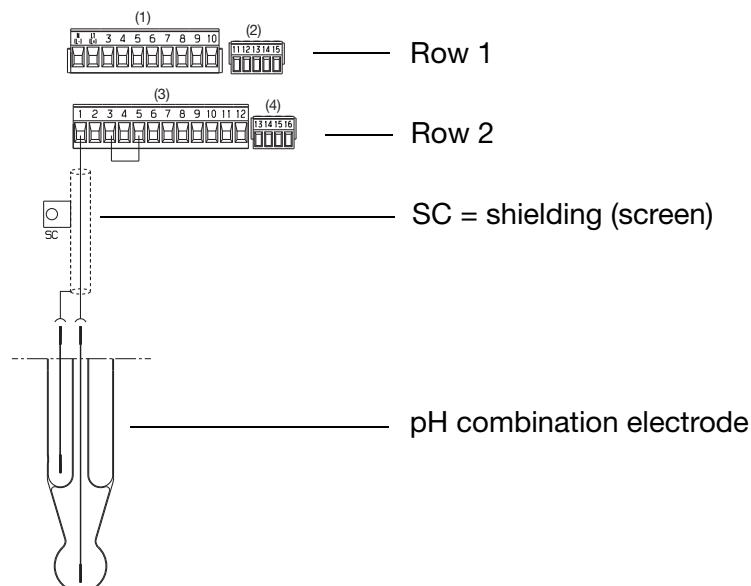

In environments with difficult EMC conditions, a coaxial cable with a double shielding must be used. A shielded 2-core cable is required for connecting the temperature probe.


## 5 Electrical connection

### Asymmetrical connection of a combination electrode with integrated temperature sensor (VarioPin)

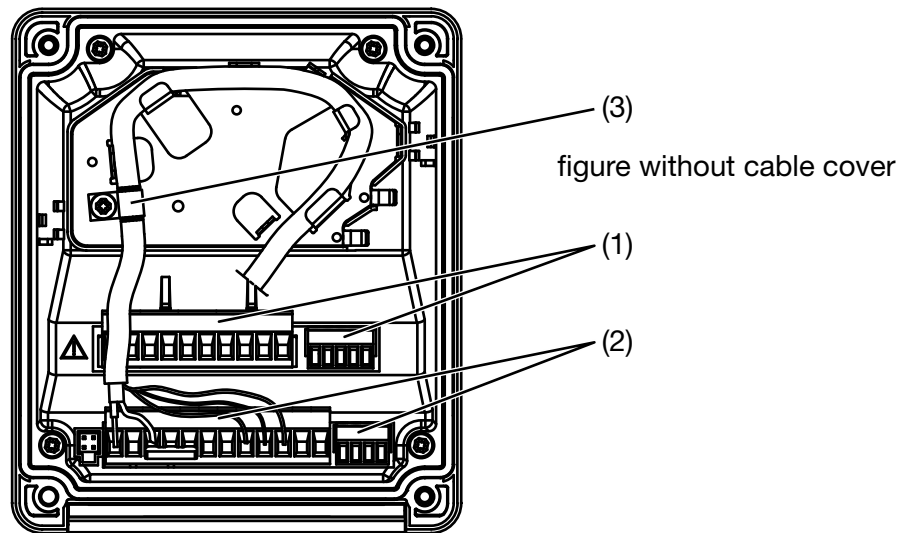

- \* Lead the connecting cables in through the cable fittings.
- \* Lay the signal cable as shown in the diagram. Use the cable clip (3) to clamp the signal cable to the shielding.
- \* Break off the required flap(s) from the cable cover so that the cable can be laid in the cable path. Attach the cable cover.
- \* Connect the cores as assigned below, and see Chapter 5.5 “Terminal assignments”, page 22.
- \* Push the plug-in terminals for row 1 (1) and row 2 (2) into the sockets in the device.


#### Sensor connection

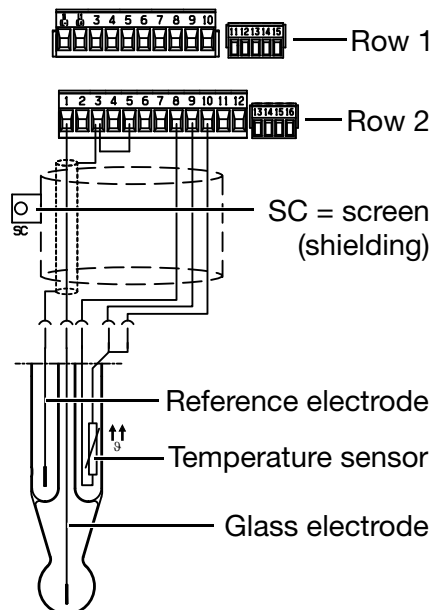

VarioPin (VP) connecting cable assignment			
Pin VP	Color	Function	Device terminal (Row 2)
1	trans-parent	Glass electrode	1
2	red	Reference electrode	3
3	grey	Temperature sensor three-wire	10
4	blue	--	--
5	white	Temperature sensor	8
6	green	Temperature sensor	9
7	green/yellow	Shielding	SC (on guide plate)


## 5 Electrical connection

### Symmetrical connection of a combination electrode with separate temperature sensor

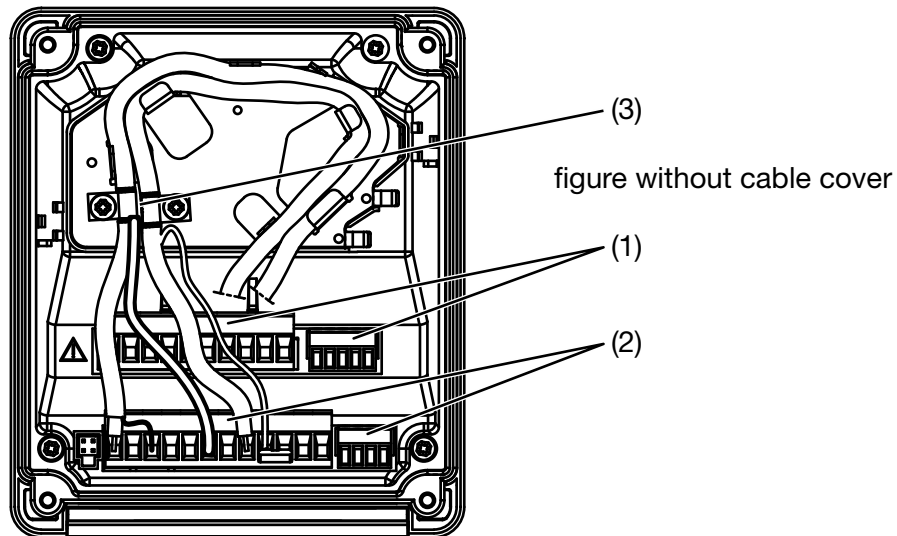

- \* Lead the connecting cables in through the cable fittings.
- \* Lay the signal cables as shown in the diagram. Use the cable clips (3) to clamp each signal cable to the shielding.
- \* Break off the required flap(s) from the cable cover so that the cable can be laid in the cable path. Attach the cable cover.
- \* Connect the cores as assigned below, and see Chapter 5.5 "Terminal assignments", page 22.
- \* Push the plug-in terminals for row 1 (1) and row 2 (2) into the sockets in the device.





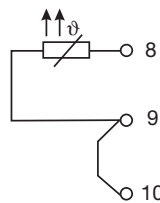
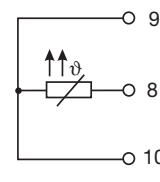

### Sensor connection

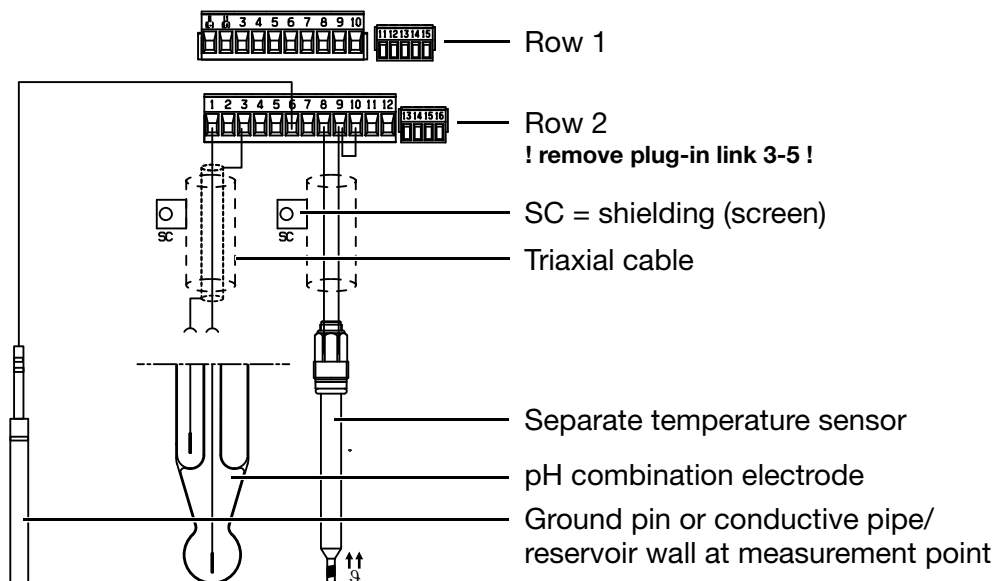



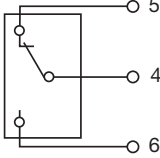
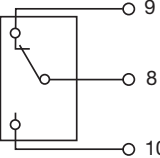
In environments with difficult EMC conditions, a coaxial cable with a double shielding must be used. A shielded 2-core cable is required for connecting the temperature probe.

## 5 Electrical connection

### 5.5 Terminal assignments



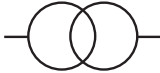
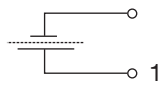
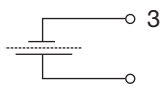
Connection		Screw terminals	Row
<b>Supply voltage</b>			
Supply voltage (23): 110 – 240 V AC -15/+10%, 48 – 63 Hz		1 N (L-)	1
Supply voltage (25): 20 – 30 V AC/DC, 48 – 63 Hz		2 L1 (L+)	
Supply voltage (30): 12 – 24 V DC +/-15% (permissible only for connection to SELV/PELV circuits)			
NC		3	
NC		7	
NC		14	
NC		15	
<b>Inputs</b>			
Glass/metal electrode		1	2
NC		2	
Reference electrode		3	
NC		4	
GND With asymmetrical connection for pH measurement Link terminals 3 and 5 (Accessory: large plug-in link)		5	
FP (liquid potential) With symmetrical connection for pH measurement		6	
NC		7	
RTD in 2-wire circuit (Accessory: small plug-in link)		8 9 10	
RTD in 3-wire circuit		8 9 10	
Binary input		11 12	

## 5 Electrical connection

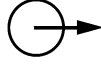Connection		Screw terminals	Row
<b>Outputs</b>			
Analog output 1 0 – 20 mA resp. 20 – 0 mA or 4 – 20 mA resp. 20 – 4 mA or 0 – 10 V resp. 10 – 0 V (electrically isolated)	+  -	+ 13 - 14	2
Analog output 2 0 – 20 mA resp. 20 – 0 mA or 4 – 20 mA resp. 20 – 4 mA or 0 – 10 V resp. 10 – 0 V (electrically isolated)	+  -	+ 15 - 16	
Switching output K1 (floating)		pole 4 break (SPST-NC) 5 make (SPST-NO) 6	1
Switching output K2 (floating)		pole 8 break (SPST-NC) 9 make (SPST-NO) 10	

## 5 Electrical connection

### 5.6 ISFET-pH combination electrode according to data sheet 20.1050

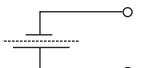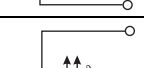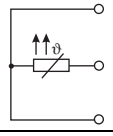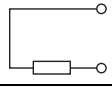Connection		Color	Screw terminals	Row
		Cap-adapter	JUMO AQUIS 500 pH	
<b>Supply voltage for ISFET sensor</b>				
Supply voltage DC $\pm$ 5 V, 5 mA	+  -	blue black green	11 L+ 12 $\perp$ 13 L-	1
<b>pH sensor</b>				
Sensor		white / black	1	2
Reference		screen	3 + 5 linked	
RTD in 3-wire circuit		white red red / black	10 9 8	
<b>Parallel resistance 4.53 k<math>\Omega</math></b>				
<b>only</b> in conjunction with process connection 615!		red / black red	8 9	2



The orange core of the cap adapter is not connected!

The TEMPERATURE INPUT / SENSOR TYPE / CUSTOMIZED parameter must be configured for process connection 615!



### 6.1 Controls

---



(1) Transmitter

(3) Control panel


(2) LC display

---

## 6 Operation


### 6.2 LC display

#### 6.2.1 Measurement mode (normal display)

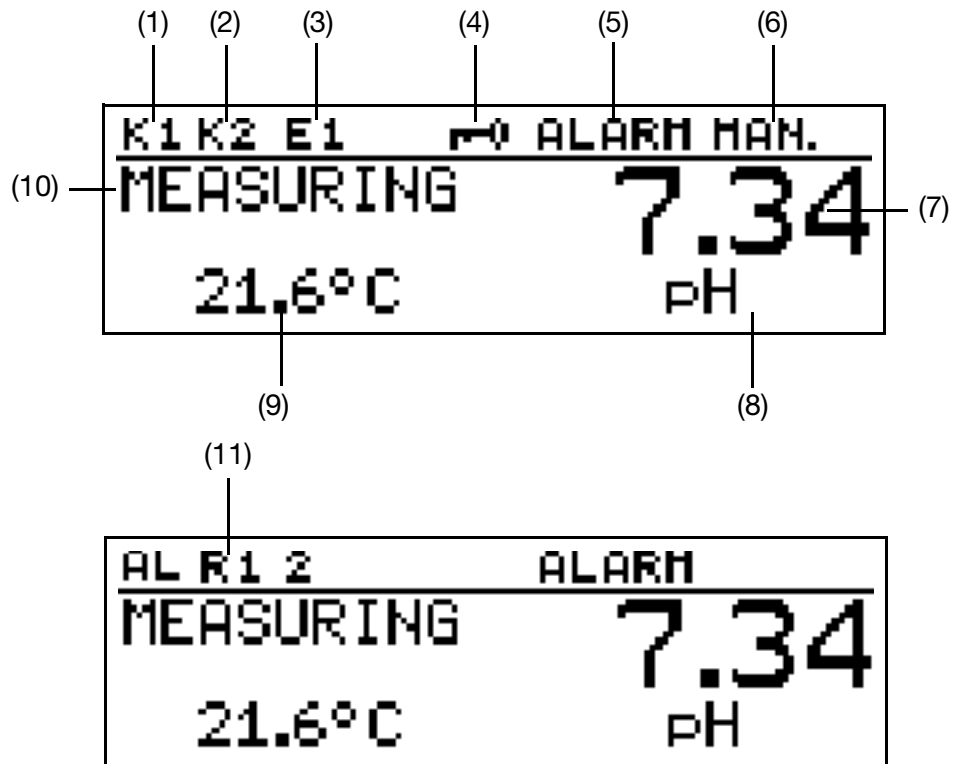


- |   |   |
|---|---|
| (1) Relay K1 is active  | (6) Output mode<br>- Hand (manual operation)<br>- Hold (Hold operation)                             |
| (2) Relay K2 is active<br>or<br>AL R1 = alarm, relay K1<br>AL R2 = alarm, relay K2<br>ALR12 = alarm, relay K2+K2  | (7) Measurement   |
| (3) Binary input 1 is activated   | (8) Unit  |
| (4) Keypad is inhibited   | (9) Temperature of medium   |
| (5) Device status (indications)<br>- Alarm (e.g overrange)<br>- Calib. blinking (calibration timer run down)<br>- Calib. (customer calibration is active) | (10) Operating mode   |
|   | (11) ALR1 = alarm, controller 1<br>ALR2 = alarm, controller 2<br>ALR12 = alarm, controllers 1 and 2 |



In order to return to the measurement mode from another display mode:  
Press the  key or wait for the timeout.


## 6.3 Principle of operation

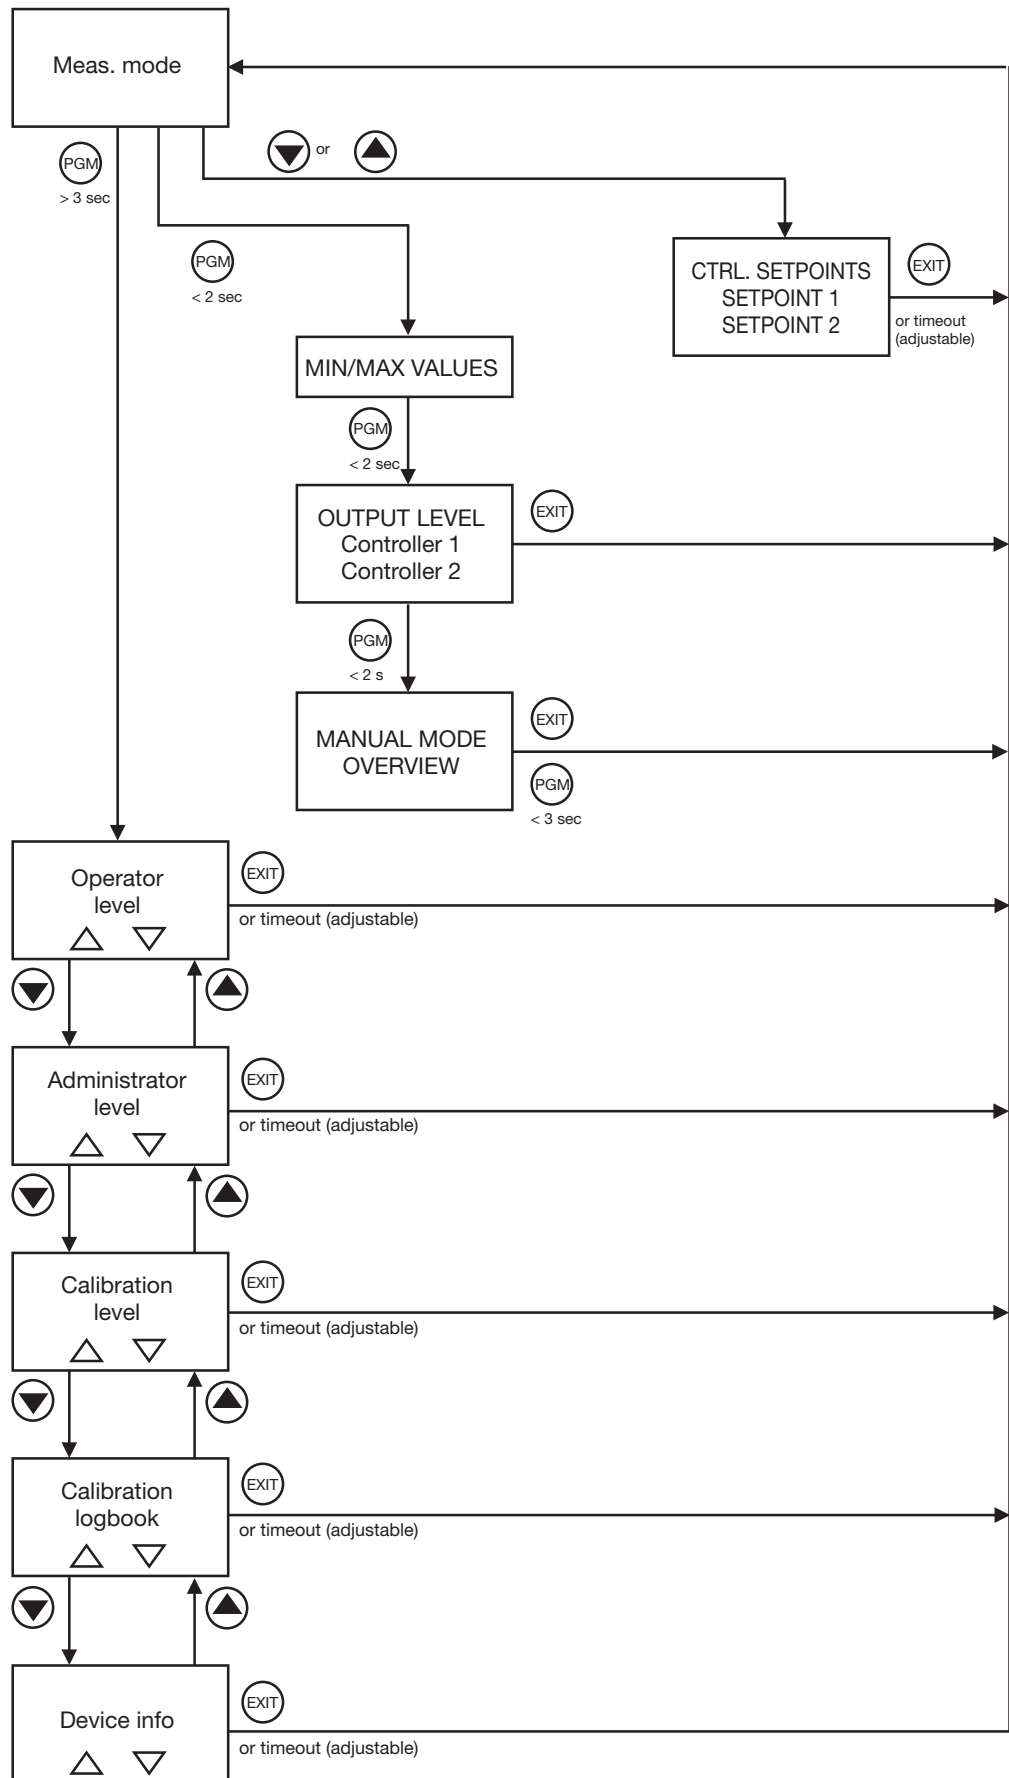

# 6 Operation

## 6.3.1 Operation in levels

Measurement mode (normal display); see Chapter 6.4 "Measurement mode", page 30

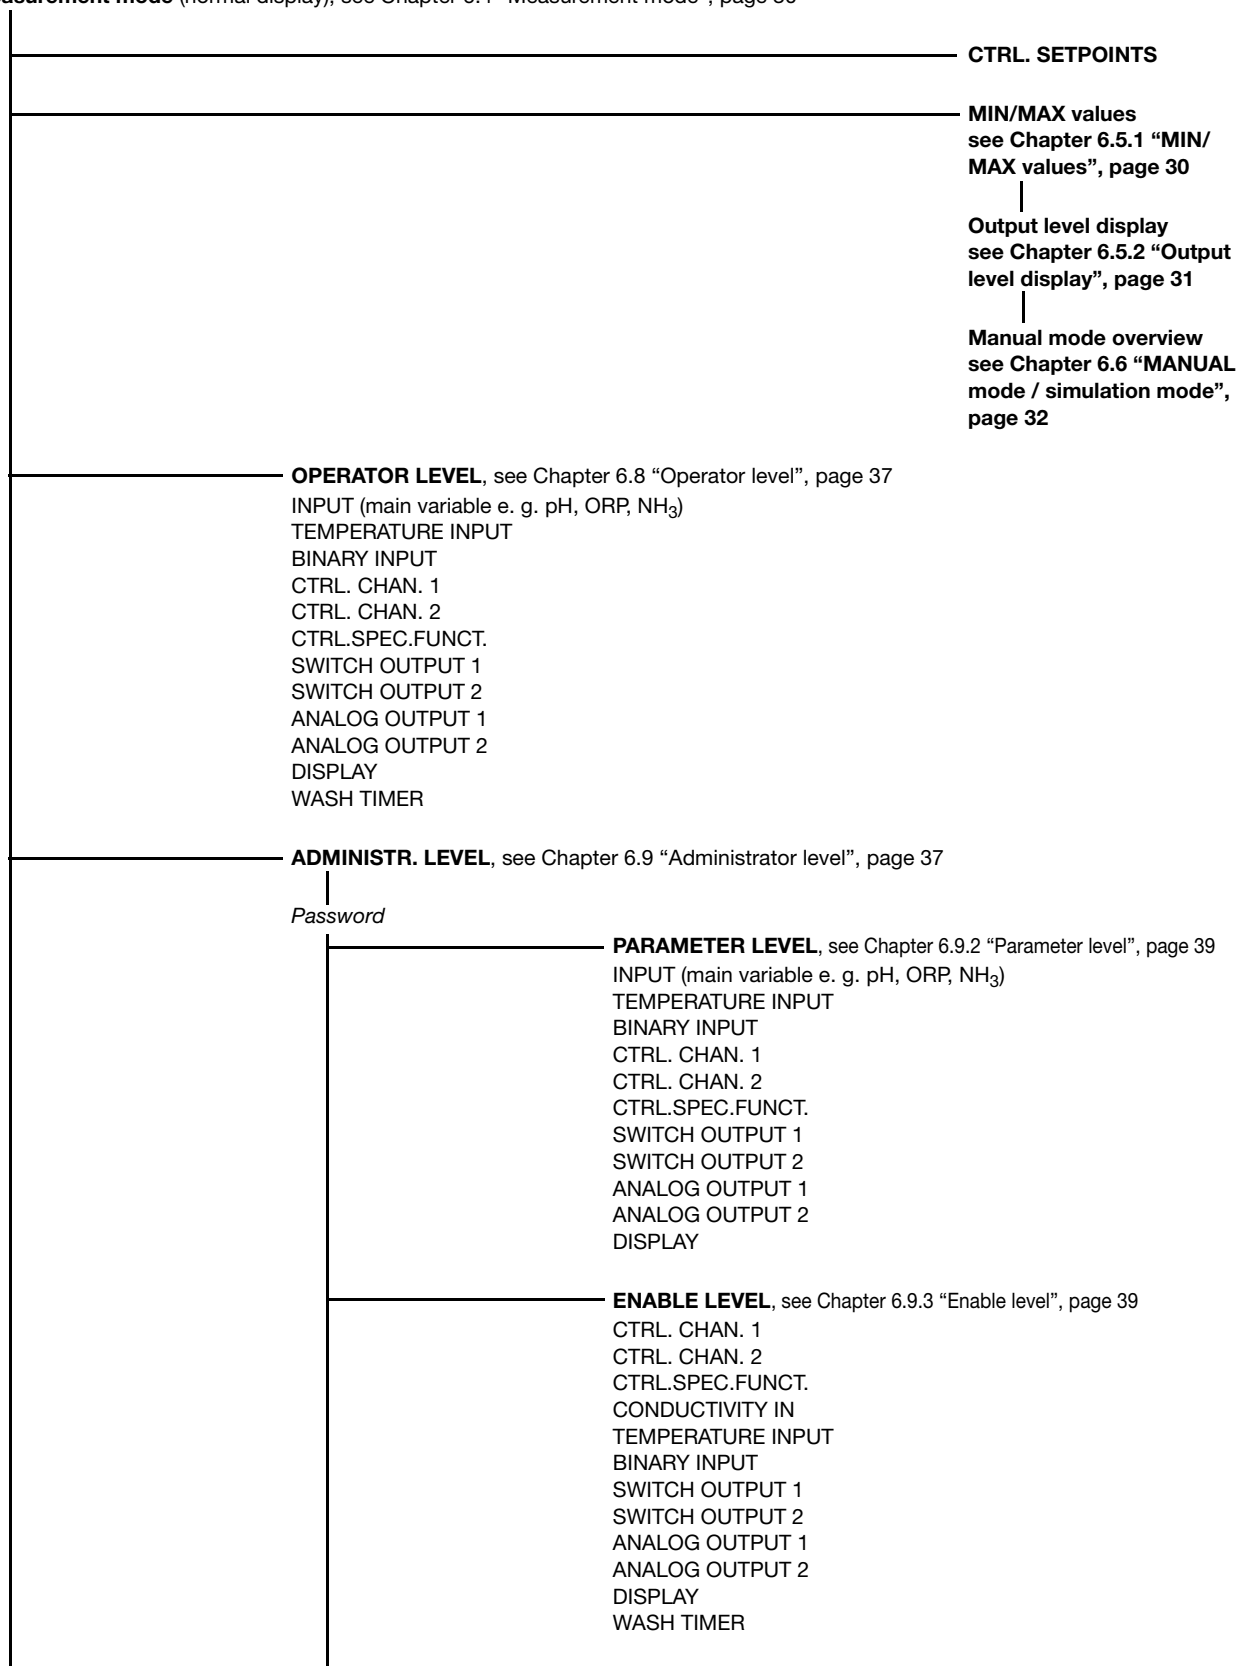

Measurement mode

ADMINISTRATOR LEVEL

**BASIC SETTINGS**, see Chapter 6.9.4 "Basic settings", page 41

SENSOR  
MONIT. REF.  
MONIT. GLASS EL.  
RE-INITIALIZE DEVICE

**CALIB. LEVEL**, see Chapter 6.9.5 "Calibration level", page 42

1-POINT CALIB.  
2-POINT CALIB.  
3-POINT CALIB.

**CALIB. ENABLE**

ENABLE  
1-POINT CALIB.  
ENABLE  
2-POINT CALIB.  
ENABLE  
3-POINT CALIB.

**DELETE LOGBOOK**

REALLY DELETE LOGBOOK?

**CALIB. LEVEL**

1-POINT CALIB.  
2-POINT CALIB.  
3-POINT CALIB.

**CALIB. LOGBOOK**

**DEVICE INFO**

SENSOR  
MONIT. REF.  
MONIT. GLASS EL.


## 6 Operation

---

### 6.4 Measurement mode

#### 6.4.1 Normal display

**Presentation** The compensated pH value and temperature of the medium are shown in normal display.

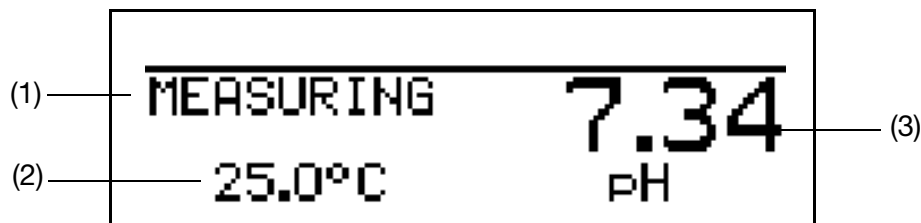

- (1) MEASURE -> Measurement mode
- (2) 25.0°C -> Temperature of the sample medium
- (3) 7.34 pH-> pH of the medium (compensated for the reference/ comparison temperature – usually 25°C)




In measurement mode, the display types “Trend display” and “Bar graph” can also be selected. see “MEAS. DISPLAY TYPE”, page 92

---


### 6.5 Input/output information

#### 6.5.1 MIN/MAX values

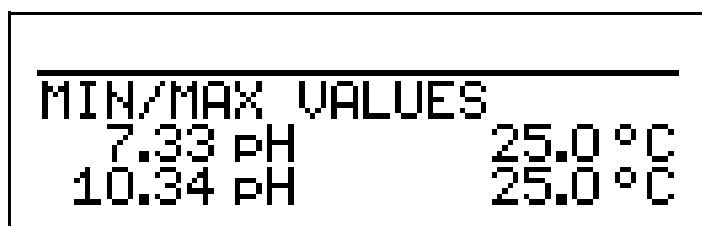

**Activating the display of MIN/MAX values**

The device is in the measurement mode (normal display).

- \* Press the  key for less than 2 seconds. Minimum and maximum values of the pH, ORP or NH<sub>3</sub><sup>-</sup> (ammonia) concentration and temperature are displayed.
-



The values for the main measurement and temperature are **not** allocated to one another (e. g. the max. value of the main variable was 7.33 pH and 25.0°C the max. temperature value).

In order to return to the measurement mode:

Press the **EXIT** key or wait for the timeout.

Measurements with overrange will be ignored.

Pressing the **PGM** key briefly again accesses the “Output level display” mode.

The MIN/MAX value memory can be reset: Operator level / Display / MIN/MAX value memory / Yes, see Chapter 11.1 “Operator level parameters”, page 84ff.

If you change the basic setting, or in the event of a power-down, the MIN and MAX values will be deleted.

---

### 6.5.2 Output level display

```
OUTPUT LEVEL
CONTROLLER 1    0%
CONTROLLER 2    0%
```

The device is in the measurement mode (normal display).

- \* Press the **PGM** key for less than 2 seconds, twice.  
The output level for the two controller contacts will be indicated (if they are fitted).



In order to return to the normal display:

Press the **EXIT** key or wait for the timeout.


Pressing the **PGM** key again will access the mode for “Manual mode overview”.

---

# 6 Operation

## 6.6 MANUAL mode / simulation mode

These functions can be used to set the switching outputs and analog outputs of the device manually to a defined state. This facilitates dry startup, troubleshooting and customer service.

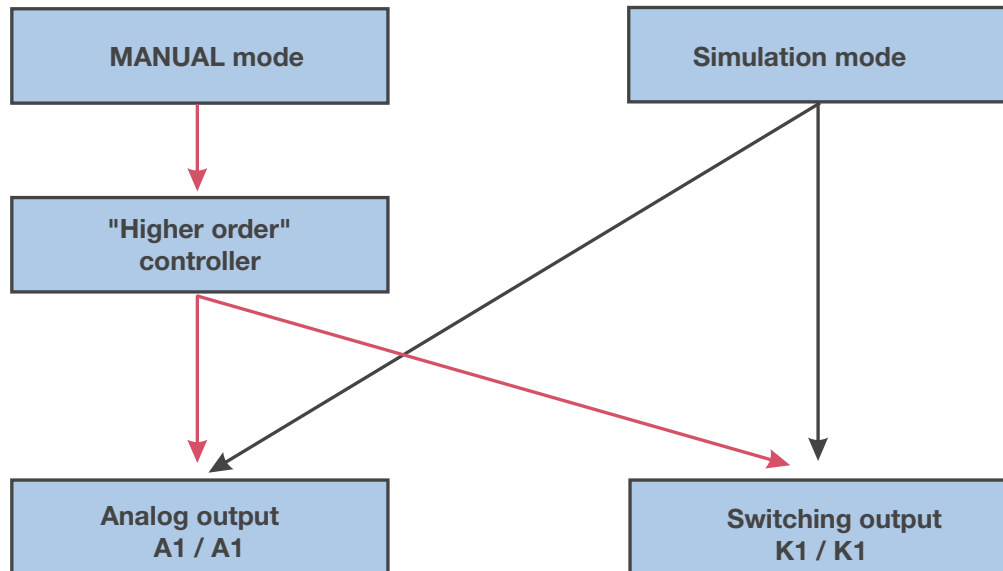

Simulation mode **directly** accesses switching outputs K1/2 or analog outputs 1/2. When simulation mode has been selected, MANUAL mode is **not** possible!

In MANUAL mode the settings for "higher order controllers" are taken into consideration.

### 6.6.1 MANUAL mode via "higher order control functions"

#### Higher order switching functions

The JUMO AQUIS 500 is configured for **higher order control functions** when the following setting is made:

User level / controller channel 1 or 2 / control type **Limit value or pulse length or pulse frequency or modulating or continuous controller**.

For the recommended procedure see Chapter 6.6.3 "Simulation of analog outputs via MANUAL mode", page 35.

In other configurations switching outputs K1 or K2 are switched.

#### Select manual mode





In the factory setting of the device the MANUAL mode parameter is disabled and can **only be activated by the administrator!**



This parameter must first be enabled for other users, see Chapter 6.9.3 "Enable level", page 39.

\* Set to Administrator level / Password / Parameter level / Special controller functions / Manual mode locked, **Momentary action** or **Switching**.





Locked = No manual mode, control via JUMO AQUIS 500.

Momentary = the outputs are active as long as the  or  key is pressed.  
action



Switching = the outputs are active if the  or  key is pressed. If the corresponding key is pressed again, the output becomes inactive again.

### Activate manual mode



The device is in display mode

\* Press the  and  keys for less than 2 seconds.  
The word MANUAL appears in the status line of the display.



If the  and  keys are pressed for longer than 3 seconds, the device goes into HOLD mode.

Then the outputs of the device respond according to the default settings.


To exit HOLD mode, press the  and  keys for longer than 3 seconds.

Control is no longer through the JUMO AQUIS 500. The output level of the controller channels is 0%.

Controller channel 1 is activated by the  key. In this case the output level of controller channel 1 is 100%.

Controller channel 2 is activated by the  key. In this case the output level of controller channel 2 is 100%.

### Deactivation


\* Press the  key.

Control is once again through the outputs of the device.

The word MANUAL appears in the status line of the display.

### Overview of MANUAL/ Simulation mode


You can display which outputs and/or controllers are in MANUAL mode.  
The device is in "normal display" mode.

Press the  key several times for less than 2 seconds (the number of times varies depending on the equipment and configuration of the device).

		MAN.
SWITCH. OUT	----	
ANALOG OUT	----	
CONTROLLER	1+2	MAN.


### Output level of controller channels

The device is in "normal display" mode

Press the  key several times for less than 2 seconds (the number of times varies depending on the equipment and configuration of the device).

## 6 Operation


---

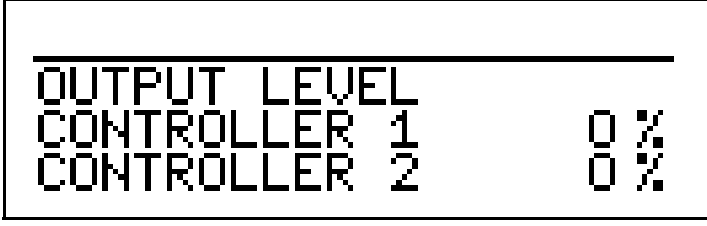

```
OUTPUT LEVEL
CONTROLLER 1    0%
CONTROLLER 2    0%
```

The display changes when the  key or the  key is pressed.



To return to measuring mode:  
press the  key or wait for a "timeout".





---

### 6.6.2 Simulation of switching outputs

#### Simple witching functions

The switching outputs are configured when the following setting is made:

Operator level / Controller channels 1 and/or 2 / Controller type **Off**  
**and**

Switching output 1 or 2 / function  or  or  or .

#### Activate simulation



In the factory setting of the device the MANUAL mode parameter is set to "No simulation" and can **only be activated by the administrator!**

This parameter must first be enabled for other users, see Chapter 6.9.3 "Enable level", page 39.

\* Set Administrator level / Password / Parameter level / Switching output 1 or 2 / Manual mode no simulation, **Inactive** or **Active**.

No simulation = No manual mode, control is via the JUMO AQUIS 500.

Inactive = Relay K1 or K2 is de-energized.

Active = Relay K1 or K2 is energized.

#### Deactivate manual mode

No simulation = No manual mode, control via JUMO AQUIS 500.

---

### 6.6.3 Simulation of analog outputs via MANUAL mode

#### Enabling and activation

- \* Select activation of simulation of the actual value output:  
Administrator level / Password / Parameter level / Analog output 1 or 2 / Simulation / Off or **On**.

With "On" the output takes on the value of the "Simulation value" parameter.  
When the JUMO AQUIS is in display mode, the word MANUAL appears in the status line of the display.

#### Deactivation


- \* Administrator level / Password / Parameter level / Analog output 1 or 2 / Simulation / Off.


The corresponding output of the JUMO AQUIS 500 works again.  
When the JUMO AQUIS is in display mode, the word MANUAL disappears from the status line of the display.

---

### 6.6.4 MANUAL/Simulation overview


You can display which outputs and/or controllers are in MANUAL mode.  
The device is in "normal display" mode

Press the  key several times for less than 2 seconds (the number of times varies depending on the equipment and configuration of the device).

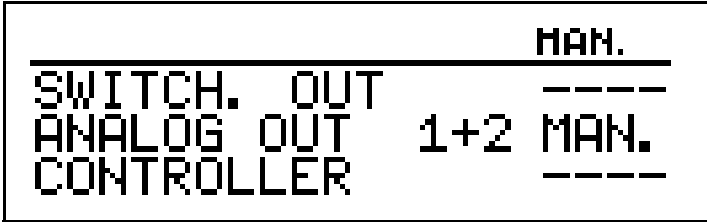

```
MAN.
-----
SWITCH. OUT
ANALOG OUT 1+2 MAN.
CONTROLLER  -----
```



To return to measuring mode:  
press the  key or wait for a "timeout".

---

# 6 Operation


---

## 6.7 HOLD mode

In HOLD status the outputs take on the states programmed in the relevant parameter (controller channel, switching output or analog output).

This function can be used to "freeze" switching outputs and the analog outputs of the device. This means the current status of the output will be retained even when the measured value changes. Control is not via the device.





If MANUAL mode is activated while HOLD mode is activated, MANUAL mode takes precedence and MANUAL then appears in the status line of the display! MANUAL mode can be terminated by pressing the  key.



If HOLD mode is still activated (by the binary input or by keyboard), the device then returns to HOLD mode!

HOLD mode can be activated by pressing the key or by the binary input.

### Activation by pressing key

- \* Press and hold the  and  keys longer than 3 seconds. Then the outputs of the device respond according to the default settings. The word HOLD appears in the status line of the display.





If the  and  keys are pressed for less than 3 seconds, the device goes into manual mode.

Then the outputs of the device respond according to the default settings.

### Pressing a key to deactivate HOLD mode

- \* Press the  and  keys for longer than 3 seconds.




If the  and  keys are pressed for less than 3 seconds, the device goes into Manual mode.


Then the outputs of the device respond according to the default settings.

Control is through the outputs of the device again. The word MANUAL disappears from the status line of the display.

---

### 6.8 Operator level

All the parameters that have been enabled by the administrator (Administrator level, see “Administrator level”, page 37) can be edited in this level. All other parameters (marked by a key ) can only be read.


- \* Press the  key for longer than 3 seconds.
- \* Select OPERATOR LEVEL.









For operator level parameters and their explanations, see Chapter 11.1 “Operator level parameters”, page 84 ff.

---

### 6.9 Administrator level

- All parameters can be edited (altered) in this level.
- In this level, you can also define which parameters can be edited (altered) by a “normal” user, and/or which calibration actions are permitted. Editable parameters can be edited in the operator level. Non-editable parameters are marked in the operator level by a key symbol .


You can access the administrator level as follows:

- \* Press the  key for longer than 3 seconds.
  - \* Use the  or  key to select ADMINISTRATOR LEVEL.
  - \* Use  or  to enter the password 300.
  - \* Press the  key.
-

# 6 Operation

---

## 6.9.1 Administrator levels

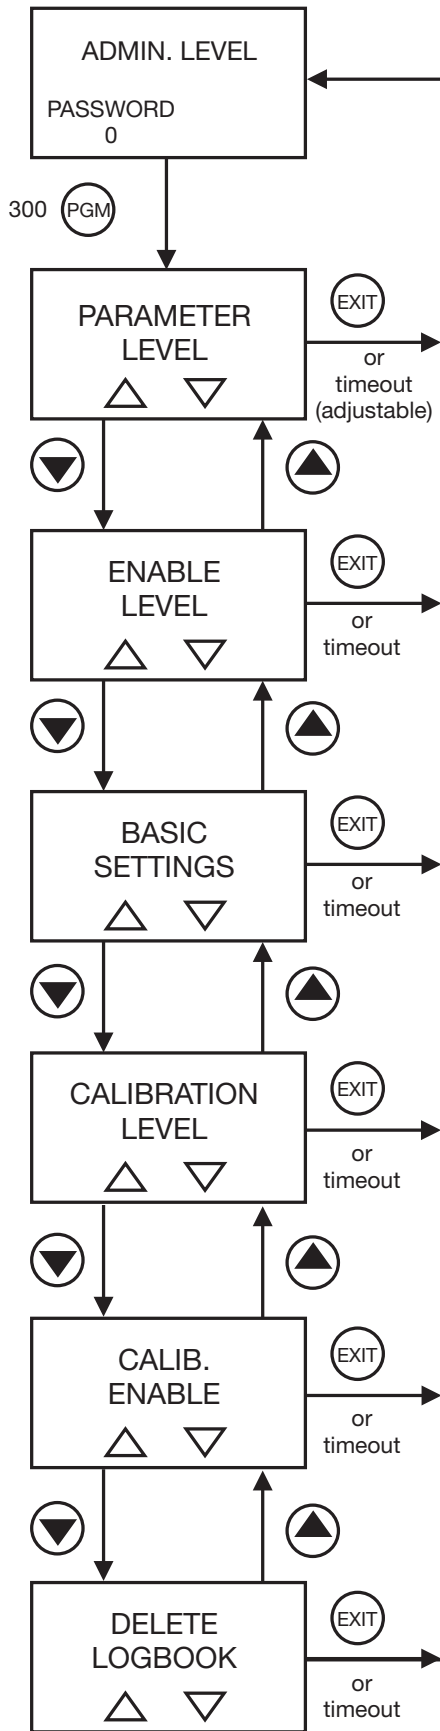

### 6.9.2 Parameter level

Here you can make the same settings as at the operator level. However, since the user has administrator rights in this case, parameters can also be altered that would be locked at the operator level.

For the list of adjustable parameters, see Chapter 6.8 “Operator level”, page 37ff.

---

### 6.9.3 Enable level

Here it is possible to enable (can be edited) or lock (cannot be edited) all the parameters.

The following section lists all the possible parameters. Some of these parameters may not be displayed on the device, depending on the configuration.

---

---

#### INPUT PH / ORP (pH, ORP, NH<sub>3</sub>- concentration)

Zero point  
Slope, acidic  
Slope, alkaline  
Monitoring of reference electrode  
Maximum impedance of reference electrode  
Monitoring of glass electrode  
Filter time constant  
Calibration interval

---

#### TEMPERATURE INPUT

Sensor type  
Unit  
Manual temperature  
Filter time constant  
Offset

---

#### BINARY INPUT

No function  
Key inhibit  
Hold operation  
Alarm Stop

---

#### CONTR. CHAN. 1 or CONTR. CHAN. 2

Controller type  
Setpoint  
MIN/MAX contact  
Proportional band  
Reset time  
Derivative time

---

## 6 Operation

---

Pulse period  
 Minimum ON time  
 Output level limit  
 Maximum pulse frequency  
 Hysteresis  
 Pull-in delay  
 Drop-out delay  
 Controller alarm  
 In Hold mode  
 In event of error  
 Max. process value  
 Min. process value

---

### CTRL.SPEC.FUNCT. (Special controller function)

I switch-off  
 Separate controllers  
 Manual mode

---

### SWITCH OUTPUT 1 or SWITCH OUTPUT 2

Function  
 Switching point  
 Pre-alarm  
 Spacing  
 Hysteresis  
 Switch-on delay  
 Switch-off delay  
 Pulse time  
 During calibration  
 Response to errors  
 Response to Hold mode  
 Response to manual mode  
 Break (SPST-NC) / make (SPST-NO) contact

---

### ANALOG OUTPUT 1 or ANALOG OUTPUT 2

Signal type  
 Scaling start  
 Scaling end  
 During scaling  
 In event of error  
 In manual mode  
 Safe value  
 Simulation  
 Simulation value  
 Signal selector

Output	Analog process value output		Continuous controller Principal measurement variable
	Principal measurement variable	Temperature	
1	X	-	X
2	-	X	X




---




## DISPLAY

Language  
 Lighting  
 LCD inverse  
 Meas. display type  
 Lower display  
 Upper display  
 Bar graph calibration start  
 Bar graph calibration end  
 MIN/MAX reset  
 Operator timeout  
 Contrast

### 6.9.4 Basic settings

The basic settings for the device are defined at this level. The parameters are altered by  and  keys. Use the  key to select the next parameter.

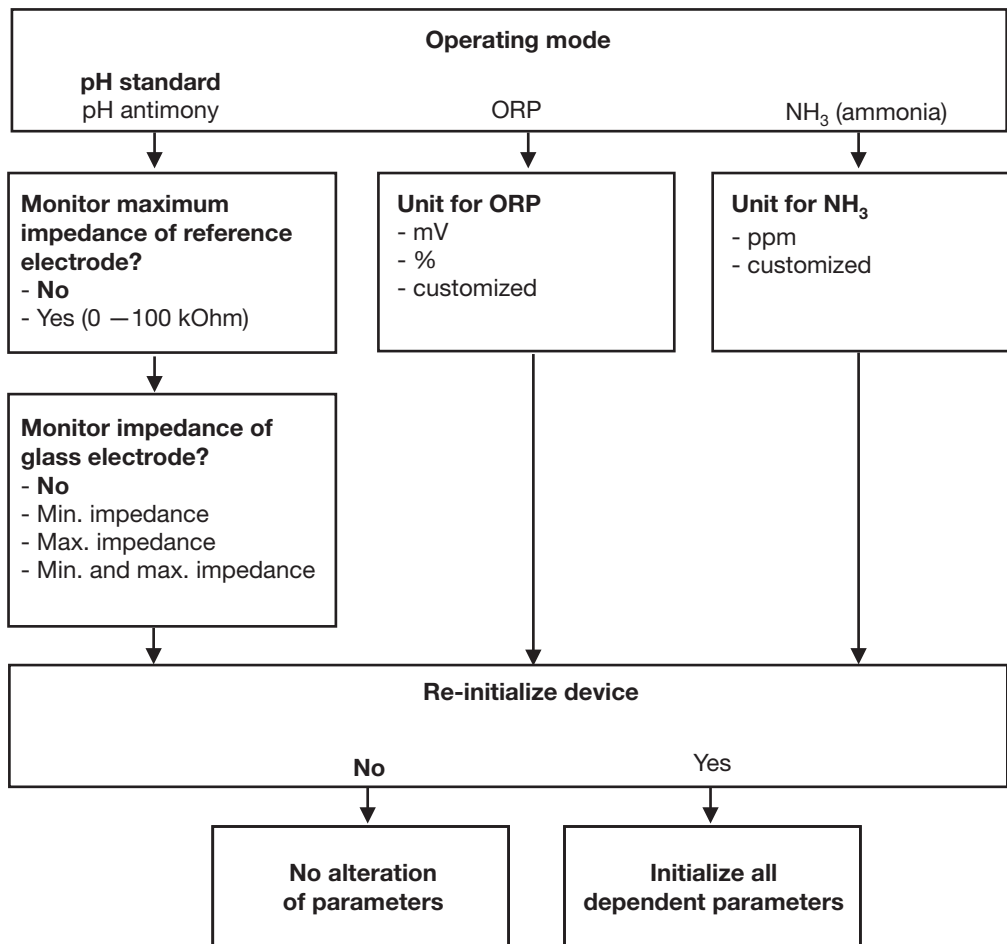

If you leave the "Basic settings" level with EXIT, all changes will be discarded and the previous settings will be restored.

## 6 Operation

---

### 6.9.5 Calibration level


---

#### 1-POINT CALIB. (1-point calibration)

Only the cell zero point is shifted in this case.

Slope errors are not taken into account.

This method can only be recommended with reservation.

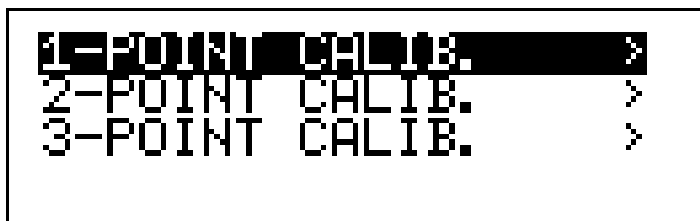


see Chapter 8 "Calibration", page 67ff.

---

#### 2-POINT CALIB. (2-point calibration)

Two measurements are used here to determine the zero point and slope of the cell.

This method should be given preference.

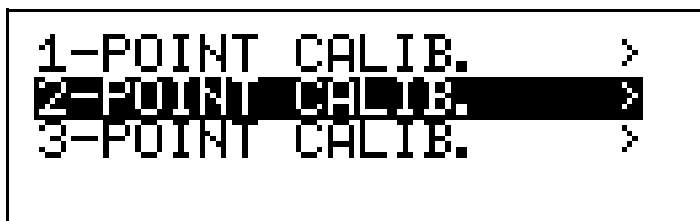

see Chapter 8 "Calibration", page 67ff.

---

#### 3-POINT CALIB. (3-point calibration)

Three measurements are used here to determine the zero point and slope of the cell.

This method should be used when errors are to be expected due to high acidity or alkaline levels.



see Chapter 8 "Calibration", page 67ff.

---

### 6.9.6 Enable calibration

Here you can decide whether to enable the parameter for alteration (calibration) or not.

1-POINT CALIB.  
2-POINT CALIB.  
3-POINT CALIB.

---

### 6.9.7 Delete logbook

REALLY DELETE LOGBOOK?

YES / NO

---

### 6.10 Device info



The present configuration for all important parameters is shown here, e.g.

SENSOR	-> PH STANDARD
MONIT. REF.	-> OFF
MONIT. GLASS EL.	-> OFF

---

### 6.11 Controller function

#### Simple switching functions

In the JUMO AQUIS 500, simple switching functions, such as alarm contacts and limit comparators or the signal from the calibration timer, are configured at the parameter level, through the parameters for "Switching output 1 or 2".

The parameters for the controller channel 1 or 2 respectively must then be set to "Off".

---

#### Higher-level control functions

Higher-level control functions are configured at the parameter level, through the parameters for "Controller channel 1 or 2".









The parameters for the controller channels must then be set to "Controller 1 or 2".

---

## 6 Operation

---

### Operator level parameters

Switching output 1 / 2	Explanation
none	no switching function and no control function required
Controller 1	the device should have the higher-level control
Controller 2	the device should have the higher-level control
Controller alarm 1 / 2 Controller alarm  main variable  main variable  main variable  main variable  Temperature  Temperature  Temperature  Temperature Sensor fault Calibration timer	“simple” switching functions
<b>Controller channel 1 / 2</b>	
Limit value Pulse width Pulse frequency Continuous Modulating	“higher-level” control functions
Off	must be selected if “simple” switching functions are required

## 7.1 Fast start



---

This is a recommendation for configuring the device reliably in a short time.

If you check the setting options from this list before starting the configuration, you can avoid timeouts during configuration.

---

- \* Mount the device, see Chapter 4 “Mounting”, page 11.
  - \* Install the device, see Chapter 5 “Electrical connection”, page 15 ff.
  - \* Call up the administrator level (ADMIN. LEVEL).
  - \* Enter 300 as the password.
  - \* Call up the parameter level (PARAMETER LEVEL).
  - \* Set the menu item OP. TIMEOUT to 0 min. (no timeout).
  - \* Leave the parameter level.
  - \* Select basic settings, and work through the entire list of menu items.
  - \* Answer the query “Re-initialize device” with YES.
  - \* Configure the parameters, see Chapter 11 “Appendix”, page 84, e. g. input temperature, analog outputs, controller functions, etc.
  - \* Calibrate the device for the sensor and sample medium.
-


# 7 Commissioning

## 7.2 Setup examples


### 7.2.1 Measurement of pH (standard sensor)

Range: 0 – 14 pH  
 Output signal: 0 – 20 mA  
 Temperature measurement: manual  
 Controller function: off  
 Sensor monitoring: off

Call up administrator level

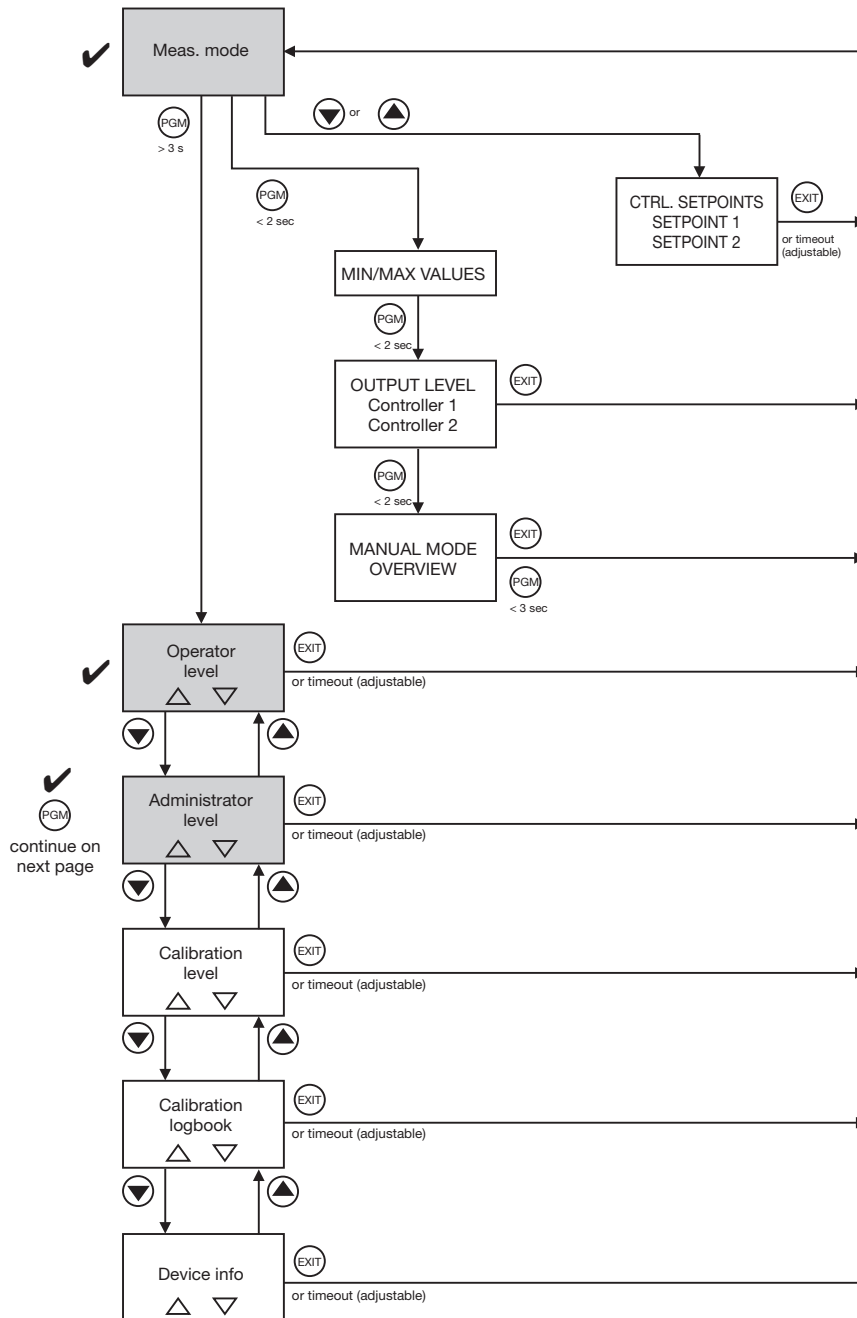


## Call up basic settings

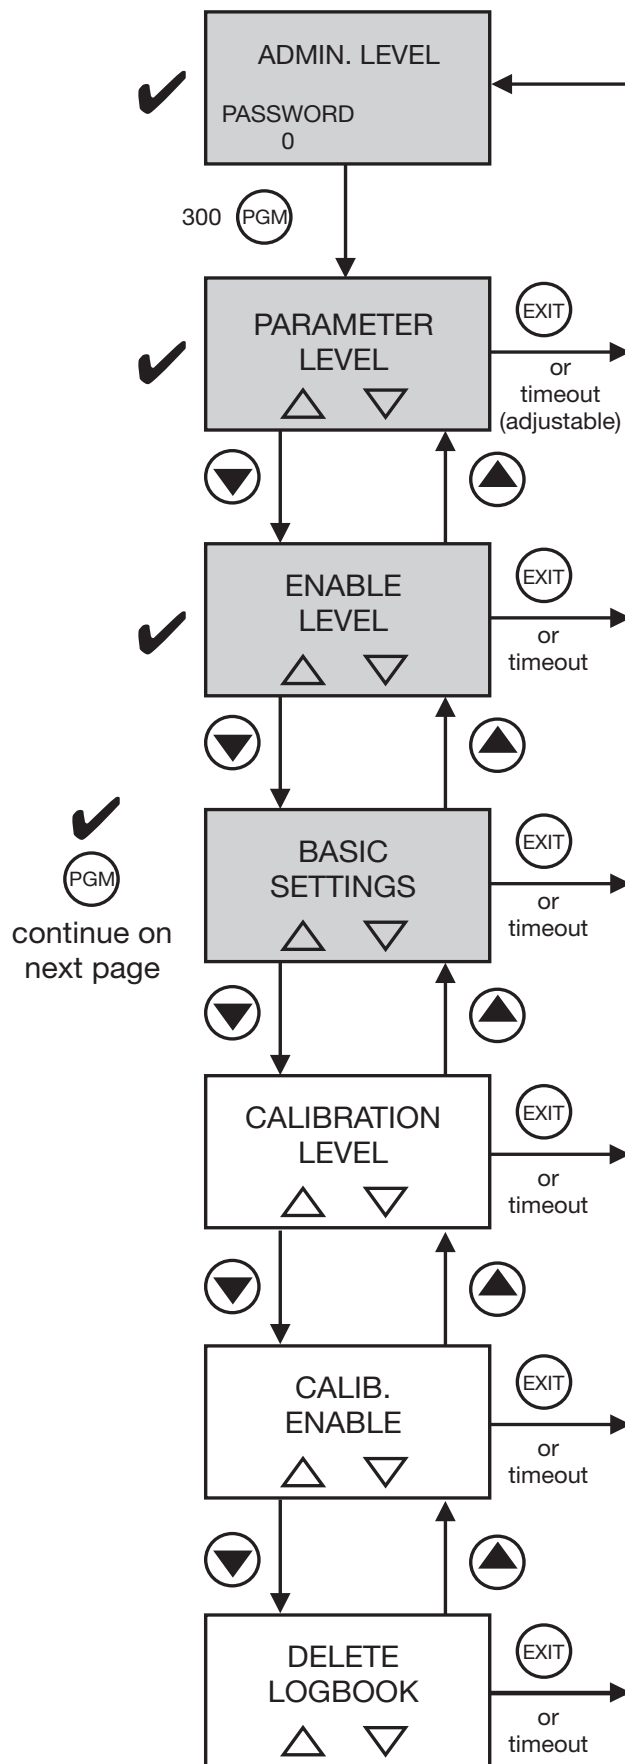


# 7 Commissioning

**Basic settings for the main input: procedure**

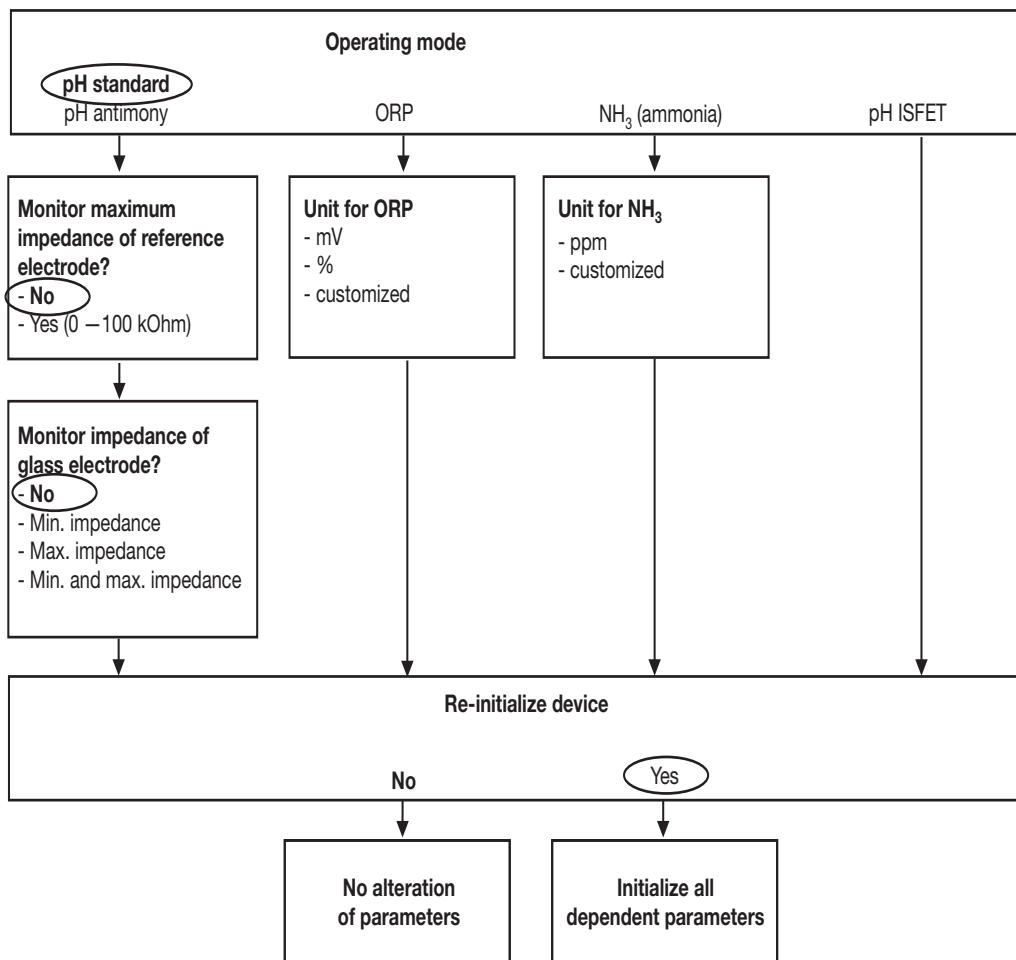



Call up the parameter level

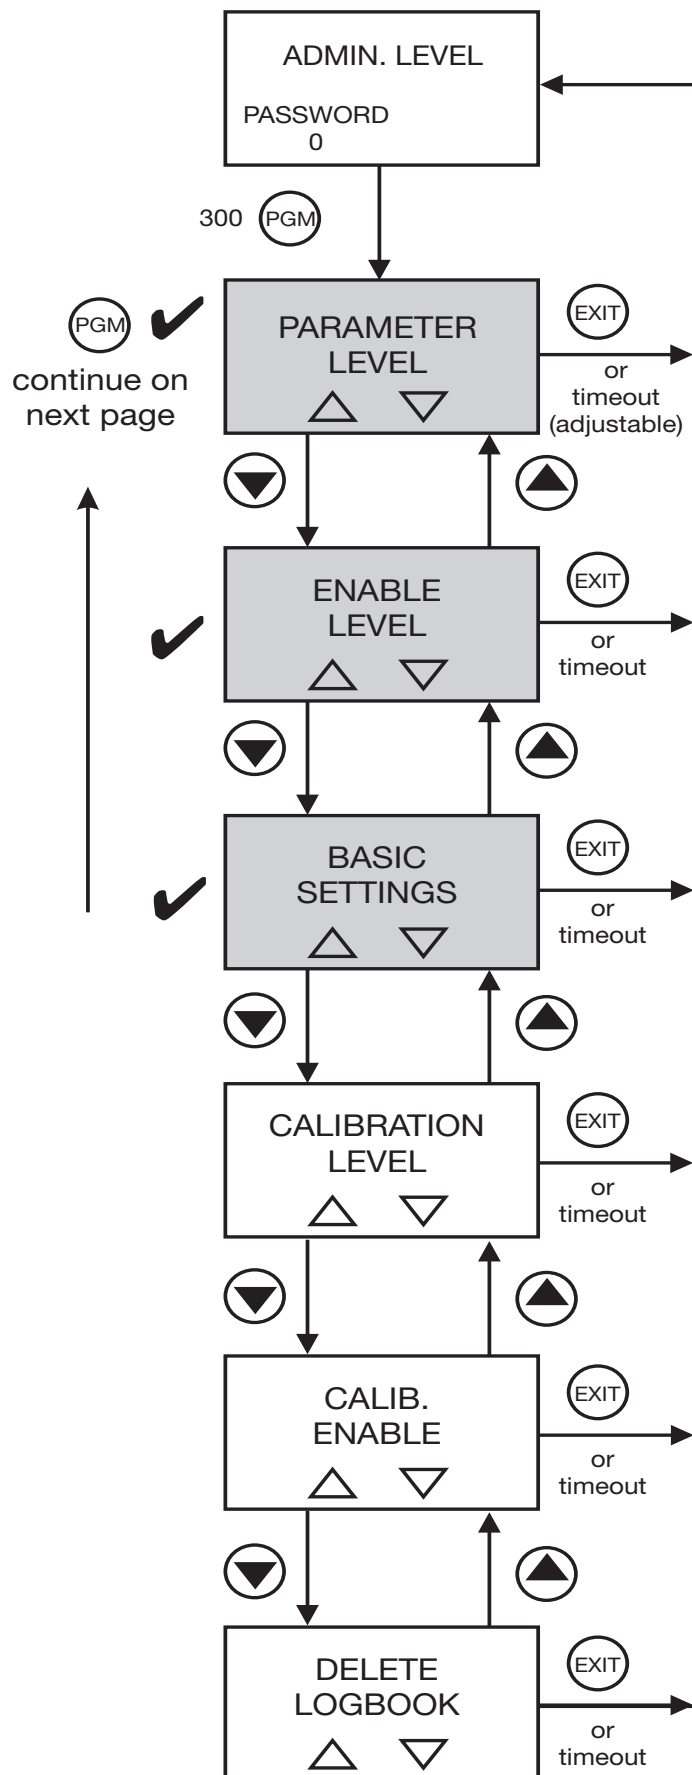

# 7 Commissioning

---

## Concluding device settings

---

### Input for temperature

Sensor type:	no sensor (manual)
Unit:	°C
Manual temperature:	25.0°C (present temperature of medium)
Filter time constant:	00:00:02

---

### Analog output 1


Signal selector:	Main value
Signal type:	0 – 20 mA
Scaling start:	0.00 pH
Scaling end:	14.00 pH

---

## 7.2.2 Measurement of pH (standard sensor)


Range:	2 – 12 pH
Output signal:	4 – 20 mA
Temperature measurement	by Pt100
Controller function:	pulse width controller
Setpoint 1:	pH 6.5
Setpoint 2:	pH 8.5
Sensor monitoring:	off

Call up administrator level

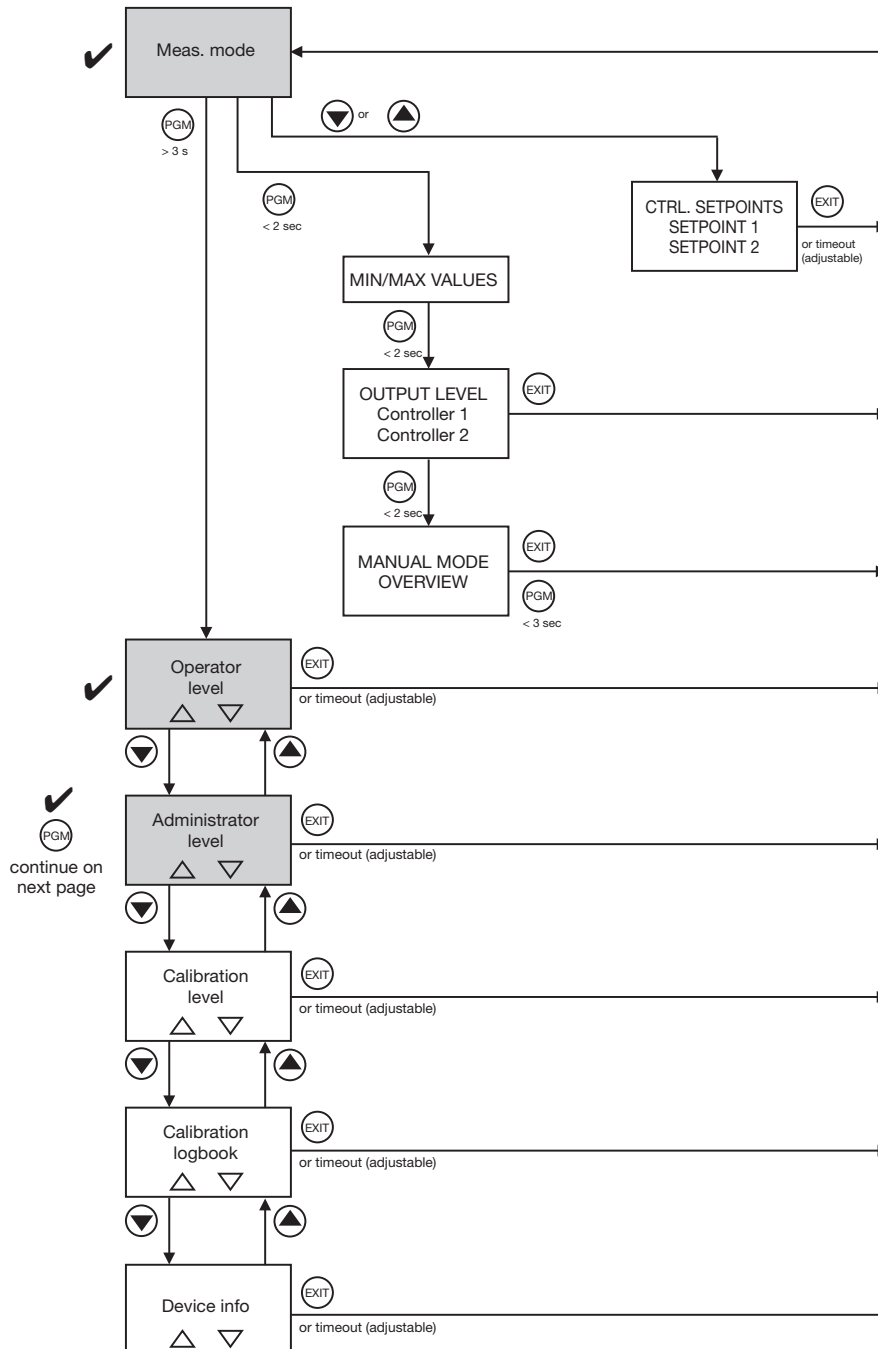


# 7 Commissioning

Call up basic settings

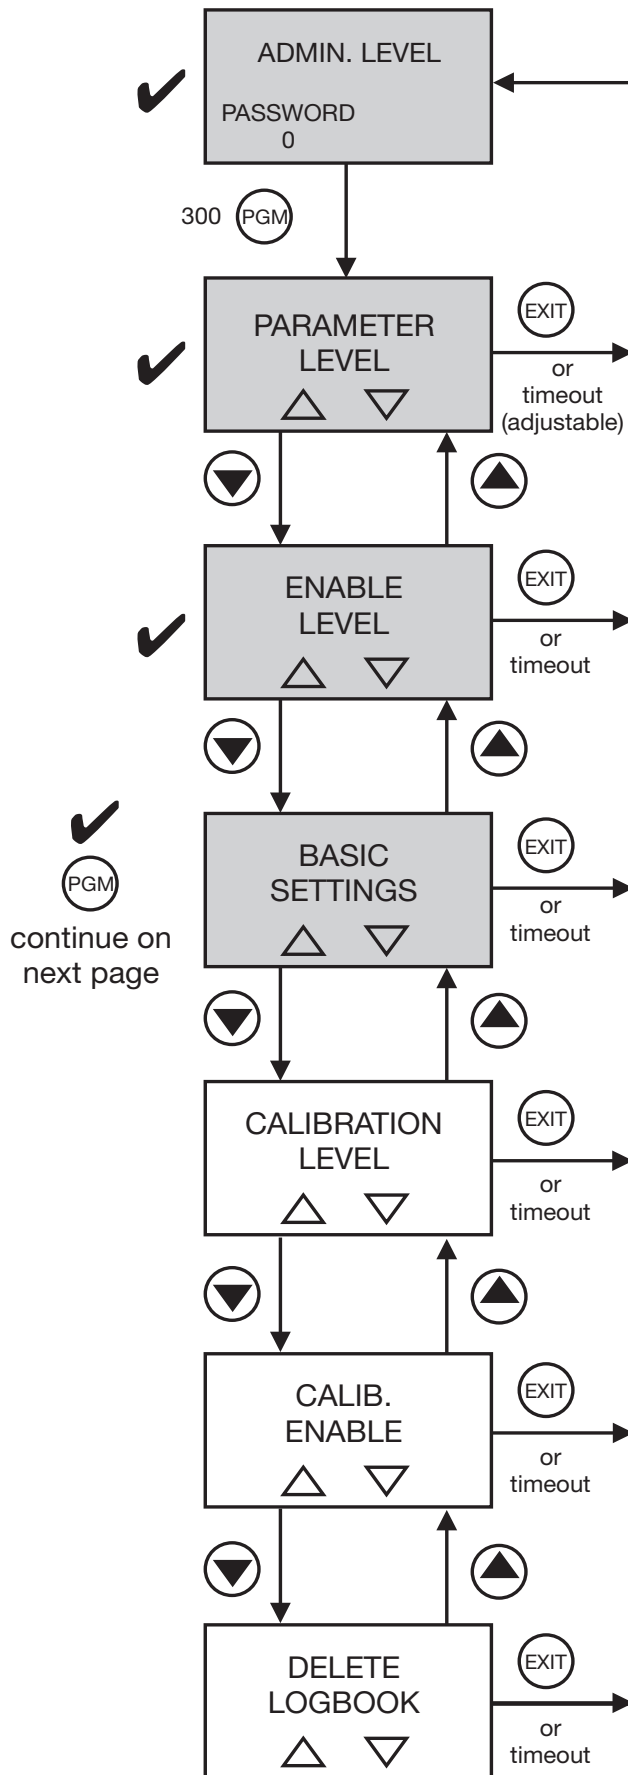


# 7 Commissioning

## Basic settings for the main input: procedure

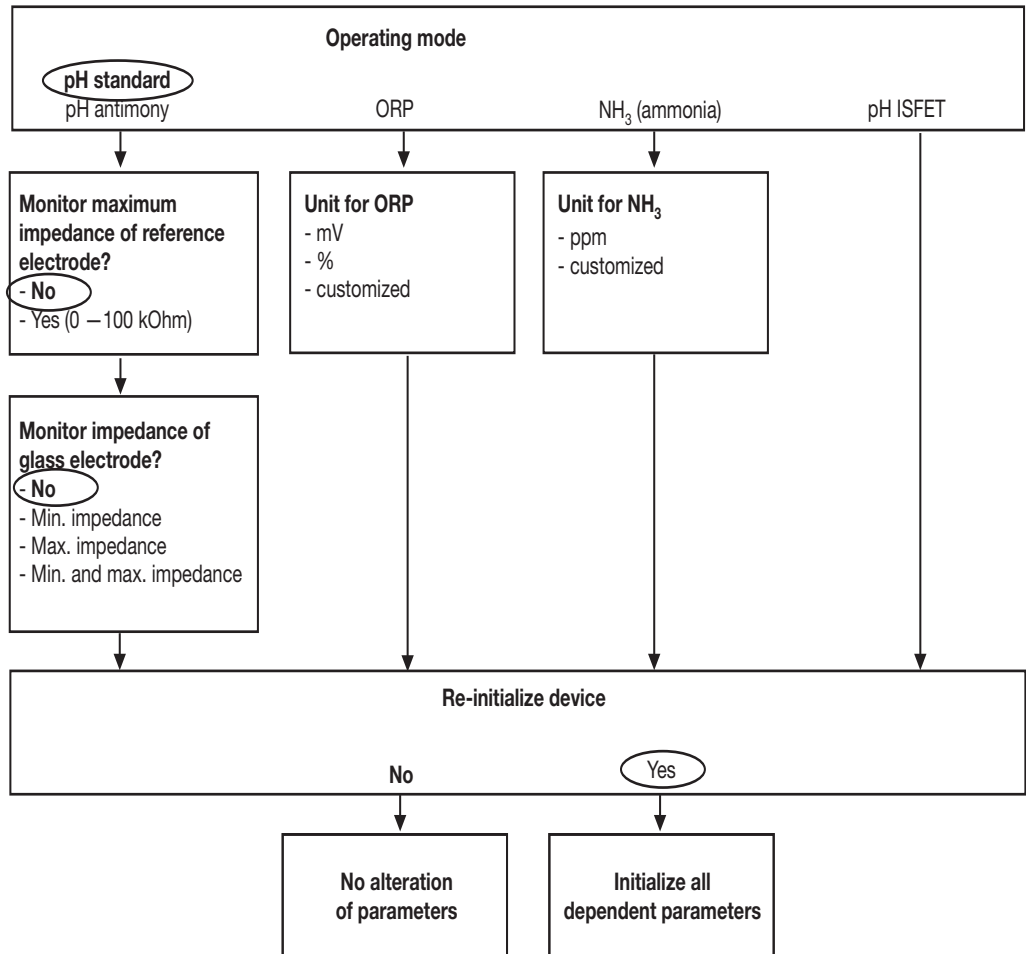

# 7 Commissioning

Call up  
parameter  
level

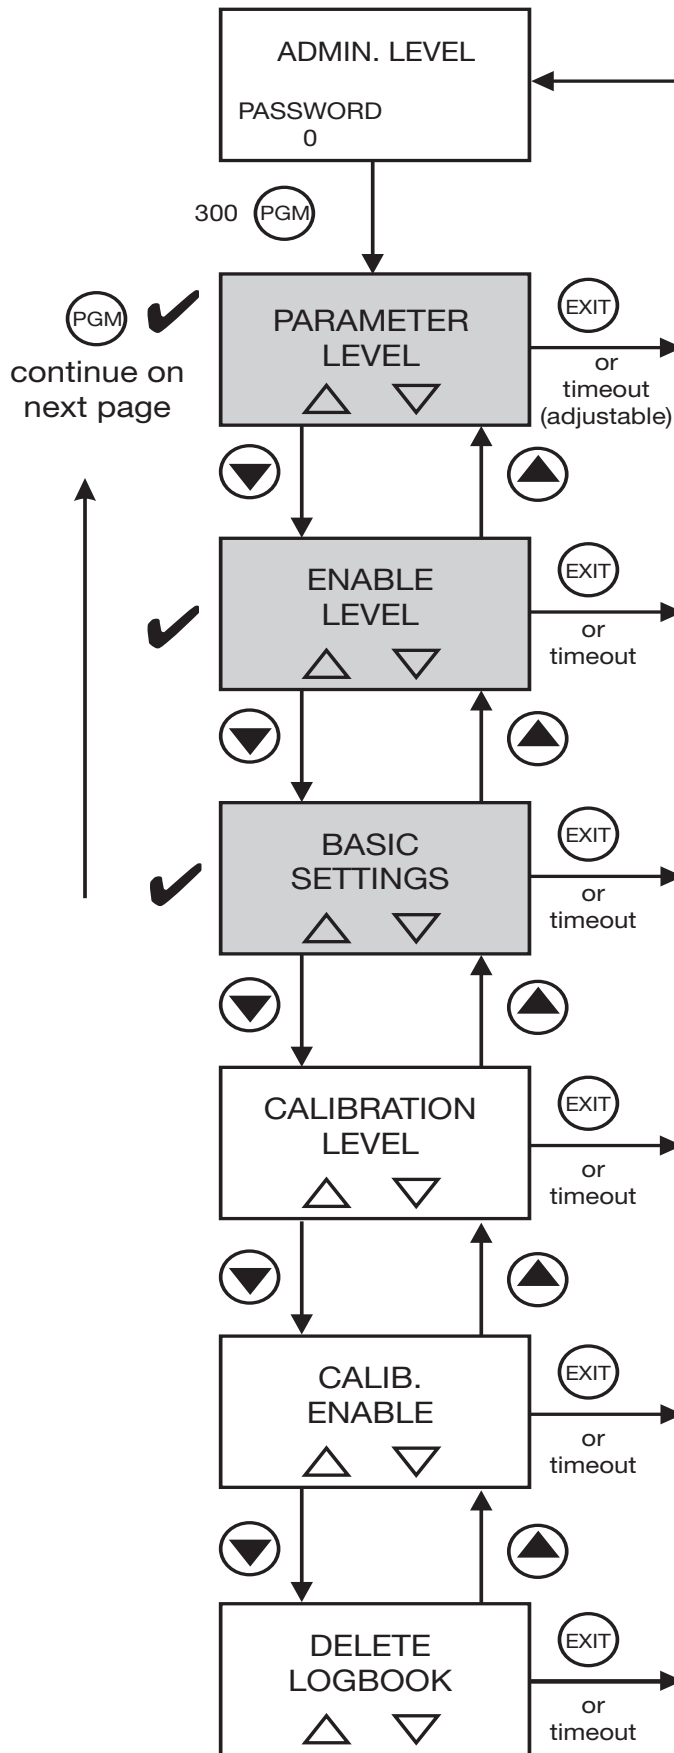

## 7 Commissioning

---

### Concluding device settings

---

#### Input for temperature

Sensor type:	Pt100/Pt1000
Unit:	°C
Filter time constant:	00:00:02
Offset:	0.0°C

---

#### Controller channel 1

Controller type:	pulse width output
Setpoint:	6.5 pH
MIN / MAX contact:	MIN contact
Proportional band:	as required
Reset time:	as required
Derivative time:	as required
Pulse period:	as required
Switch-on time:	as required
Output level limit:	as required
Controller alarm:	as required
Alarm tolerance:	as required
Alarm delay:	as required
In Hold mode:	as required
“Hold” output level:	as required
In event of error:	as required
MAX setpoint:	as required
MIN setpoint:	as required
Alarm delay:	as required

---

#### Controller channel 2

Controller type:	pulse width output
Setpoint:	8.5 pH
MIN /MAX contact:	MIN contact
Proportional band:	as required
Reset time:	as required
Derivative time:	as required
Pulse period:	as required
Switch-on time:	as required
Output level limit:	as required
Controller alarm:	as required
Alarm tolerance:	as required
Alarm delay:	as required
In Hold mode:	as required
“Hold” output level:	as required
In event of error:	as required

---

## 7 Commissioning

---

MAX setpoint:	as required
MIN setpoint:	as required
Alarm delay:	as required

---

### Switching output 1

Function:	CONTROLLER 1
-----------	--------------

---

### Switching output 2

Function:	CONTROLLER 2
-----------	--------------

---

### Analog output 1

Signal selector:	Main value
Signal type:	4 – 20 mA
Scaling start:	2 pH
Scaling end:	12 pH
During calibration:	as required
In event of error:	as required
In Hold mode:	as required
Safe value:	as required
Simulation:	as required
Simulation value:	as required


---



## 7.2.3 ORP measurement


Range: 0 – 1000 mV  
 Output signal: 0 – 10 V  
 Controller function: limit controller  
 Limit: 600 mV

Call up administrator level

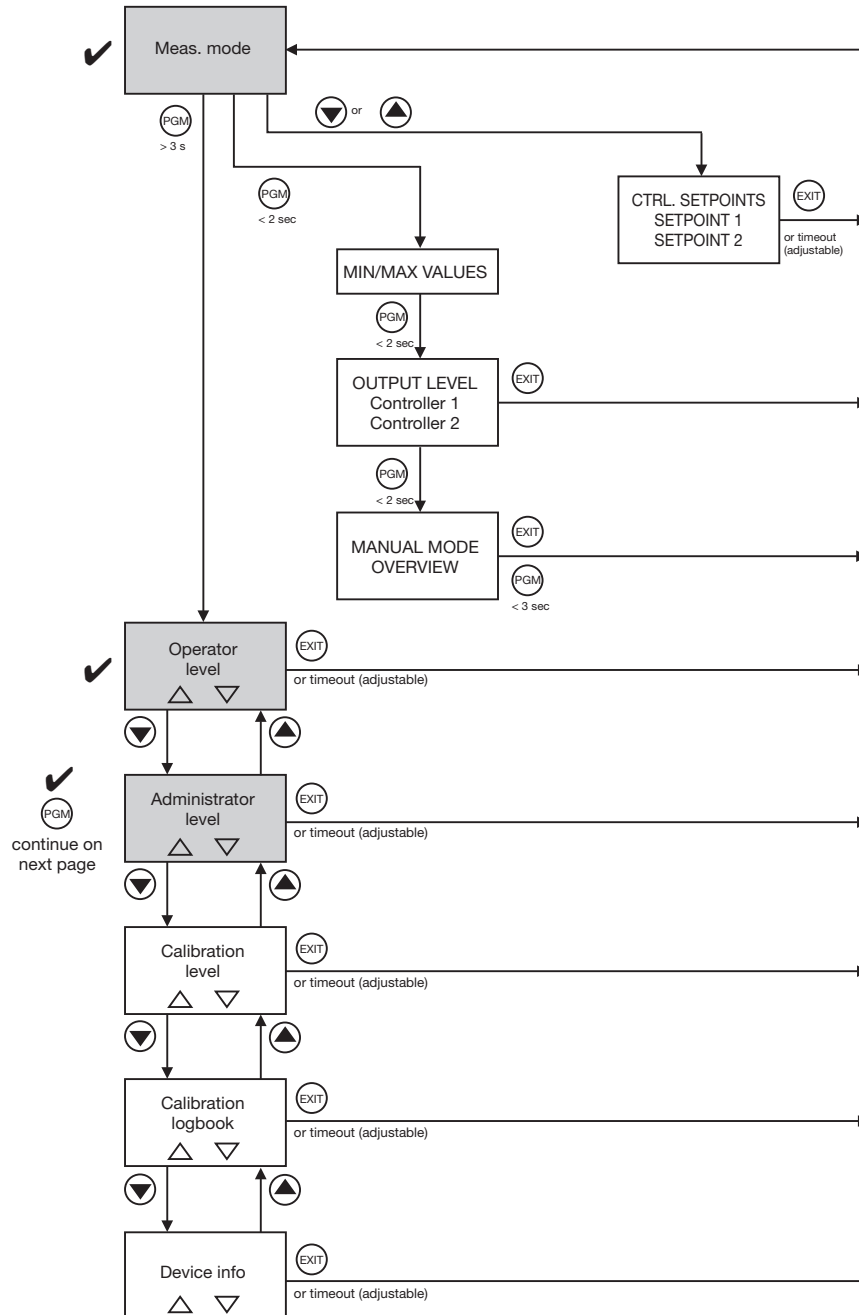


# 7 Commissioning

Call up basic settings

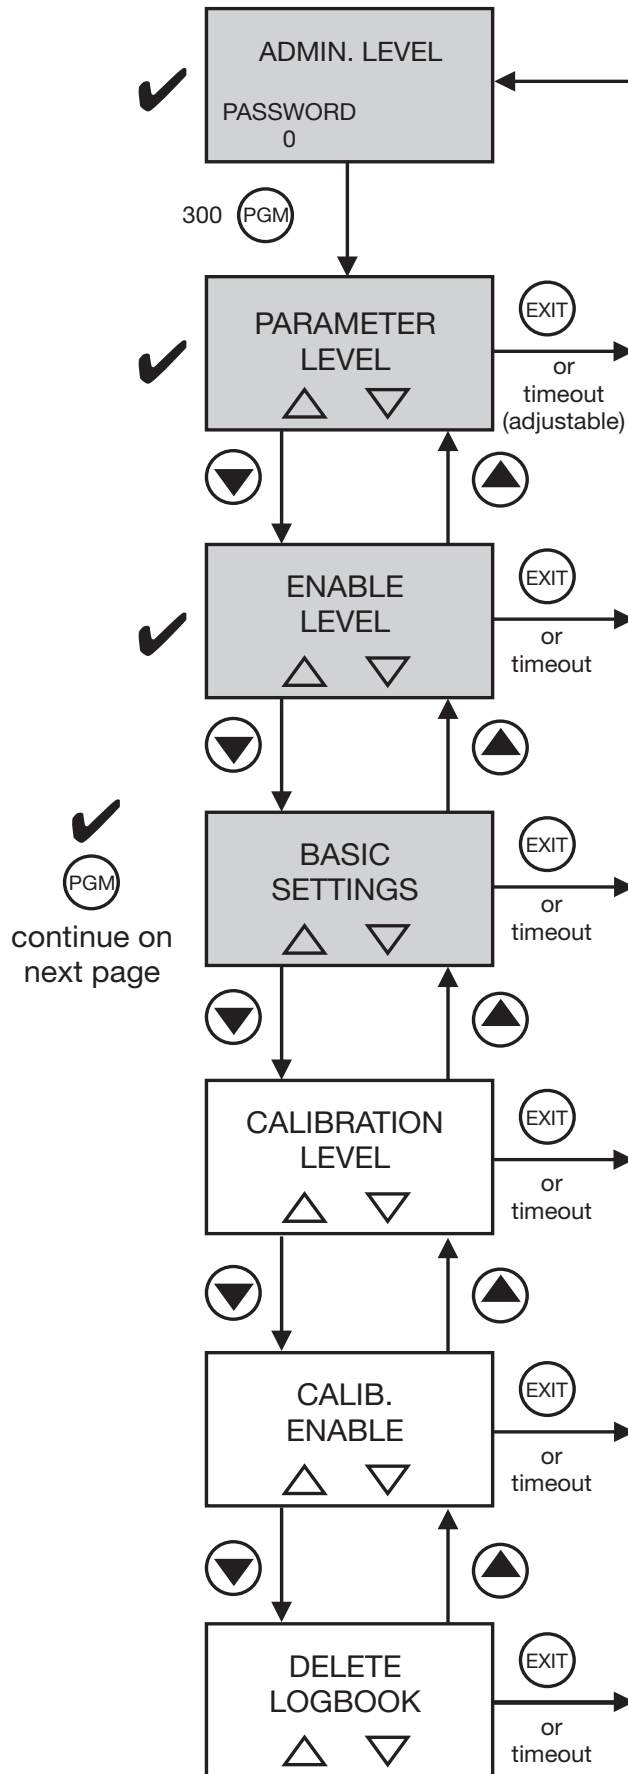


# 7 Commissioning

## Basic settings for the main input: procedure

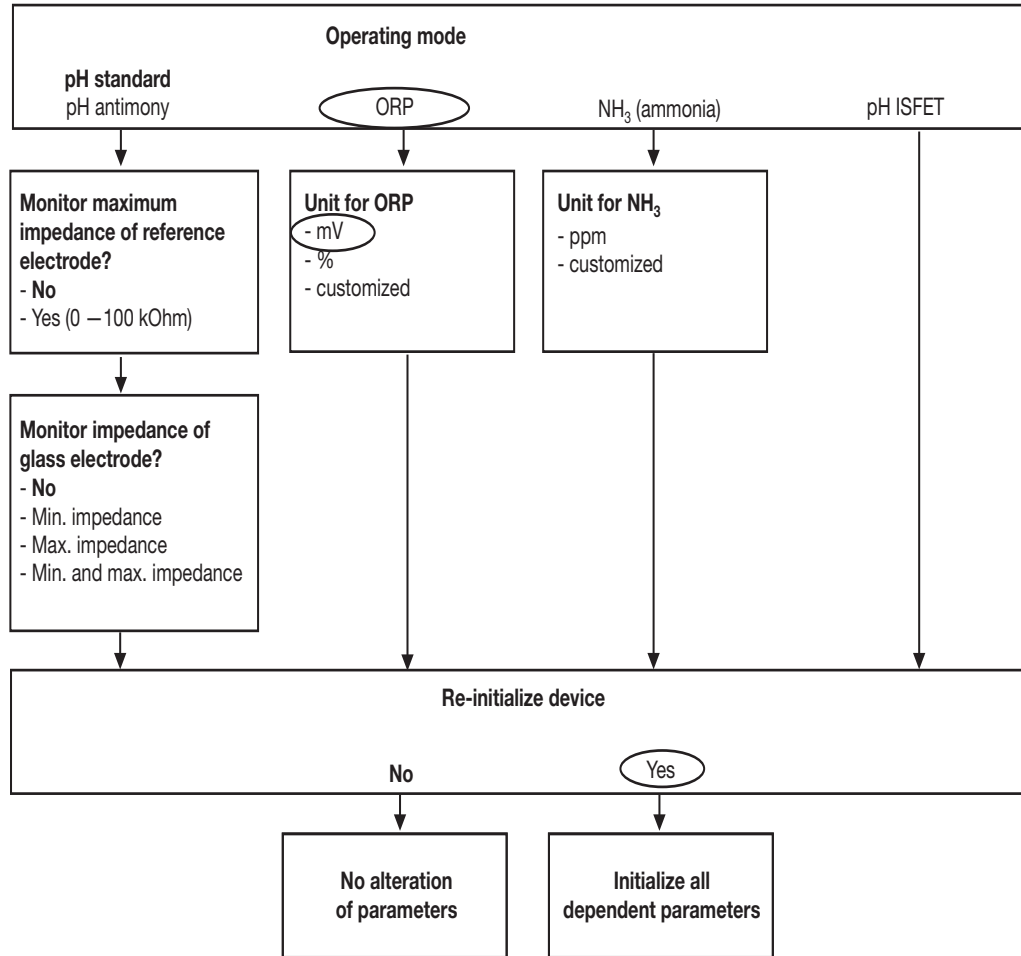

# 7 Commissioning

Call up  
parameter  
level

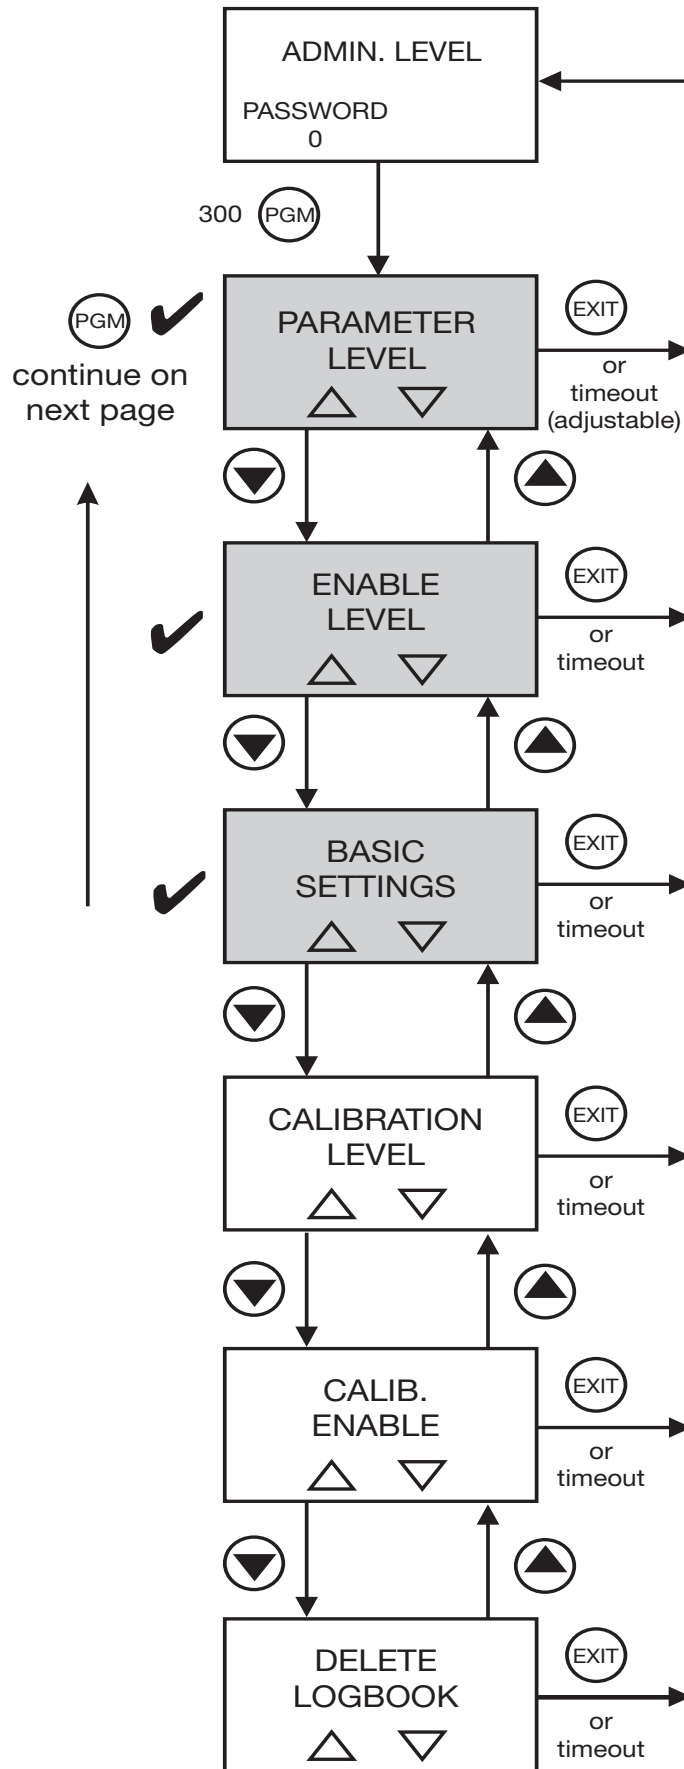

## 7 Commissioning

---

### Concluding device settings

---

**Controller channel 1**

Control type:	limit
Setpoint:	600 mV
MIN / MAX contact:	as required
Hysteresis:	as required
Pull-in delay:	as required
Drop-out delay:	as required
Controller alarm:	as required
In Hold mode:	as required
In event of error:	as required
MAX setpoint:	as required
MIN. setpoint:	as required

---

**Controller channel 2**

Control type:	off
---------------	-----

---

**Switching output 1**

Function:	controller 1
-----------	--------------

---

**Switching output 2**

Function:	no function
-----------	-------------

---

**Analog output 1**

Signal selector:	Main value
Signal type:	0 – 10 V
Scaling start:	0 mV
Scaling end:	1000 mV


---

# 7 Commissioning


## 7.2.4 Measurement of NH<sub>3</sub>- (ammonia) concentration

Range: 0 – 100 ppm  
Output signal: 0 – 20 mA  
Controller function: limit controller  
Limit: 10 ppm

Call up administrator level

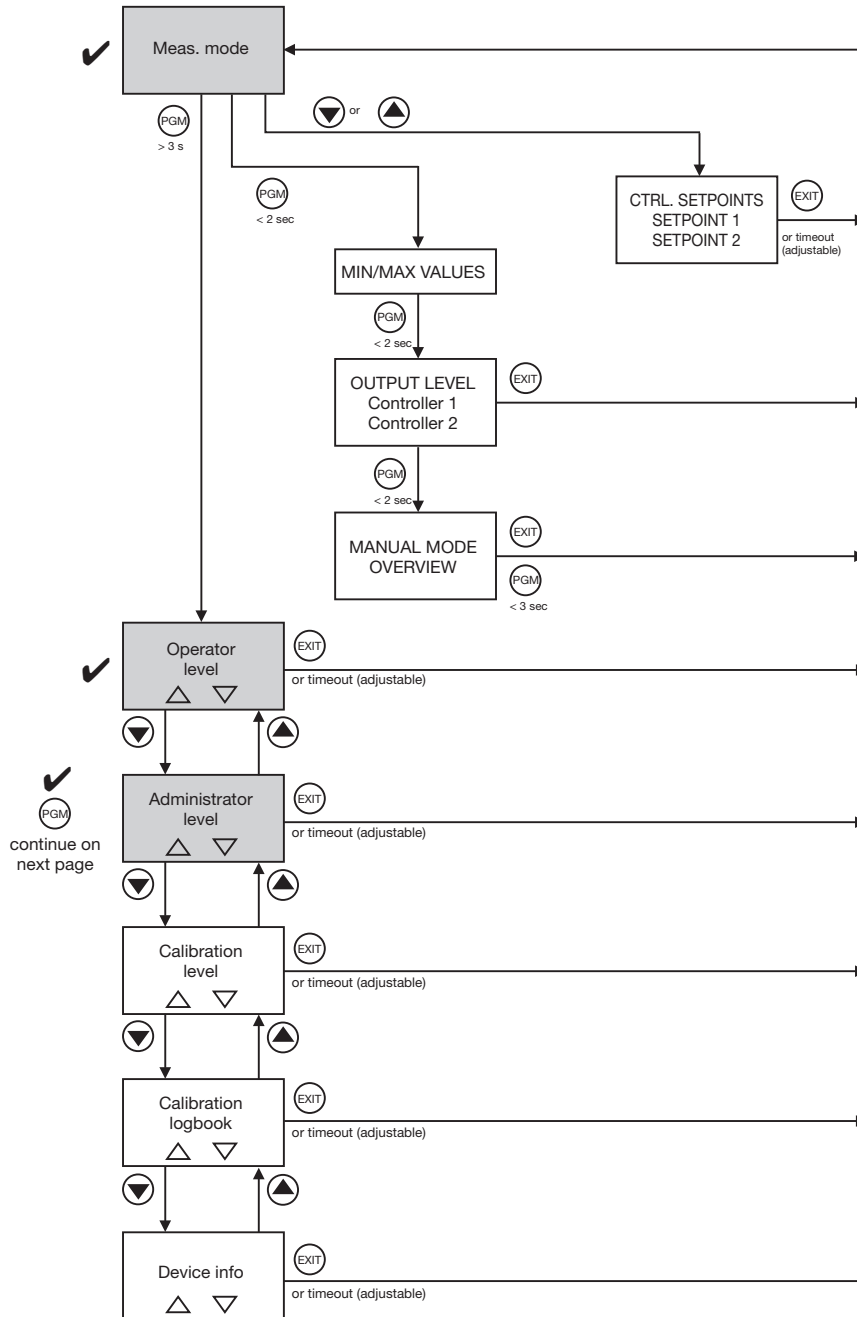


## Call up basic settings

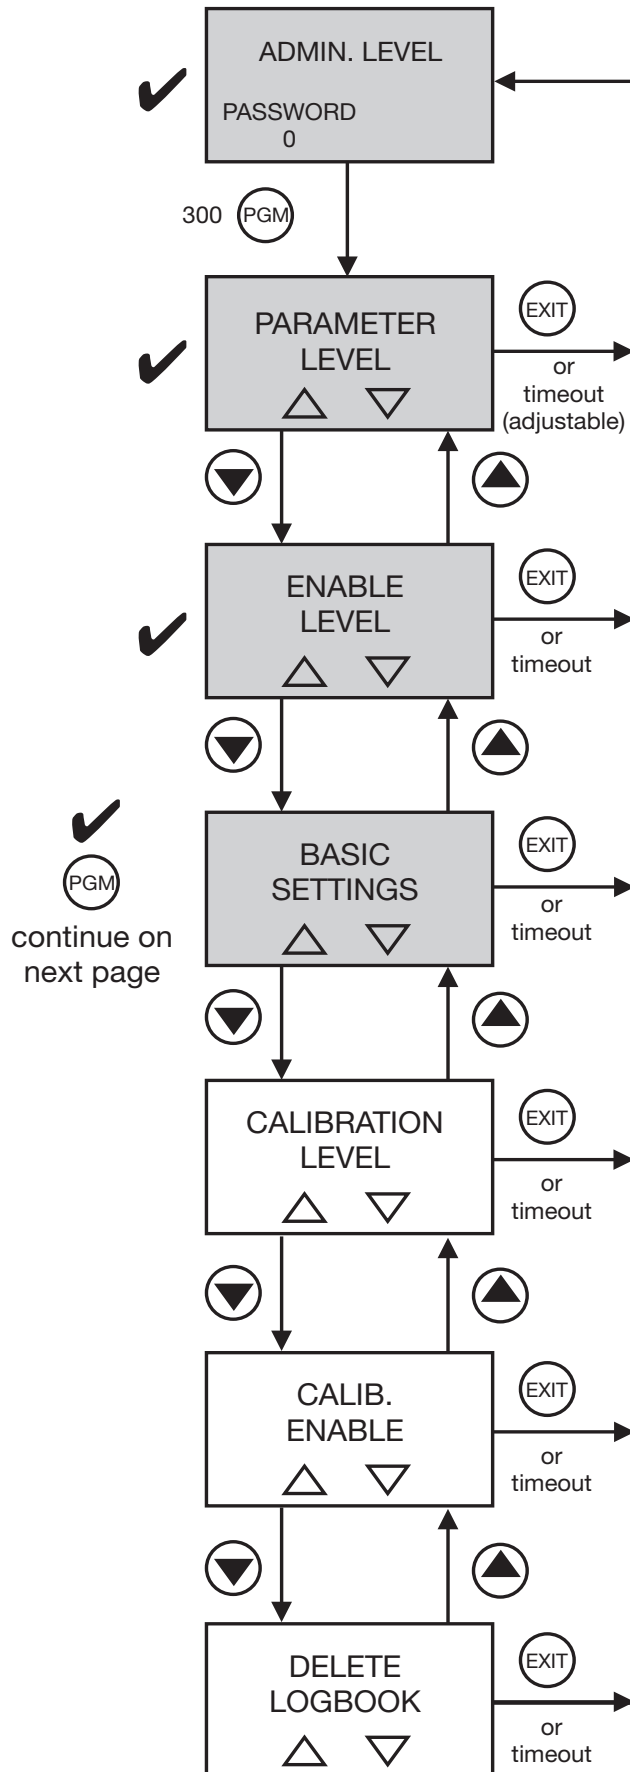


# 7 Commissioning

## Basic settings for the main input: procedure

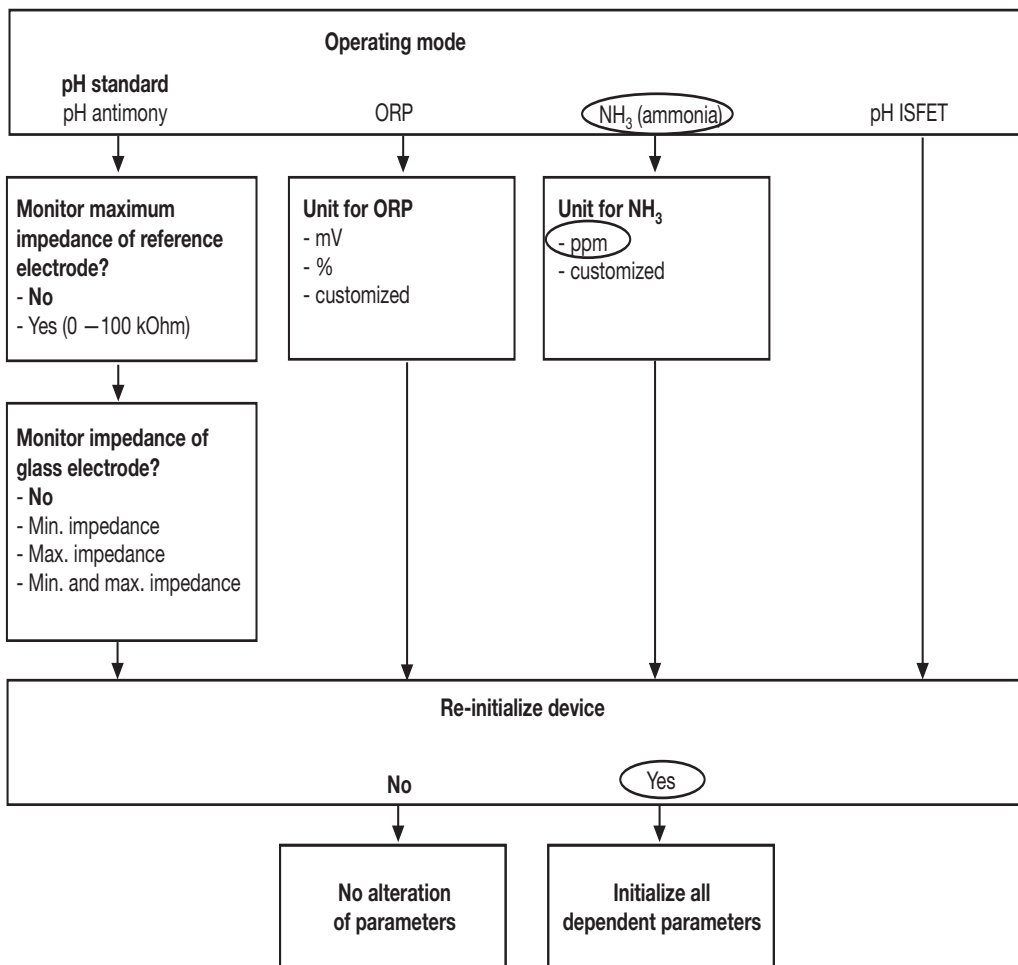



Call up  
parameter  
level

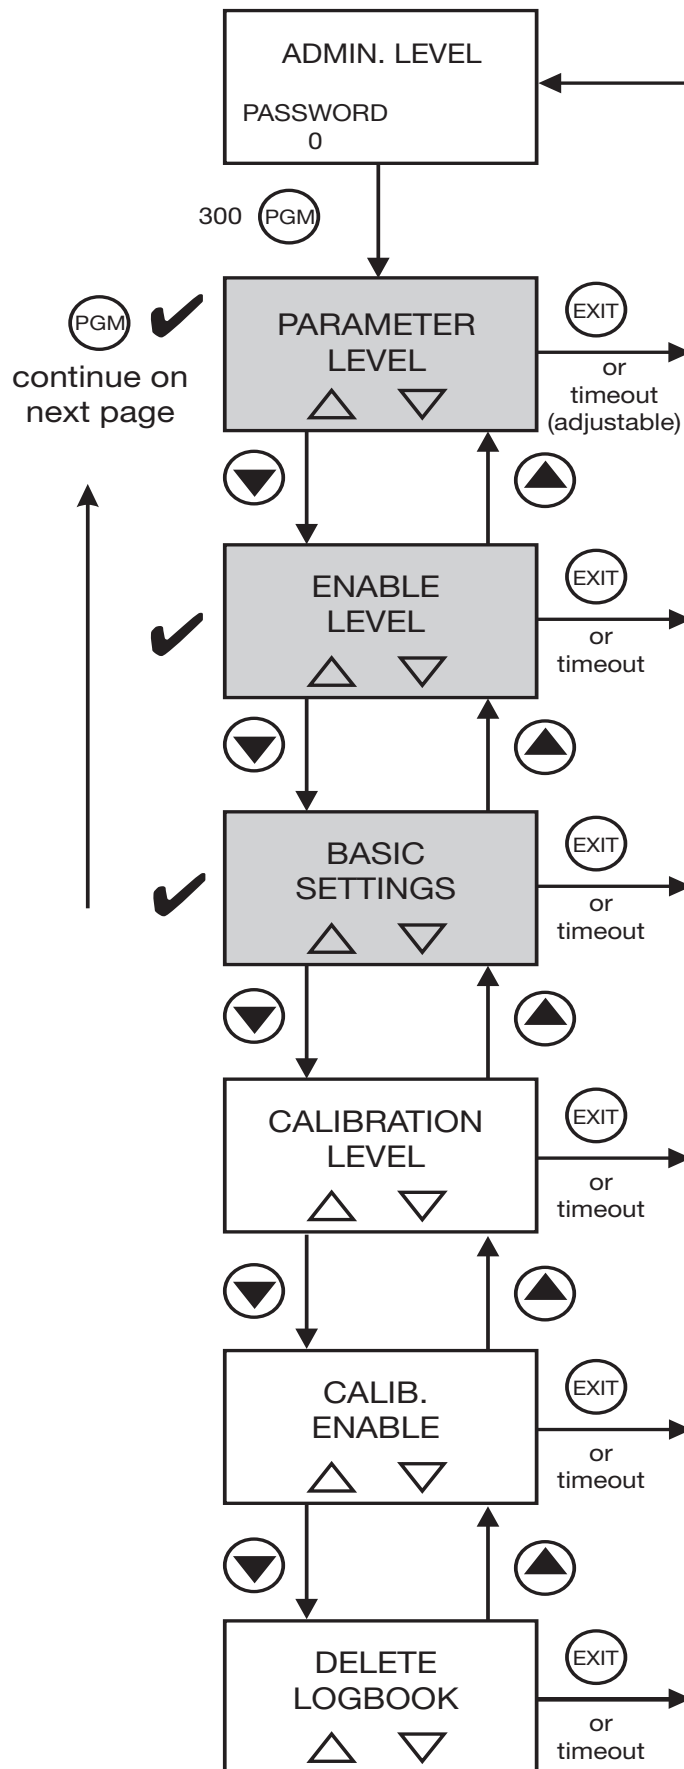

## 7 Commissioning

---

### Concluding device settings

---

#### Controller channel 1

Control type:	limit
Setpoint:	10 ppm
MIN / MAX contact:	as required
Hysteresis:	as required
Pull-in delay:	as required
Drop-out delay:	as required
Controller alarm:	as required
In Hold mode:	as required
In event of error:	as required
MAX setpoint:	as required
MIN setpoint:	as required

---

#### Controller channel 2

Control type:	off
---------------	-----

---

#### Switching output 1

Function:	controller 1
-----------	--------------

---

#### Switching output 2

Function:	no function
-----------	-------------

---

#### Analog output 1

Signal selector:	Main value
Signal type:	0 – 20 mA
Scaling start:	0 ppm
Scaling end:	100 ppm

---

## 8.1 pH electrode

**General** Various calibration options are available to adapt the device to the pH electrode.


- 1-point calibration  
This is only recommended for special applications, e.g. high-purity water.
- 2-point calibration  
This is recommended as the standard method.
- 3-point calibration  
This is only recommended for special applications with increased accuracy requirements, both within the acidic and alkaline ranges.

---

**When to calibrate** The pH combination electrode (or glass and reference electrode) should be cleaned at regular intervals (depending on the sample medium) and the transmitter calibrated.

---

**Calibration start** Calibrating can be started as follows:

- by pressing the  key, if this has been enabled in ADMIN. LEVEL / PASSWORD / CALIB. ENABLE.
- via ADMIN. LEVEL / PASSWORD / CALIB. LEVEL.
- via CALIB. LEVEL if this has been enabled in ADMIN. LEVEL / PASSWORD / CALIB. ENABLE.



---


The display blinks during calibration.  
The analog outputs will respond as configured in OPERATOR LEVEL / ANALOG OUTPUT x / DURING CALIBRATION.  
The relays will respond in accordance with the configuration of the switching outputs.

---

### 8.1.1 1-point calibration

**Requirements**

- The supply voltage for the device must be present. see Chapter 5 “Electrical connection”, page 15ff.
- A combination electrode must be connected to the transmitter.
- "PH STANDARD" must be configured as the sensor in the basic settings.
- Calibration must be enabled, see Chapter 6.9.1 “Administrator levels”, page 38.
- The transmitter is in the measurement mode.

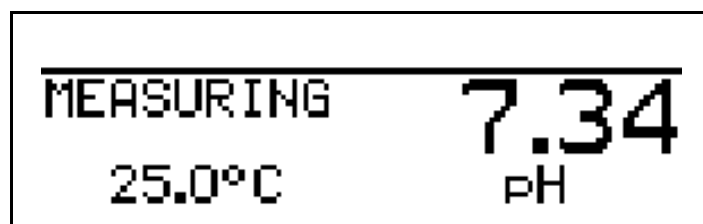

## 8 Calibration

---

- \* Immerse the combination electrode in a buffer solution with a known pH.



The temperature of the buffer solution must remain constant during calibration!

---

- \* Start the calibration (by pressing the **CAL** key, or via the Administrator level).

```
1-POINT CALIB. >
2-POINT CALIB. >
3-POINT CALIB. >
```

- \* Using the **PGM** key, start 1-point calibration.

```
                CALIB
-----
ENTRY          25.0 °C
TEMP.
```


- \* With manual temperature input, set the temperature of the calibration solution using the **▼** or **▲** key and confirm the selection with **PGM**.



```
                CALIB
-----
MEAS.          7.43
REFERENCE      PH
```


- \* Wait until the displayed value is stable; then continue with **PGM**.

```
                CALIB
-----
ENTRY          7.00
REFERENCE      PH
```

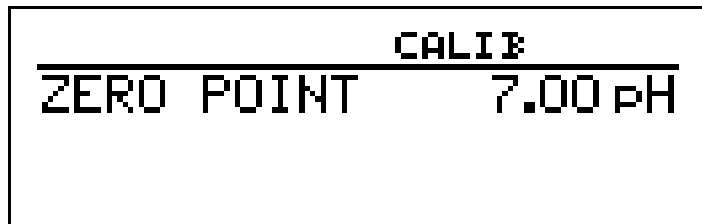- \* Set the displayed value to the value of the buffer solution using the **▼** or **▲** key; then continue with **PGM**.



- \* Accept the zero point with the  key or use the  key to reject the value.

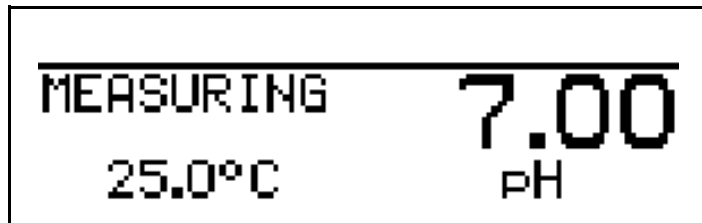

The device returns to the measurement mode.



If the following permissible limits of the calibration values are not observed in the calibration procedure then an error is displayed at the end of the procedure::

Antimony electrode: -2 ... 2 pH  
Standard glass electrode: 5 ... 9 pH

---

---

### 8.1.2 2-point calibration




The buffer solutions (reference solutions) used for calibration must differ by at least 2 pH.

During calibration, the temperature of the two buffer solutions must be the same and must remain constant.

---

#### Requirements

- The supply voltage for the device must be present. see Chapter 5 "Electrical connection", page 15ff.
- A combination electrode must be connected to the transmitter.
- "PH STANDARD" must be configured as the sensor in the basic settings.
- Calibration must be enabled, see Chapter 6.9.1 "Administrator levels", page 38.
- The transmitter is in the measurement mode.

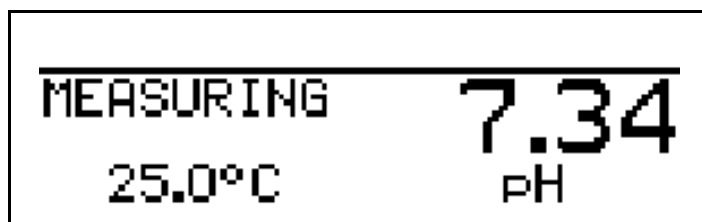

## 8 Calibration

---

- \* Immerse the combination electrode in the first buffer solution with a known pH (e.g. 4.00).
- \* Start the calibration (by pressing the  $\text{CAL}$  key, or via the Administrator level).

```
1-POINT CALIB. >
2-POINT CALIB. >
3-POINT CALIB. >
```

- \* Using the  $\text{PGM}$  key, start 2-point calibration.

```
                CALIB
-----
ENTRY          25.0 °C
TEMP.
```

- \* With manual temperature input, set the temperature of the buffer solution using the  $\blacktriangledown$  or  $\blacktriangle$  key and confirm the selection with  $\text{PGM}$ .

```
                CALIB
-----
MEAS.          4.34
REF. 1         pH
```

- \* Wait until the displayed value is stable; then continue with  $\text{PGM}$ .

```
                CALIB
-----
ENTRY          4.00
REF. 1         pH
```


- \* Set the displayed value to the value of the first buffer solution (e.g. 4.00) using the  $\blacktriangledown$  or  $\blacktriangle$  key; then continue with  $\text{PGM}$ .

```
                CALIB
-----
MEAS.          8.01
REF. 2         pH
```




- \* Rinse, then dry the pH combination electrode.
- \* Immerse the pH combination electrode in the second buffer solution (e.g. 8.00).

## 8 Calibration

---



- \* Wait until the displayed value is stable; then continue with .

CALIB	
ENTRY	8.00
REF. 2	pH

- \* Set the displayed value to the value of the second buffer solution (e.g. 8.00) using the  or  key; then continue with .

CALIB	
ZERO POINT	7.00 pH
SLOPE	101.1 %

The zero and slope determined by the device are displayed.

- \* Accept the calibrated values with the  key or use the  key to reject the value.

MEASURING	7.99
24.9°C	pH

The device returns to the measurement mode.



If the following permissible limits of the calibration values are not observed in the calibration procedure then an error is displayed at the end of the procedure:

Antimony electrode:	-2 ... 2 pH, slope 10 ... 110 %
Standard glass electrode:	5 ... 9 pH, slope 75 ... 110 %

---

---

# 8 Calibration

---

## 8.1.3 3-point calibration



The buffer solutions (reference solutions) used for calibration must have the following values:

Buffer solution 1: within the neutral range (7 pH as accurately as possible)

Buffer solution 2: larger than 9 pH

Buffer solution 3: smaller than 5 pH


The temperature of the buffer solutions must be the same and must remain constant during calibration.

The buffer solutions can be used in any order during calibration.

---

### Requirements

- The supply voltage for the device must be present. see Chapter 5 "Electrical connection", page 15ff.
- A combination electrode must be connected to the transmitter.
- "PH STANDARD" must be configured as the sensor in the basic settings.
- Calibration must be enabled, see Chapter 6.9.1 "Administrator levels", page 38.
- The transmitter is in the measurement mode.

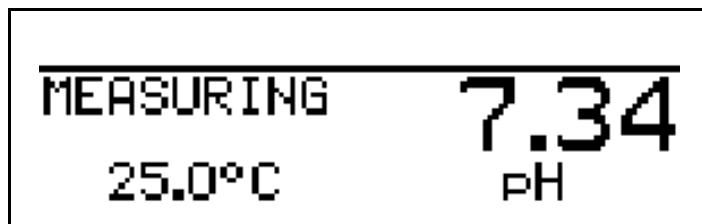


- \* Immerse the combination electrode in the first buffer solution with a known pH value.
- 



The temperature of the three buffer solutions must be the same and must remain constant during calibration.

---

- \* Start the calibration (by pressing the  key, or via the Administrator level).





## 8 Calibration

- \* Using the  $\text{PGM}$  key, start 3-point calibration.

CALIB	
ENTRY	25.0 °C
TEMP.	

- With manual temperature input, set the temperature of the calibration solution using the  $\blacktriangledown$  or  $\blacktriangle$  key and confirm the selection with  $\text{PGM}$ .

CALIB	
MEAS.	3.00
REF. 1	pH

- \* Wait until the displayed value is stable; then continue with  $\text{PGM}$ .

CALIB	
ENTRY	3.50
REF. 1	pH

- \* Set the displayed value to the value of the first buffer solution using the  $\blacktriangledown$  or  $\blacktriangle$  key; then continue with  $\text{PGM}$ .


CALIB	
MEAS.	3.00
REF. 2	pH

- \* Rinse, then dry the combination electrode.
- \* Immerse the combination electrode in the second buffer solution with a known pH value.




CALIB	
MEAS.	7.00
REF. 2	pH

## 8 Calibration

---

- \* Wait until the displayed value is stable; then continue with .


CALIB	
ENTRY	7.70
REF. 2	pH

- \* Set the displayed value to the value of the second buffer solution using the  or  key; then continue with .




CALIB	
MEAS.	7.00
REF. 3	pH

- \* Rinse, then dry the combination electrode.
- \* Immerse the combination electrode in the third buffer solution with a known pH.

CALIB	
MEAS.	11.00
REF. 3	pH

- \* Wait until the displayed value is stable; then continue with .


CALIB	
ENTRY	10.70
REF. 3	pH

- \* Set the displayed value to the value of the second buffer solution using the  or  key; then continue with .

CALIB	
ZERO POINT	7.70 pH
SLOPE ACID	96.3%
SLOPE ALK.	ERROR

The zero point of the combination electrode, as well as its slope in the acidic/alkaline range of the characteristic are shown.

- \* Accept the calibrated values with the  key or

use the  key to reject the value.



The device returns to the measurement mode.



If the following permissible limits of the calibration values are not observed in the calibration procedure then an error is displayed at the end of the procedure:

Antimony electrode: -2 ... 2 pH, slope 10 ... 110 %

Standard glass electrode: 5 ... 9 pH, slope 75 ... 110 %

---

## 8.2 pH antimony electrode

Antimony electrodes are calibrated in the same way as normal pH ones.

- General notes on calibration, see "General", page 67.
  - 1-point calibration, see Chapter 8.1.1 "1-point calibration", page 67.
  - 2-point calibration, see Chapter 8.1.2 "2-point calibration", page 69.
  - 3-point calibration, see Chapter 8.1.3 "3-point calibration", page 72.
- 

## 8.3 ORP electrode

### General

Two calibration options are available to adapt the device to the ORP electrode.

- 1-point calibration  
With configuration "mV" for the UNIT.
  - 2-point calibration  
With configuration "%" or "CUSTOMIZED" for the UNIT.
- 


### When to calibrate

The ORP combination electrode (or metal and reference electrode) should be cleaned at regular intervals (depending on the sample medium) and the transmitter calibrated.

---

### Calibration start

Calibrating can be started as follows:

- by pressing the  key,  
if this has been enabled in ADMIN. LEVEL / PASSWORD / CALIB. ENABLE.
  - via ADMIN. LEVEL / PASSWORD / CALIB. LEVEL
  - via CALIB. LEVEL
-

## 8 Calibration

---

if this has been enabled in ADMIN. LEVEL / PASSWORD / CALIB. ENABLE.



The display blinks during calibration.

The analog outputs will respond as configured in OPERATOR LEVEL / ANALOG OUTPUT x / DURING CALIBRATION.


The relays will respond in accordance with the configuration of the analog outputs and switching outputs.

---

### 8.3.1 1-point calibration

#### Requirements

- The supply voltage for the device must be present. see Chapter 5 “Electrical connection”, page 15ff.
- A combination electrode must be connected to the transmitter.
- “REDOX” (ORP) must be configured for the sensor and “mV” for the UNIT.
- Calibration must be enabled, see Chapter 6.9.1 “Administrator levels”, page 38.
- The transmitter is in the measurement mode.

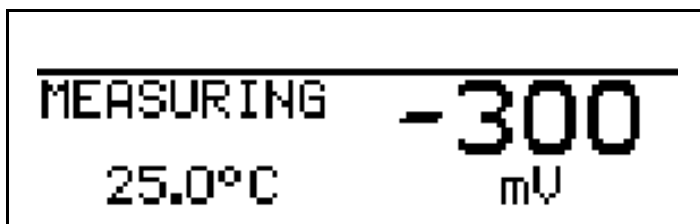


- \* Immerse the combination electrode in a buffer solution with a known ORP.




The ORP of the sample solution is **not** dependent on temperature!

---

- \* Start the calibration (by pressing the  key, or via the Administrator level).




- \* Using the  key, start 1-point calibration.

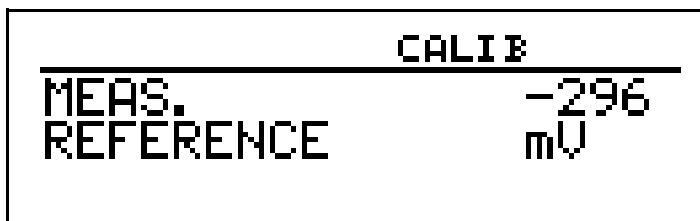




## 8 Calibration

---



Wait until the displayed value is stable; then continue with .

CALIB	
ENTRY	-300
REFERENCE	mV

- \* Set the displayed value to the value of the buffer solution using the  or  key; then continue with .

CALIB	
ZERO POINT	-3.5 mV

The zero point that was determined by the device is shown.

- \* Accept the value with the  key or use the  key to reject the value.

MEASURING	-300
25.0°C	mV

The device returns to the measurement mode.



If the following permissible limits of the calibration values are not observed in the calibration procedure then an error is displayed at the end of the procedure:

Zero point: -200 ... 200 mV

---

---

## 8 Calibration

---

### 8.3.2 2-point calibration

#### Requirements

- The supply voltage for the device must be present. see Chapter 5 “Electrical connection”, page 15ff.
- A combination electrode must be connected to the transmitter.
- “REDOX” (ORP) must be configured for the sensor and “CUSTOMIZED” or “%” for the UNIT in the basic settings.
- Calibration must be enabled, see Chapter 6.9.1 “Administrator levels”, page 38.
- The transmitter is in the measurement mode.


K1	HOLD
MEASURING	59
25.0°C	%

- \* Immerse the combination electrode in a buffer solution with a known ORP.




The ORP of the sample solution is **not** dependent on temperature!


---

- \* Start the calibration (by pressing the  key, or via the Administrator level).

2-POINT CALIB.	
----------------	--

- \* Using the  key, start 1-point calibration.

K1	CALIB HOLD
MEAS.	59
REF. 1	mV

- \* Wait until the displayed value is stable; then continue with .

K1	CALIB HOLD
ENTRY	25.0
REF. 1	%

## 8 Calibration

- \* Set the displayed value to the value of the first buffer solution using the  $\blacktriangledown$  or  $\blacktriangle$  key; then continue with  $\text{PGM}$ .

K1	ALARM HOLD
MEAS.	-60
REF. 2	mV

- \* Rinse, then dry the ORP combination electrode.
- \* Immerse the ORP combination electrode in the second buffer solution.
- \* Wait until the displayed value is stable; then continue with  $\text{PGM}$ .

K1	ALARM HOLD
ENTRY	80.0
REF. 2	%

- \* Set the displayed value to the value of the second buffer solution using the  $\blacktriangledown$  or  $\blacktriangle$  key; then continue with  $\text{PGM}$ .

K1	ALARM HOLD
ZERO POINT	113 %
SLOPE	-216 %

The zero and slope determined by the device are displayed.

- \* Accept the calibrated values with the  $\text{PGM}$  key or use the  $\text{EXIT}$  key to reject the value.

K1	HOLD
MEASURING	80
25.0°C	%

The device returns to the measurement mode.



If the following permissible limits of the calibration values are not observed in the calibration procedure then an error is displayed at the end of the procedure:

Zero point: -9999 ... 9999 %  
Slope: -9999 ... 9999 %

# 8 Calibration

---

## 8.4 Ammonia (NH<sub>3</sub>)- cell

### 8.4.1 General information

From exemplar to exemplar the electrical features of all sensors are a little different; in addition to that they change during operation (e.g. due to precipitation or abrasion) which causes a change of the sensor's output signal. For measurement of ammonia with "normal" accuracy requirements, the transmitter uses a typical characteristic - dependent on the concentration. With the zero shift the individual features of the sensor are considered; this reduces the calibration procedure considerably. The software of the transmitter is especially adjusted to the cooling media control.


#### Time of Calibration ?


- in regular time intervals - dependent on measuring medium and demands
  - if the upper display shows negative values
  - if the upper display shows "Underrange/Overrange"
- 

### 8.4.2 1-point calibration

#### Requirements

- The supply voltage for the device must be present. see Chapter 5 "Electrical connection", page 15ff.
- A combination electrode must be connected to the transmitter.
- Calibration must be enabled, see Chapter 6.9.1 "Administrator levels", page 38.
- "AMMONIA NH<sub>3</sub>" must be configured for the sensor in the basic settings.
- The transmitter is in the measurement mode.

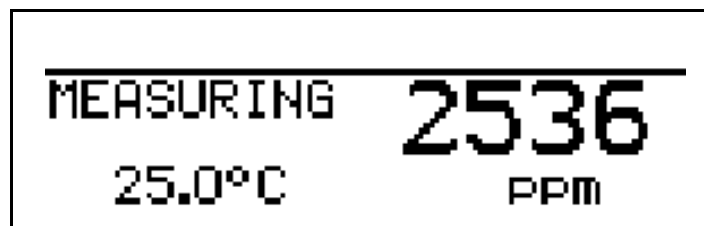

- \* Immerse the combination electrode in a solution **without ammonia**.
- \* Start the calibration (by pressing the  key, or via the Administrator level).







## 8 Calibration

---

- \* Using the  key, start 1-point calibration.

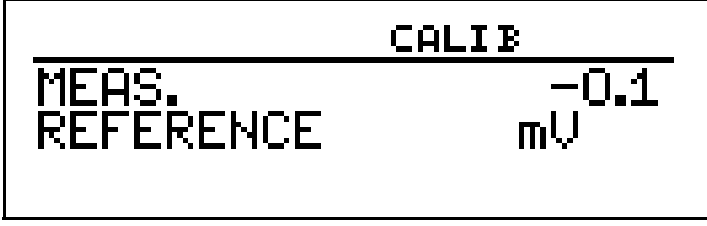




The LCD display shows the word "CALIB" at the top right. Below it, a horizontal line is drawn. Under the line, the text "MEAS. REFERENCE" is displayed on the left, and "-0.1 mV" is displayed on the right.

- \* Wait until the displayed value is stable; then continue with .



The LCD display shows the word "CALIB" at the top right. Below it, a horizontal line is drawn. Under the line, the text "ZERO POINT" is displayed on the left, and "-0.1 mV" is displayed on the right.

- \* Use the  key to confirm the calibration result, or use the  key to reject the value.

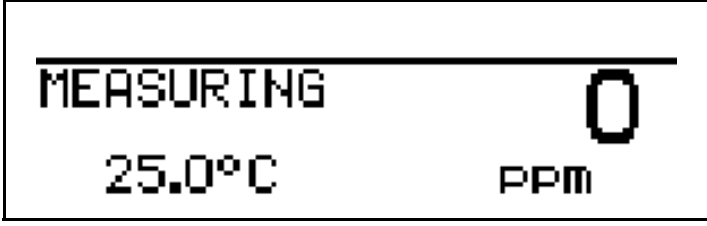

The LCD display shows the word "MEASURING" at the top left. Below it, a horizontal line is drawn. Under the line, the text "25.0°C" is displayed on the left, and "0 PPM" is displayed on the right.

The device returns to the measurement mode.



If the following permissible limits of the calibration values are not observed in the calibration procedure then an error is displayed at the end of the procedure:

Zero point: -312 ... 588 mV

---

---

# 9 Setup program

---

## 9.1 Function

### Configurable parameters

The setup program (available as an option) can be used for easy adaptation of the device to the requirements.

- Setting the measurement range and the range limits.
- Setting the response of the outputs to an out-of-range signal.
- Setting the functions of the switching outputs K1 and K2.
- Setting the function of the binary input E1.
- Setting up special functions (e.g. tables for specific linearizations).
- etc.



Data transmission from or to the transmitter can only take place when it is connected to the electrical supply, see Chapter 5 "Electrical connection", page 15ff.

---

### Connection




The setup interface is not electrically isolated.

When connecting the PC interface cable with a TTL/RS232 converter and adapter (**serial connection cable**) (00350260) , it is therefore absolutely essential to ensure that the supply for either the transmitter or the PC is **not** electrically earthed (for instance: use a battery-powered notebook).

The PC interface cable with USB/TTL converter (**USB connection cable**) (00456352) is, however, electrically isolated.




---

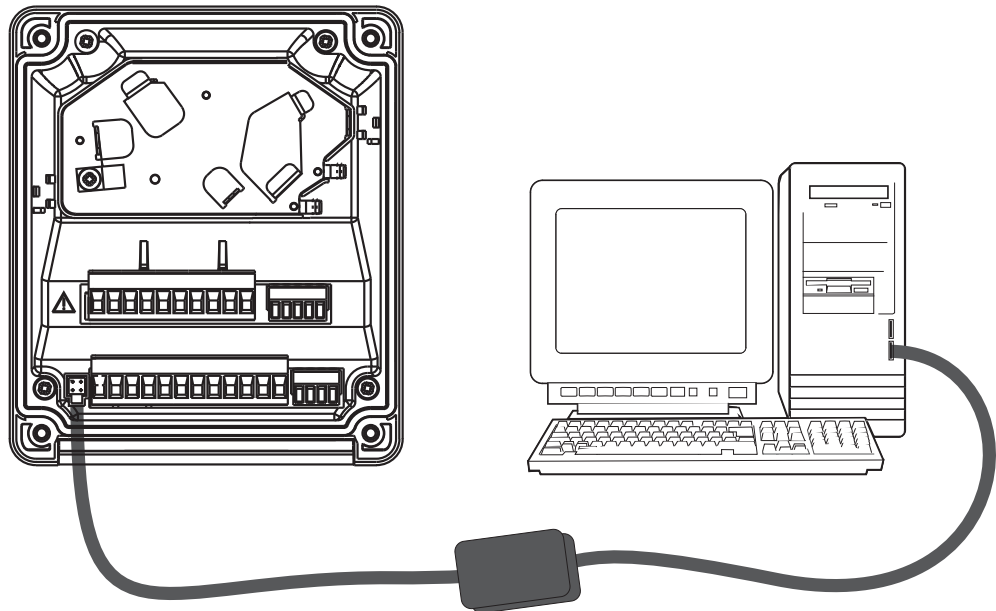

PC interface with USB/TTL converter  
(USB connection cable)  
(00456352)

---

## 10 Eliminating faults and malfunctions

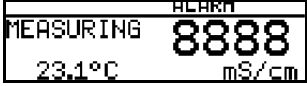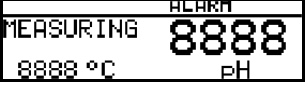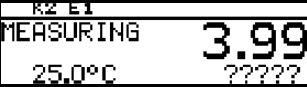Problem	Possible cause	Measures
No measurement display or current output	Supply voltage missing	Check supply voltage, also check terminals
Measurement display 000 or analog output 0/4 mA or 0 V	Sensor not immersed in medium; reservoir level too low	Top up the reservoir
	Flow-through fitting is blocked	Clean flow-through fitting
	Sensor is faulty	Replace the sensor
Wrong or unstable measurement display	Sensor not immersed deeply enough	Top up the reservoir
	Inadequate mixing	Ensure good mixing; for sensor: all-round free space of approx. 5 mm to ensure all-round flow
	Air bubbles	Check mounting site
Measurement display 8888, temperature display “ok”, blinking 	Overrange /underrange or faulty sensor	Check the basic settings. Check the electrical connection for the sensor. Replace the device.
Measurement display 8888, temperature display 8888, blinking 	Infringement of temperature range (over/underrange), or short-circuit or cable break for the temperature sensor	The temperature for the measured medium is outside the permissible range for temperature compensation. Replace the device. Replace the sensor.
Temperature display and measurement display are normal, but the unit indicates ????? 	The basic settings were configured on the device in the “Customized” mode.	“Unit” must be configured through the setup program, or the “Customized” mode must be abandoned.
Fluctuating measurement display	Symmetrical connection was chosen. - Interruption of connection to liquid potential. - Interference potential too high.	- Check the electrical connection, see Chapter 5.5 “Terminal assignments”, page 22 - Eliminate interference potential.
GLASS ELECT. IMPED. TOO HIGH	Coating Lead break/Cable break Aging	Clean (glass) electrode. Replace (glass) electrode.
GLASS ELECT. IMPED. TOO LOW	Membrane glass damaged	Replace (glass) electrode.
REF. ELECT. IMPED. TOO HIGH	Coating	Clean reference electrode. Replace reference electrode.

# 11 Appendix

## 11.1 Operator level parameters

If a number of device parameters have to be modified in the device, then it is advisable to note them in the table below, and then modify these parameters in the sequence given.



The following list shows the maximum number of parameters that can be altered.

Depending on the configuration, some of the parameters will not be visible, i.e. not alterable (editable) for your device.

Parameter	Selection / value range <b>Factory setting</b>	New setting
<b>Controller channel 1</b>		
Controller type	LIMIT PULSE WIDTH PULSE FREQ. CONTINUOUS MODULATING <b>OFF</b>	
Setpoint	depending on unit, e. g. <b>-1.00</b> to 15.00 pH	
MIN / MAX contact (increasing / decreasing characteristic)	<b>MIN CONTACT</b> MAX CONTACT	
Proportional band	<b>0</b> ...9999	
Reset time	<b>0</b> ...9999	
Derivative time	<b>0</b> ...999	
Pulse period	2,5... <b>20</b> ...999,5	
Minimum ON time	<b>0,5</b> ...999,5	
Output level limit	0... <b>100</b> %	
Maximum pulse frequency	0... <b>60</b> 1/min.	
Hysteresis (differential)	depending on unit, e. g. 0.00 to 16.00 pH	
Pull-in delay	0.00 – 999.5 sec	
Drop-out delay	0.00 – 999.5 sec	
Controller alarm	<b>OFF</b> ON	
Alarm tolerance	0,00... <b>1,00</b> ...16,00	
Alarm delay	<b>0</b> ...9999	
In Hold mode	<b>FROZEN</b> 0% 100%	
In event of error	<b>FROZEN</b> 0% 100%	
MAX setpoint	depending on unit, e. g. -1.00 to 15.00 pH	
MIN setpoint	depending on unit, e. g. -1.00 to 15.00 pH	

## 11 Appendix

Parameter	Selection / value range <b>Factory setting</b>	New setting
<b>Controller channel 2</b>		
Controller type	LIMIT PULSE WIDTH PULSE FREQ. CONTINUOUS MODULATING <b>OFF</b>	
Setpoint	depending on unit, e. g. -1.00 to <b>15.00</b> pH	
MIN / MAX contact (increasing / decreasing characteristic)	MIN CONTACT <b>MAX CONTACT</b>	
Proportional band	<b>0</b> ...9999	
Reset time	<b>0</b> ...9999	
Derivative time	<b>0</b> ...999	
Pulse period	2,5... <b>20</b> ...999,5	
Minimum ON time	<b>0,5</b> ...999,5	
Output level limit	0... <b>100</b> %	
Maximum pulse frequency	0... <b>60</b> 1/min.	
Hysteresis (differential)	depending on unit, e. g. 0.00 to 16.00 pH	
Pull-in delay	0.00 – 999.5 sec	
Drop-out delay	0.00 – 999.5 sec	
Controller alarm	<b>OFF</b> ON	
Alarm tolerance	0,00... <b>1,00</b> ...16,00	
Alarm delay	<b>0</b> ...9999	
In Hold mode	<b>FROZEN</b> 0% 100%	
In event of error	<b>FROZEN</b> 0% 100%	
MAX setpoint	depending on unit, e. g. -1.00 to 15.00 pH	
MIN setpoint	depending on unit, e. g. -1.00 to 15.00 pH	
<b>Controller special function</b>		
I switch-off	<b>INACTIVE</b> ACTIVE	
Separate controllers	<b>OFF</b> ON	
Manual mode	<b>LOCKED</b> PULSED SWITCHED	

# 11 Appendix

Parameter	Selection / value range <b>Factory setting</b>	New setting
<b>Input for pH / ORP</b>		
for pH standard		
Zero point	5.0 to <b>7.0</b> to 9.00 pH	
Slope, acidic	75.0 to <b>100.0</b> to 110.0%	
Slope, alkaline	75.0 to <b>100.0</b> to 110.0%	
for pH antimony		
Zero point	-2.00 to <b>0.0</b> to 2.0 pH	
Slope, acidic	10.0 to <b>100.0</b> to 110.0%	
Slope, alkaline	10.0 to <b>100.0</b> to 110.0%	
for ORP		
Zero point	-199.9 to <b>0.0</b> to 199.9 mV	
for NH <sub>3</sub> (ammonia)		
Zero point	-450,0 to <b>138,0</b> to 450,0 mV	
for all measured variables		
Monit. ref.	<b>OFF</b> ON	
Monit. glass el.	<b>OFF</b> MIN IMPEDANCE MAX IMPEDANCE MIN.+MAX. IMP	
Filter time constant	0 — <b>2</b> — 25 sec	
Calibration interval	<b>0</b> — 999 days (0 = switched off)	
<b>Temperature input</b>		
Sensor type	<b>NO SENSOR</b> Pt100/Pt1000 CUSTOMIZED	
Unit	°C °F	
Filter time constant	0 — <b>2</b> — 25 sec	
Manual temperature	-50 to <b>25</b> to 250°C	
Temperature offset	-20 to <b>0</b> to +20°C	
<b>Binary input</b>		
Function	<b>NO FUNCTION</b> KEY LOCK HOLD MODE	

## 11 Appendix

Parameter	Selection / value range <b>Factory setting</b>	New setting
<b>Switching output 1</b>		
Function	NO FUNCTION CONTROLLER 1 CONTROLLER 2 CTRLR ALARM 1 CTRLR ALARM 2 CTRLR ALARM <input type="checkbox"/> LC1 MAIN VAR. <input type="checkbox"/> LC2 MAIN VAR. <input type="checkbox"/> LC7 MAIN VAR. <input type="checkbox"/> LC8 MAIN VAR. <input type="checkbox"/> LC1 TEMP. <input type="checkbox"/> LC2 TEMP. <input type="checkbox"/> LC7 TEMP. <input type="checkbox"/> LC8 TEMP. SENSOR ERROR CALIB. TIMER	
Switching point	0 - 9999	
Spacing to switching point Window width at AF1 / AF2	0 - 50% of range or 0 to 150°C	
Hysteresis	0 - 100% of range or -50 to +250°C	
Switch-on delay	00:00:00 - 01:00:00 H:M:S	
Switch-off delay	00:00:00 - 01:00:00 H:M:S	
Pulse time <sup>1</sup>	00:00:00 - 01:00:00 H:M:S	
During calibration	<b>Inactive</b> Active Status maintained	
On error	<b>Inactive</b> Active Status maintained	
In Hold mode	<b>Inactive</b> Active Status maintained	
Manual mode	<b>NO SIMULATION</b> INACTIVE ACTIVE	

<sup>1</sup> For pulse times greater than 0 seconds, the OFF-delay is automatically deactivated.

# 11 Appendix

Parameter	Selection / value range <b>Factory setting</b>	New setting
<b>Switching output 2</b>		
Function	NO FUNCTION CONTROLLER 1 CONTROLLER 2 CTRLR ALARM 1 CTRLR ALARM 2 CTRLR ALARM <input type="checkbox"/> LC1 MAIN VAR. <input type="checkbox"/> LC2 MAIN VAR. <input type="checkbox"/> LC7 MAIN VAR. <input type="checkbox"/> LC8 MAIN VAR. <input type="checkbox"/> LC1 TEMP. <input type="checkbox"/> LC2 TEMP. <input type="checkbox"/> LC7 TEMP. <input type="checkbox"/> LC8 TEMP. SENSOR ERROR CALIB. TIMER	
Switching point	<b>0</b> - 9999	
Spacing to switching point Window width at AF1 / AF2	0 - 50% of range or 0 to 150°C	
Hysteresis	0 - 100% of range or -50 to +250°C	
Switch-on delay	<b>00:00:00</b> - 01:00:00 H:M:S	
Switch-off delay	<b>00:00:00</b> - 01:00:00 H:M:S	
Pulse time <sup>1</sup>	<b>00:00:00</b> - 01:00:00 H:M:S	
During calibration	<b>Inactive</b> Active Status maintained	
On error	<b>Inactive</b> Active Status maintained	
In Hold mode	<b>Inactive</b> Active Status maintained	
Manual mode	<b>NO SIMULATION</b> INACTIVE ACTIVE	

<sup>1</sup> For pulse times greater than 0 seconds, the OFF-delay is automatically deactivated.



## 11 Appendix

Parameter	Selection / value range <b>Factory setting</b>	New setting
<b>Analog output 1</b>		
Signal selector	<b>MAIN VARIABLE</b> CONTROLLER 1 CONTROLLER 2	
Signal type	<b>0 – 20 mA</b> 20 – 0 mA 4 – 20 mA 20 – 4 mA 0 – 10 V 10 – 0 V	
Scaling start of principle measurement variable	depending on unit, e. g. -1 to <b>0.00</b> to 13.40 pH = 4 mA	
Scaling end of principle measurement variable	depending on unit, e. g. 0.60 to 15.00 pH = 20 mA	
During calibration	<b>MOVING</b> FROZEN SAFE VALUE	
In event of error	<b>LOW</b> HIGH FROZEN SAFE VALUE	
In Hold mode	<b>LOW</b> HIGH FROZEN SAFE VALUE MOVING	
Safe value	<b>0 – 22 mA</b>	
Simulation	<b>OFF</b> ON	
Simulation value	<b>0 – 22 mA</b>	
<b>Analog output 2</b>		
Signal selector	<b>TEMPERATURE</b> CONTROLLER 1 CONTROLLER 2	
Signal type	<b>0 – 20 mA</b> 20 – 0 mA 4 – 20 mA 20 – 4 mA 0 – 10 V 10 – 0 V	
Scaling start of temperature	-50 to +220°C = 4 mA	
Scaling end of temperature	-20 to +250°C = 20 mA	
During calibration	<b>MOVING</b> FROZEN SAFE VALUE	
In event of error	<b>LOW</b> HIGH FROZEN SAFE VALUE	









# 11 Appendix

Parameter	Selection / value range <b>Factory setting</b>	New setting
In Hold mode	<b>LOW</b> HIGH FROZEN SAFE VALUE MOVING	
Safe value	<b>0</b> – 22 mA	
Simulation	<b>OFF</b> ON	
Simulation value	<b>0</b> – 22 mA	
<b>Display</b>		
Language	<b>GERMAN</b> ENGLISH FRENCH	
Lighting	<b>DURING OPERATION</b> OFF	
LCD inverse	<b>OFF</b> ON	
Meas. display type	<b>NORMAL</b> TREND BAR GRAPH	
Lower display	<b>TEMPERATURE</b> OUTP. LEVEL 1 OUTP. LEVEL 2 SETPOINT 1 SETPOINT 2 NONE COMPENSATED UNCOMPENSATED	
Upper display	<b>COMPENSATED</b> UNCOMPENSATED TEMPERATURE OUTP. LEVEL 1 OUTP. LEVEL 2 SETPOINT 1 SETPOINT 2 NONE	
MIN/MAX reset	<b>NO</b> YES	
Operating timeout	0 – <b>10</b> min	
Contrast	0 – <b>10</b> – 20	

## 11.2 Parameter explanations


### FUNCTION

#### NO FUNCTION


-  Alarm window AF1 MAIN VAR.
-  Alarm window AF2 MAIN VAR.
-  Limit function AF7 MAIN VAR.
-  Limit function AF8 MAIN VAR.
-  Alarm window AF1 TEMP.
-  Alarm window AF2 TEMP.
-  Limit function AF7 TEMP.
-  Limit function AF8 TEMP.

#### SENSOR ERROR


#### CALIB. TIMER

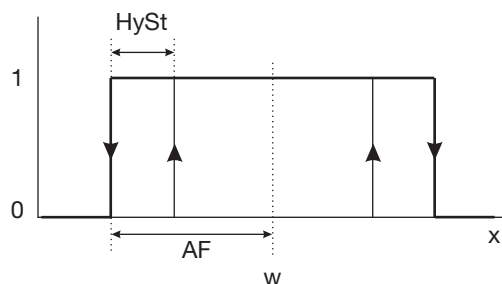


**Alarm window AF1**

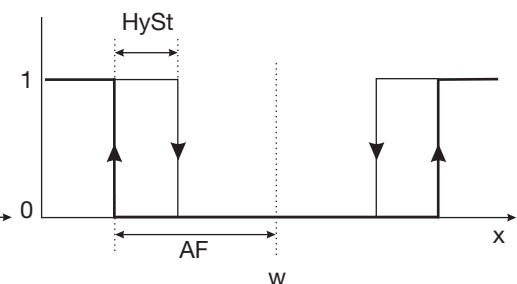

**Alarm window AF2**

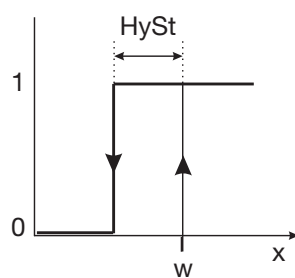


**Limit function AF7**

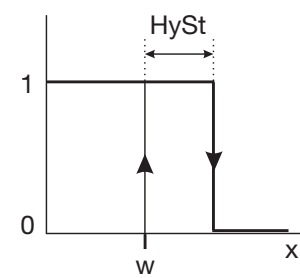


**Limit function AF8**

# 11 Appendix

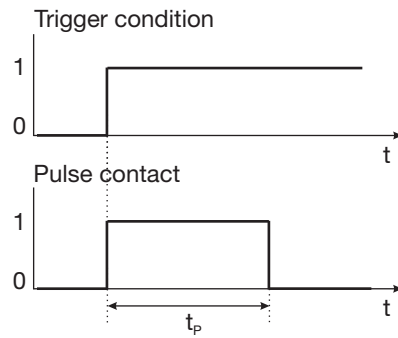

**Pulse contact**  
**Triggering condition longer than**  
**pulse duration**

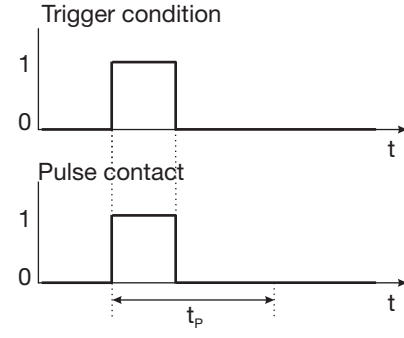

**Pulse contact**  
**Triggering condition shorter than**  
**pulse duration**


0	Off	t	Time
1	On	$t_p$	Pulse duration
AL	Spacing	w	Setpoint / Limit
HySt	Hysteresis	x	Actual value / Measurement value

## MEAS. DISPLAY TYPE

**NORMAL**  
 TREND  
 BAR GRAPH

### NORMAL



In the normal display, the pH is shown (compensated for the reference temperature) or the concentration and temperature of the medium being measured.

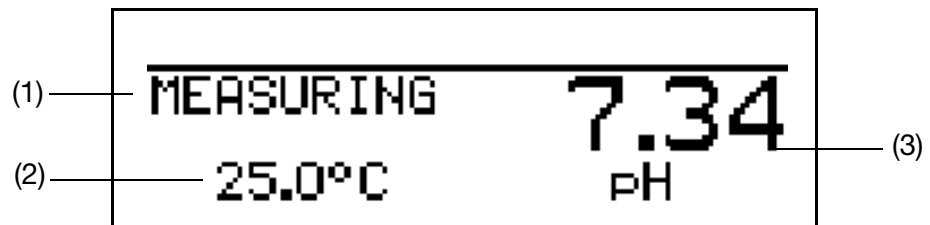

- (1) Operating mode
- (2) Lower display
- (3) Upper display

## TREND


The operator can quickly recognize in which direction the measurement is changing.

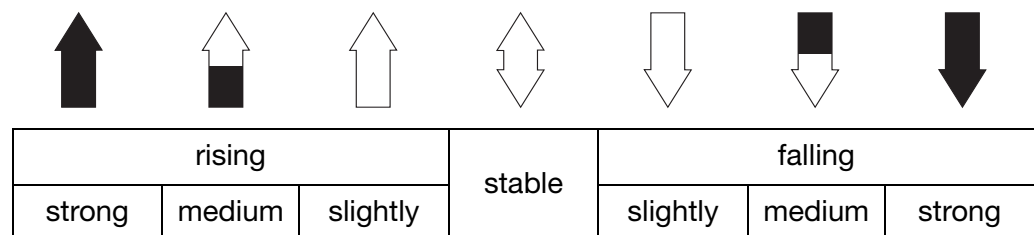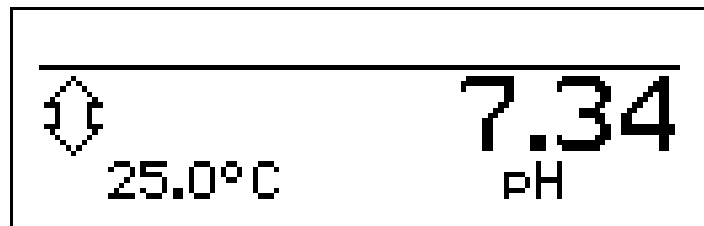

The measurement trend is derived from the last 10 measurements. With a 500 msec sampling cycle, this means that the last 5 seconds are taken into account.

## BAR GRAPH

- The measurement is shown as a moving bar.
- There is no temperature display.
- On devices with configurable control contacts, the setpoints are marked by arrows above the bar graphs.

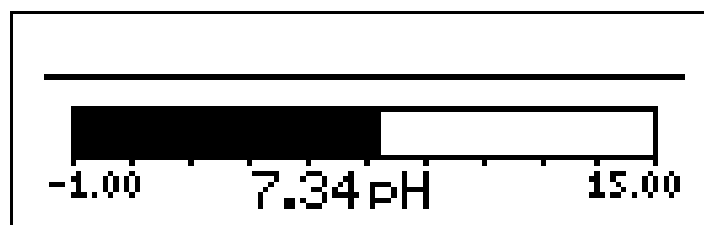

### Scaling of the bar


- \* Activate the measurement display type BAR GRAPH.
- \* Select  $\blacktriangledown$  BARGR. SCALE START.
- \* Confirm selection with  $\text{PGM}$ .
- \* Use the  $\blacktriangledown$  or  $\blacktriangle$  key to enter the lower limit for the range to be displayed.
- \* Confirm selection with  $\text{PGM}$ .
- \* Select  $\blacktriangledown$  BARGR. SCALE END
- \* Use the  $\blacktriangledown$  or  $\blacktriangle$  key to enter the upper limit for the range to be displayed.

# 11 Appendix

---


\* Confirm selection with .



In order to return to the measurement mode:  
Press the  key several times, or wait for the timeout.

---

## LOWER DISPLAY

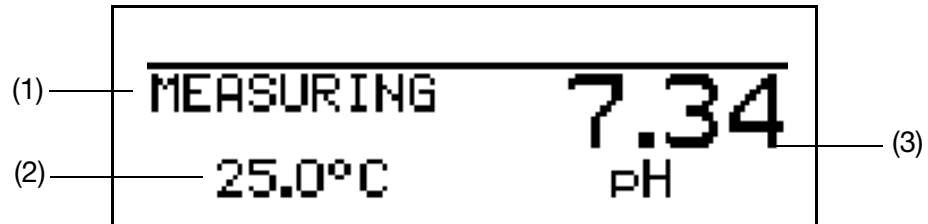

- (1) Operating mode
- (2) Lower display
- (3) Upper display

This parameter is only available for the measurement display types NORMAL and TREND.

### TEMPERATURE

OUTP. LEVEL 1  
OUTP. LEVEL 2  
SETPOINT 1  
SETPOINT 2  
NONE  
COMPENSATED  
UNCOMPENSATED

---

## UPPER DISPLAY

This parameter is only available for the measurement display types NORMAL and TREND.

### COMPENSATED

UNCOMPENSATED  
TEMPERATURE  
OUTP. LEVEL 1  
OUTP. LEVEL 2  
SETPOINT 1  
SETPOINT 2  
NONE

---

## 11.3 Glossary

### Calibration timer

The calibration timer indicates (if required) when the next routine calibration is due. The calibration timer is activated by entering a number of days, after which recalibration has to be carried out (plant or operator requirement).

### MIN/MAX value memory

This memory acquires the minimum or maximum input variables that have occurred. This information serves, for example, to decide whether the sensor that is connected is suited to the values that are actually present. .


The MIN/MAX value memory can be reset: Operator level / Display / MIN/MAX value memory / Yes, see "Operator level parameters", page 84ff.

### Asymmetrical connection of pH electrodes

pH electrodes are usually connected to the transmitter asymmetrically. The connection corresponds precisely to the arrangement of a pH electrode with regard to the impedance.

In the case of the asymmetrical connection, the glass electrode has a high-resistance connection to the transmitter electronics and the reference electrode a low-resistance one. Most transmitters are designed for this type of connection.

For both asymmetrical and symmetrical connections, the input impedance of the transmitter must be about 100 times higher than the impedance of the glass electrode that is connected. The impedance of a glass electrode can be up to 1000 MOhm.

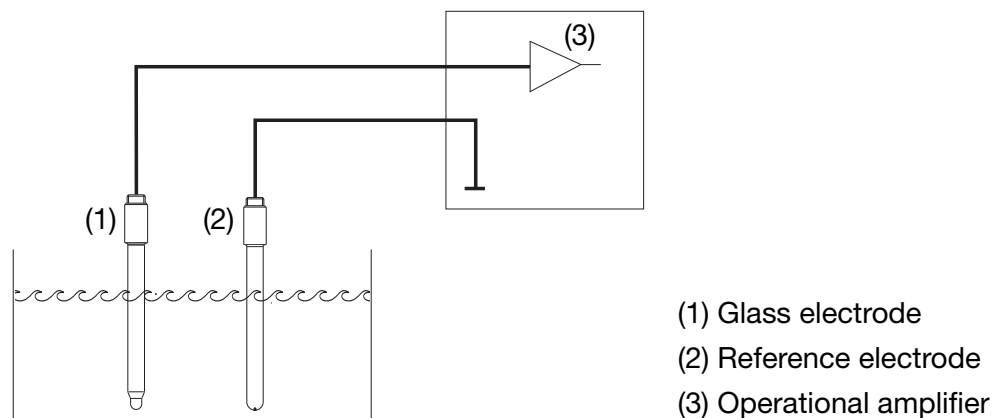


### Symmetrical connection of pH electrodes

The symmetrical high-resistance input is an alternative method of connecting pH electrodes to a transmitter. In this case, both glass and reference electrode have a high-resistance connection to the transmitter. This connection type makes it imperative to make an additional connection of the liquid potential to

# 11 Appendix

---

the transmitter.

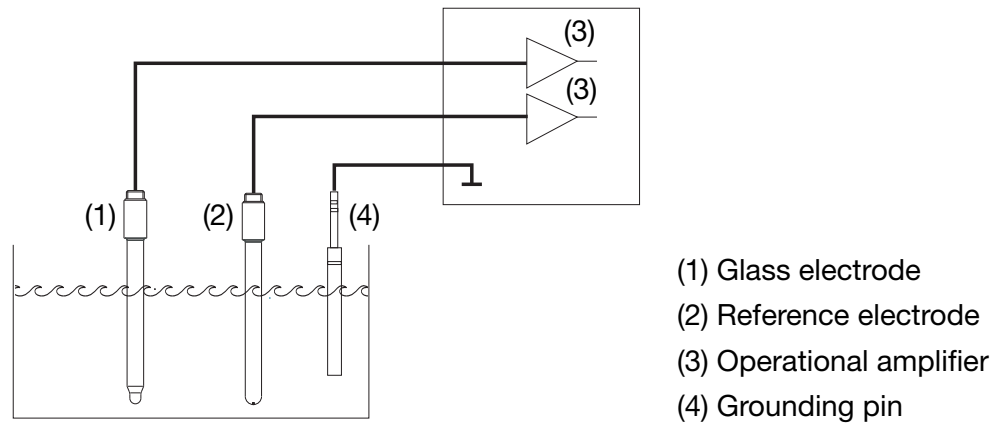

With the symmetrical connection, even difficult electrical ambient conditions can be compensated.

If, for example, an electric motor for a mixer conducts a fault current into the substance being measured, this will result in a potential shift with regard to the system ground.

With the usual asymmetrical connection, a fault current may flow to the system ground via the stray capacitance (which occurs in all devices), thus causing a measurement error.

In case of the symmetrical connection, both inputs are fed to the device electronics via operational amplifiers. These operational amplifiers cancel the fault current (up to a certain degree), thereby preventing measurement errors.

---

## Impedance monitoring

Impedance monitoring of glass pH combination electrodes make high demands on the transmitter electronics. The measurement needed for this is performed in parallel to the acquisition of the main measurement variable. To minimize the load on the electrode, the reaction time may be up to a minute.

With the asymmetrical connection of the glass and reference electrode, the cumulative impedance can be monitored.

Monitoring the reference electrode is not recommended, since the measured value is difficult to interpret.

Impedance measurement depends on the cable material, cable length and the components that are used. Special JUMO cables for pH measurement may be up to 10 m long.

If ISFET sensors or impedance converters are used, then impedance monitoring is not possible.




If impedance monitoring responds, the controller switches to the "HOLD" state and the measured value is set to "invalid". The analog outputs and limit switches respond according to their configuration in case of error.

This note applies as of software version 212.09.01.

---




## Pulse width controller (output is active for $X > W$ and a P control structure)

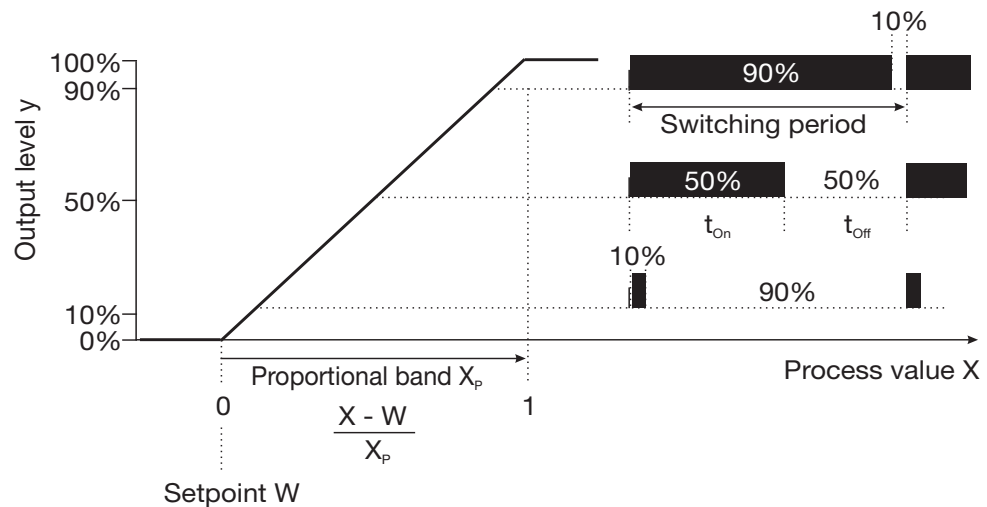

If the process value  $X$  exceeds the setpoint  $W$ , the P controller will control proportionally to the control deviation. On going outside the proportional band, the controller operates with an output level of 100% (100% duty cycle).

## Pulse frequency controller (output is active for $X > W$ and a P control structure)

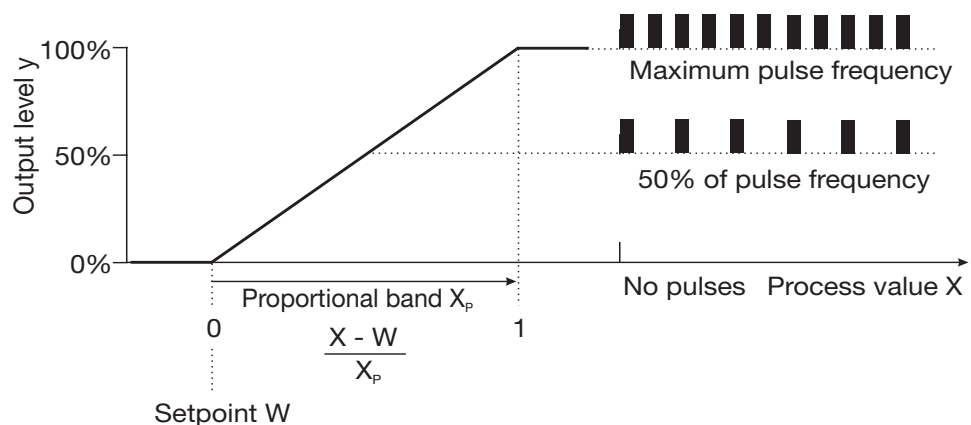

If the process value  $X$  exceeds the setpoint  $W$ , the P controller will control proportionally to the control deviation. On going outside the proportional band, the controller operates with an output level of 100% (max. switching frequency).

## Special controller functions

The following functions can be activated in this menu:

- Manual mode (activate controller outputs manually), see section 6.6 "MANUAL mode / simulation mode", page 33
- Separate controllers (see below)
- I-component switch-off (see below)

## Separate controllers

# 11 Appendix

---

This function is normally deactivated (factory setting or "No" selection).

In the deactivated state, the software prevents the two controller outputs from being able to work "against each other". So, for example, it is not possible to dose acid and lye at the same time.

If the controllers are separate ("Yes" selection), each controller can be freely configured.

---

## **I-component switch-off**

This function is normally deactivated (factory setting or "No" selection).

In the deactivated state, the controller works in accordance with general controller theory.

When I-component switch-off is activated ("Yes" selection), the part of the output level that can be traced back to the I-component is set to zero when the setpoint is reached.

This can be useful with mutual neutralization (acid and lye dosing both possible) in one treatment tank.

---

## **Wash timer**

The wash timer can be used to implement automated sensor cleaning. This function is assigned to a switching output (1 or 2) for that purpose.

The cycle duration (cleaning interval) can be adjusted in the range from 1 to 240 hours. The wash duration (cleaning duration) is adjustable from 1 to 1800 seconds. During the wash duration the controller goes into the HOLD state, which is maintained for 10 seconds after completion of the wash duration. A sensor calibration within the cycle duration restarts the wash timer.

The wash timer is deactivated with the "0" cycle duration.

---

## 12.1 Technical data

### 12.1.1 Inputs

Main input	Measurement/control range	Accuracy	Temperature error
pH	-1 to +15 pH	≤ 0.3 %	0.2 %/10 °C
ORP	-1500 to 1500 mV	≤ 0.3 %	0.2 %/10 °C
NH <sub>3</sub> (ammonia)	0 to 9999 ppm	≤ 0.3 %	0.2 %/10 °C
Secondary input			
Temperature Pt100/1000 (automatic detection)	-50 to +250°C <sup>1</sup>	≤ 0.5 °C	0.05 %/10 °C
Temperature NTC/PTC	4 kΩ max. Input via table with 20 value pairs	≤ 0.3 % (depending on the grid points)	0.05 %/10 °C

### 12.1.2 Temperature compensation

Measured variable	Compensation	Range <sup>2</sup>
pH	yes	-30 to +150 °C (as of software version 212.11.02) -10 to +150 °C (up to software version 212.11.01)
ORP	no	not applicable
NH <sub>3</sub> (ammonia)	yes	-20 to +50 °C
pH antimony	yes	-10 to +80 °C

### 12.1.3 Measuring circuit monitoring

Inputs	Over/underrange	Short-circuit	Cable break
pH	yes	yes <sup>3</sup>	yes <sup>3</sup>
ORP	yes	no	no
NH <sub>3</sub> (ammonia)	yes	no	no
Temperature	yes	yes	yes

### 12.1.4 Impedance measurement

Impedance measurement can optionally be activated.

Since it depends on some marginal parameters, the following points must be noted:

- Only glass-based sensors are permissible (no ISFET or antimony electrodes).
- The sensors must be directly connected to the transmitter.  
It is not permissible to use an impedance converter in the measuring circuit !
- The maximum permissible cable length between sensor and transmitter is 10 m.
- Liquid impedances will directly influence the measurement result.  
We therefore recommend activating the measurement in liquids from about 100 µS/cm conductivity upwards.

### 12.1.5 Binary input

<b>Activation</b>	through floating contact
<b>Function</b>	Key inhibit HOLD Alarm suppression

<sup>1</sup> Switchable to °F

<sup>2</sup> Please note operating temperature range of sensor !

<sup>3</sup> In the case of pH measurement, the sensor can be monitored for short-circuit and cable break by activating the impedance measurement.

# 12 device description

## 12.1.6 Controller

<b>Controller type</b>	limit comparators, limit controller, pulse width controller, pulse frequency controller, modulating controller, continuous controller
<b>Controller action</b>	P / PI / PD / PID
<b>A/D converter</b>	dynamic resolution up to 14-bit
<b>Sampling time</b>	500 msec

## 12.1.7 Analog outputs (one or two)

Output mode	Signal range	Accuracy	Temperature error	Permissible load resistance
Current signal	0/4 to 20 mA	≤ 0.25 %	0.08 %/10 °C	≤ 500 Ω
Voltage signal	0 to 10 V	≤ 0.25 %	0.08 %/10 °C	≥ 500 Ω

The analog outputs respond in accordance with the recommendation as per NAMUR NE43. They are electrically isolated, AC 30 V / DC 50 V.

## 12.1.8 Switching outputs (two changeover (SPDT) max.)

<b>Rated load</b>	AC 3 A/250 V (resistive load)
<b>Contact life</b>	>2 × 10 <sup>5</sup> operations at rated load

## 12.1.9 Supply voltage for ISFET

DC ±5 V; 5 mA

## 12.1.10 Setup interface

Interface for configuring the device through the optionally available setup program (for device configuration only).

## 12.1.11 Electrical data

<b>Supply voltage</b>	AC 110 to 240 V; -15/+10 %; 48 to 63 Hz AC/DC 20 to 30 V; 48 to 63 Hz DC 12 to 24 V +/-15 % (permissible for connection to SELV/PELV circuits only)
<b>Power consumption</b>	approx. 14 VA
<b>Electrical safety</b>	EN 61 010, Part 1 overvoltage category III <sup>1</sup> , pollution degree 2
<b>Data backup</b>	EEPROM
<b>Electrical connection</b>	pluggable screw terminals conductor cross-section up to 2.5 mm <sup>2</sup> (supply, relay outputs, sensor inputs) conductor cross-section up to 1.5 mm <sup>2</sup> (analog outputs; ISFET supply)

## 12.1.12 Housing

<b>Material</b>	ABS
<b>Cable entry</b>	cable glands, 3 × M16 and 2 × M12 max.
<b>Special feature</b>	venting device to prevent condensation
<b>Ambient temperature range</b> (the specified accuracy is adhered to within this range)	-10 to +50 °C
<b>Operating temperature range</b> (device is operational)	-15 to +65 °C
<b>Storage temperature range</b>	-30 to +70 °C
<b>Climatic conditions</b>	rel. humidity ≤ 90 % annual mean, no condensation (following EN 60721 3-3 3K3)
<b>Enclosure protection</b> as per EN 60529	in surface-mountable housing: IP67 for panel mounting: IP65 front, IP20 rear
<b>Vibration strength</b>	as per EN 60068-2-6
<b>Weight</b>	surface-mountable housing: approx. 900 g

<sup>1</sup> Not valid with protective extra-low voltage (PELV) of power supply variant DC 12 to 24 V.

## 12 device description

---

<b>Dimensions</b>	see dimensioned drawings on page 8.
-------------------	-------------------------------------

### 12.1.13 Standard accessories

Cable glands  
Internal mounting material  
Operating Instructions


### 12.1.14 Approvals/marks of conformity

<b>Mark of conformity</b>	<b>Testing laboratory</b>	<b>Certificates/certification numbers</b>	<b>Test basis</b>	<b>valid for</b>
c UL us	Underwriters Laboratories	E 201387	UL 61010-1	all types

## 12 device description

---

### 12.2 Panel cut-out

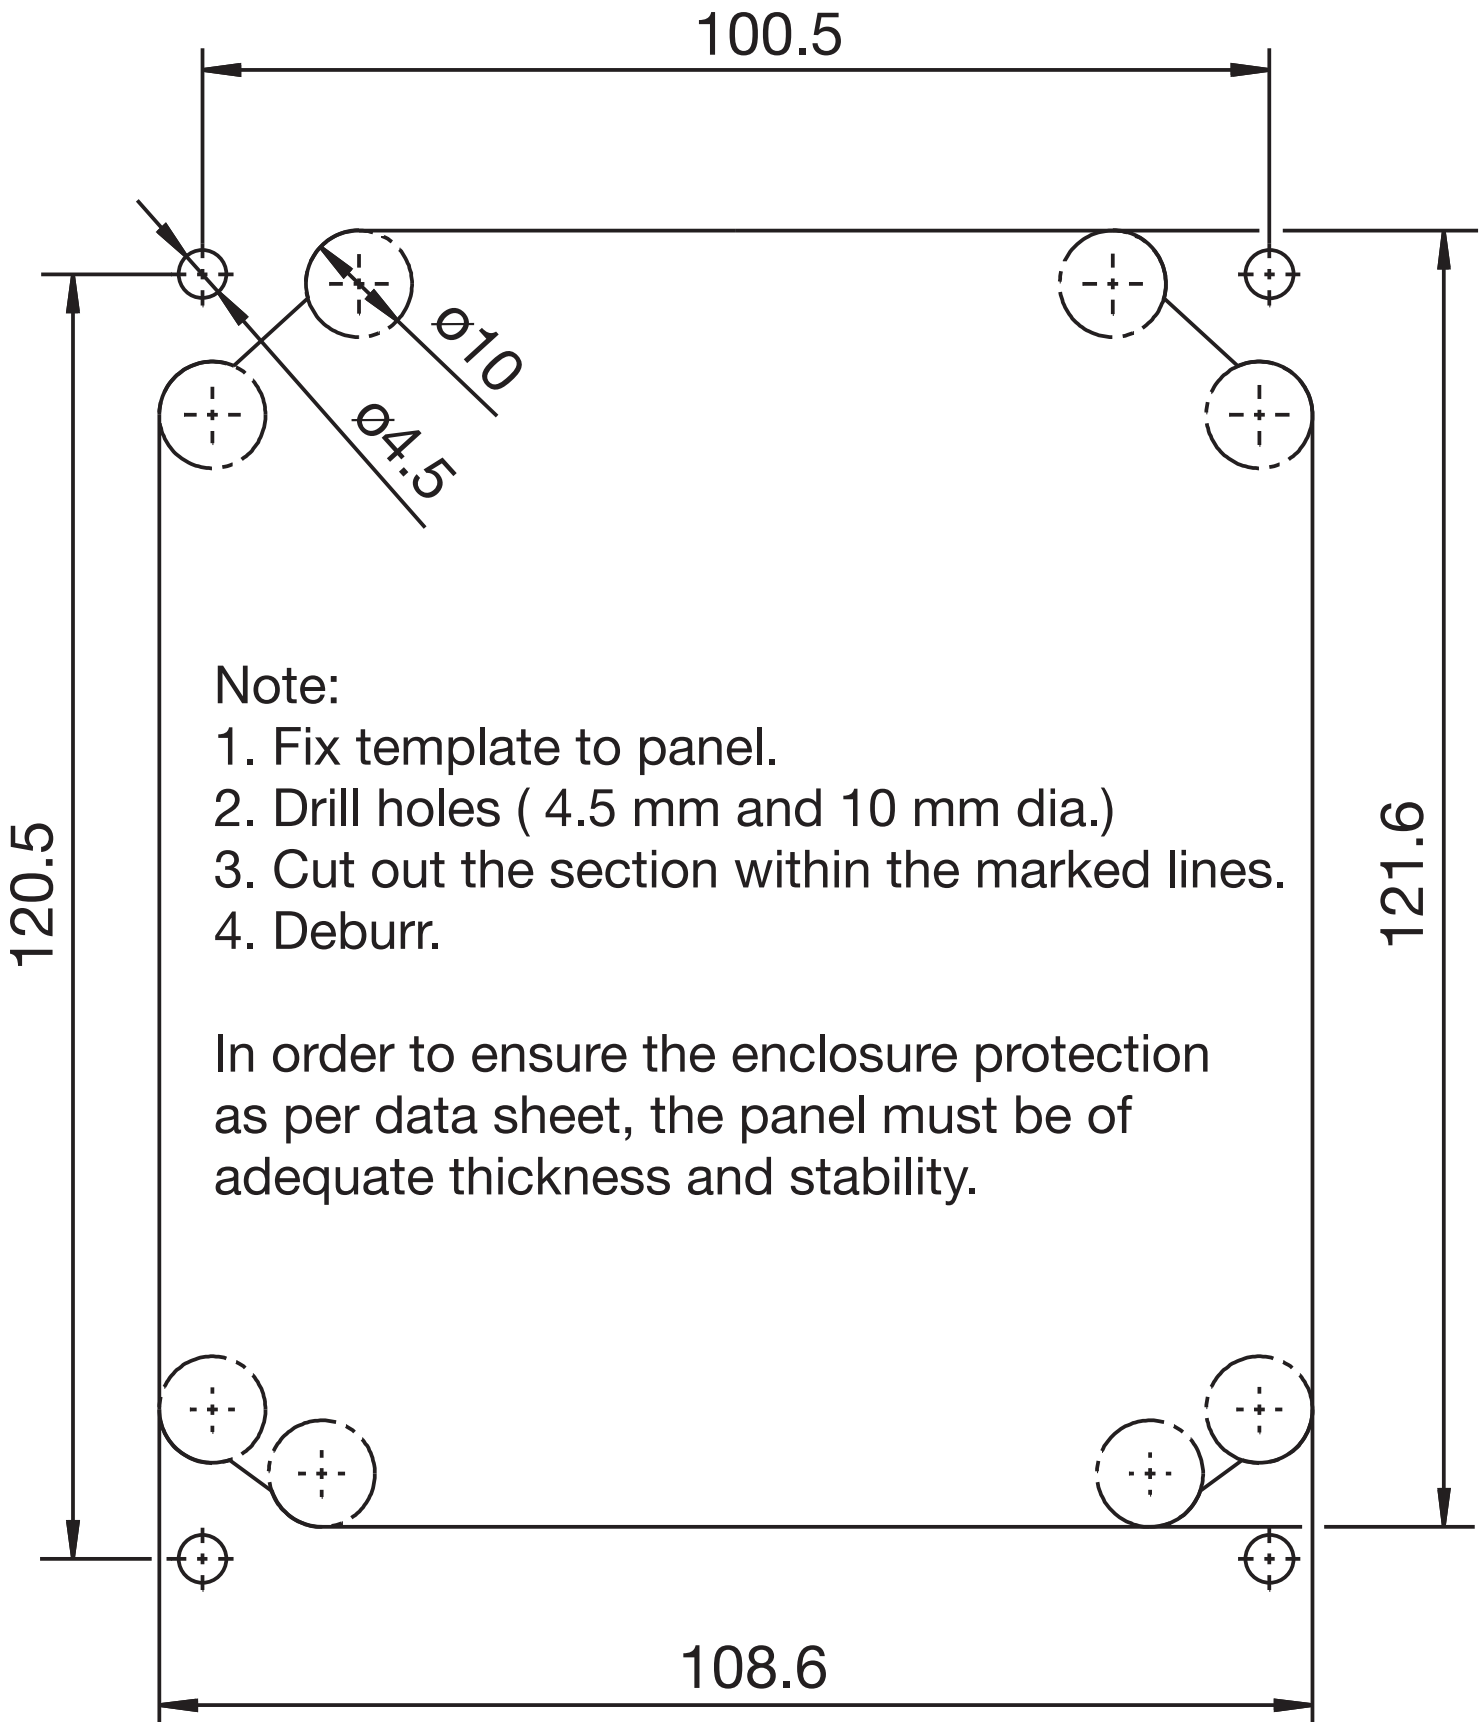

## 12 device description

---



	 More than <span style="color: orange;">sensors</span> + <span style="color: green;">automation</span>					
产品组别 Product group: 202560	<b>产品中有害物质的名称及含量</b> <b>China EEP Hazardous Substances Information</b>					
部件名称 Component Name						
	铅 ( Pb )	汞 ( Hg )	镉 ( Cd )	六价铬 ( Cr(VI) )	多溴联苯 ( PBB )	多溴二苯醚 ( PBDE )
外壳 Housing (Gehäuse)	X	○	○	○	○	○
过程连接 Process connection (Prozessanschluss)	○	○	○	○	○	○
螺母 Nuts (Mutter)	X	○	○	○	○	○
螺栓 Screw (Schraube)	X	○	○	○	○	○
<p>本表格依据SJ/T 11364的规定编制。                  This table is prepared in accordance with the provisions SJ/T 11364.                  ○ : 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。                  Indicate the hazardous substances in all homogeneous materials' for the part is below the limit of the GB/T 26572.</p> <p>× : 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。                  Indicate the hazardous substances in at least one homogeneous materials' of the part is exceeded the limit of the GB/T 26572.</p>						

# 14 Index

---

## 0 - 9

- 1-point calibration 42
- 1-point calibration, ammonia 80
- 1-point calibration, pH 67, 76, 78
- 2-point calibration 42
- 2-point calibration, pH 69
- 3-point calibration 42
- 3-point calibration, pH 72

## A

- Accessories 9–10
- Acidity errors 42
- Administrator level 37
- Administrator rights 39
- Alkaline errors 42
- Asymmetrical connection 19–20, 22, 95–96

## B

- Basic settings 41
- Block diagram 6

## C

- Cable routing 18
- Cell zero point 42
- Conductor cross-sections 15

## D

- Date of manufacture 7
- Device info 43

## E

- Electrical connection 15
- Electrical isolation 16, 82
- Enable level 39

## F

- Fast start 45
- Fixing brackets 11

## H

- HOLD mode 36

## I

- Inputs 22
- Installation position 11
- ISFET sensor 24, 96, 100

## L

- Logbook 43

## M

- MANUAL mode 32
- MANUAL mode for analog outputs 35
- MANUAL mode for switching outputs 32
- Measurement mode 26, 30
- MIN/MAX values 30
- Mounting location 11

## N

- Nameplate 7
- Normal display 26, 30

## O

- Operator level 37
- Output level display 31
- Outputs 23
- Overview of MANUAL mode 33

## P

- Panel mounting 13
- Parameter level 39
- Password 37
- Pipe 12
- Pipe installation 12
- Principle of operation 27

## S

- Scope of delivery 8
- Sensor connection 19–21
- Setup examples 46
- Setup interface 82
- Simulation mode 32
- Simulation of switching outputs 34
- Slope 42
- slope 86
- Sunlight 11
- Supply 22, 24
- Surface 11
- Surface mounting 11
- switching function 91
- Symmetrical connection 21–22

## T

- Terminal assignments 22
- Type designation 8

## W

- Wash timer 98
- Weather protection roof 12

### **Z**

zero point 86



**JUMO GmbH & Co. KG**

Street address:  
Moritz-Juchheim-Straße 1  
36039 Fulda, Germany  
Delivery address:  
Mackenrodtstraße 14  
36039 Fulda, Germany  
Postal address:  
36035 Fulda, Germany  
Phone: +49 661 6003-0  
Fax: +49 661 6003-607  
Email: mail@jumo.net  
Internet: www.jumo.net

**JUMO Instrument Co. Ltd.**

JUMO House  
Temple Bank, Riverway  
Harlow, Essex, CM20 2DY, UK  
Phone: +44 1279 63 55 33  
Fax: +44 1279 62 50 29  
Email: sales@jumo.co.uk  
Internet: www.jumo.co.uk

**JUMO Process Control, Inc.**

6733 Myers Road  
East Syracuse, NY 13057, USA  
Phone: +1 315 437 5866  
Fax: +1 315 437 5860  
Email: info.us@jumo.net  
Internet: www.jumousa.com

